



Sony Alpha NEX-C3 LCD Screen Replacement

How to replace the LCD screen of the Sony Alpha NEX-C3.

Written By: Jonathan Chen



INTRODUCTION

The LCD screen is a helpful display when taking photos. A cracked or damaged screen needs replacement.



TOOLS:

- [Tweezers](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — LCD Screen



- Turn off the camera by sliding the power switch.

Step 2





- Tilt up the LCD screen.

Step 3




- Use a Phillips head 000 screwdriver to remove the two 2.0mm screws on the bottom of the LCD screen.

Step 4

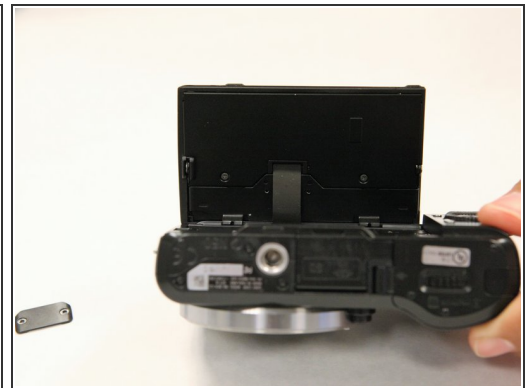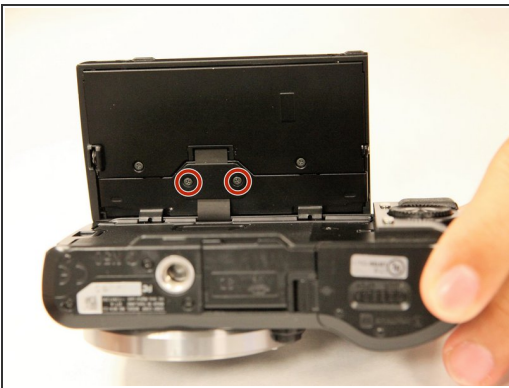



- Use a Phillips head 000 screwdriver to remove the two 1.0mm screws on the smaller backplate of the LCD screen that covers the ribbon cable.
- The smaller backplate should easily come off. Put it to the side.

Step 5

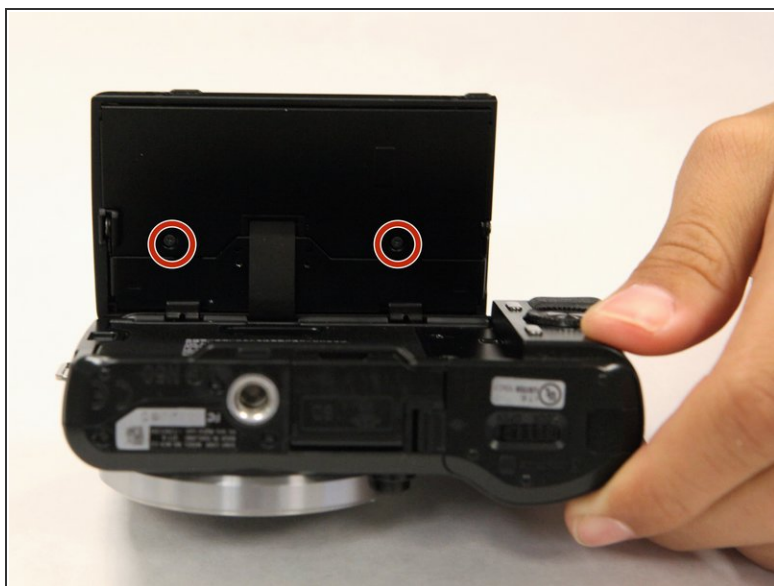


- Use a Phillips head 000 screwdriver to remove the two 1.0mm screws on the bigger backplate of the LCD.

Step 6

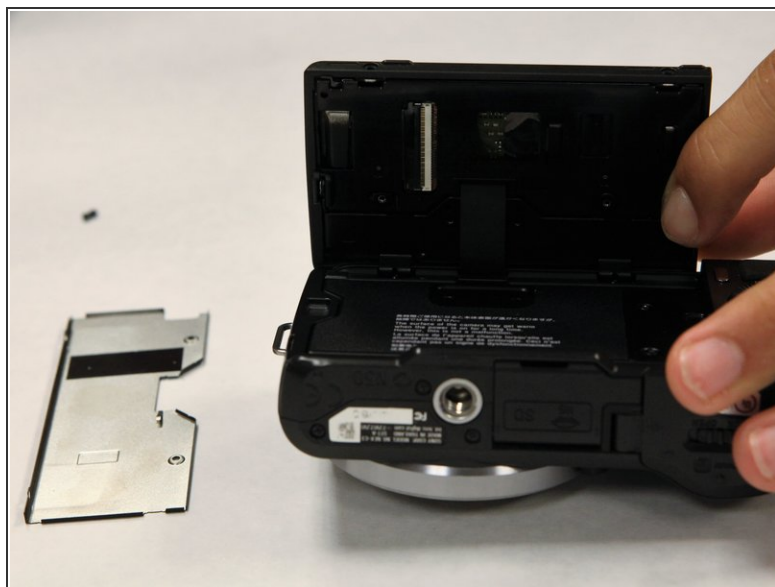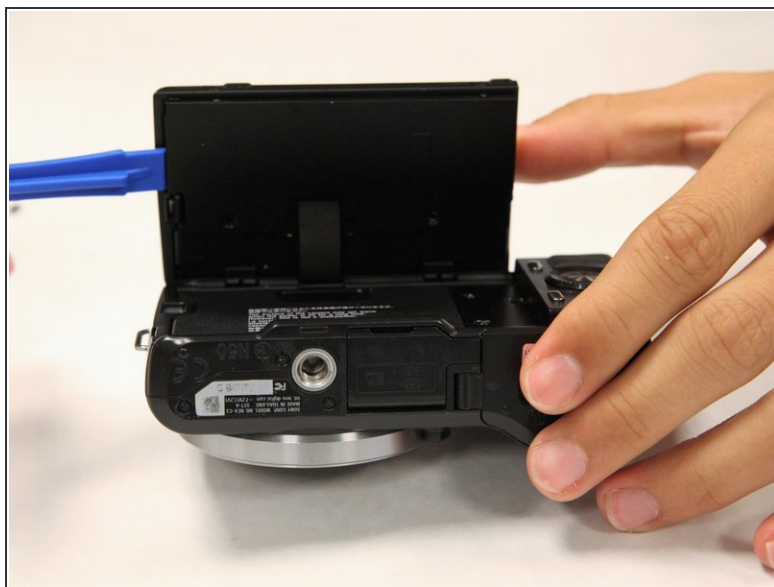



- Using the plastic opening tool, remove the larger backplate from the LCD screen.

Step 7

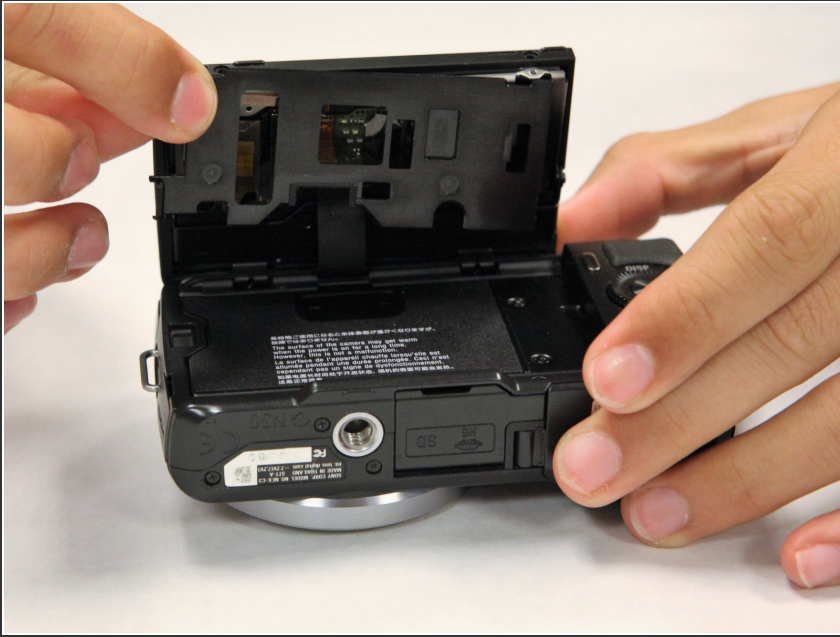


- With your hands, gently remove the black plastic piece on the backside of the LCD screen.

Step 8

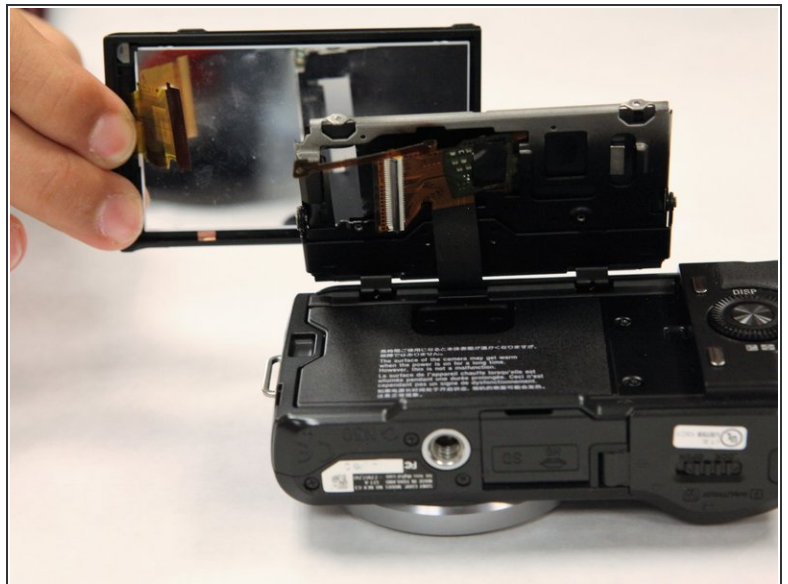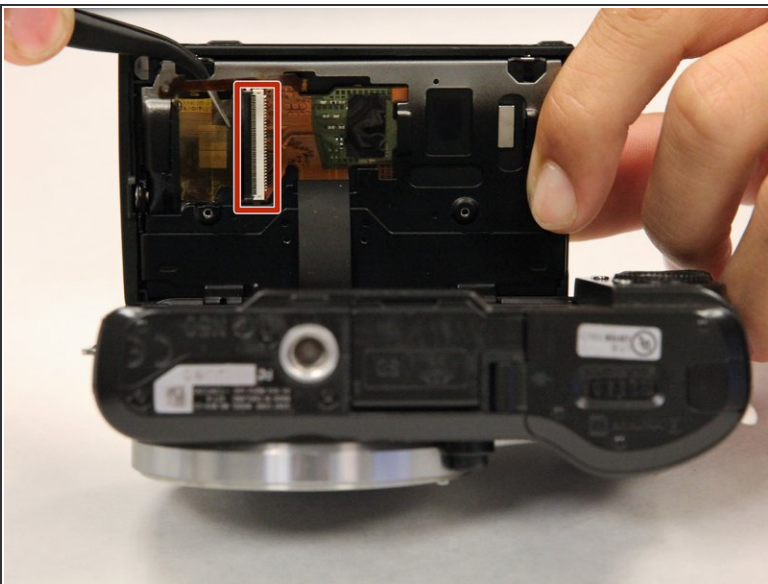

- Using tweezers, gently pull up and away on the ribbon cable connected to the motherboard, after which, the LCD screen should come off.

 The motherboard ribbon cable has a specific connector.

To reassemble your device, follow these instructions in reverse order. However, when installing the ribbon cable, the connector has a specific step. The connector has a tiny flap that clamps down onto the ribbon cable in order to make it secure.