



# PowerBook G4 Aluminum 17" 1.67 GHz (High-Res) Battery Replacement

Written By: Walter Galan



---

## INTRODUCTION

Replace a worn out battery for longer intervals between recharging.

---



### PARTS:

- [G4 Aluminum 17" Battery](#) (1)
-

## Step 1 — Battery



- Use your thumbs to push the two battery retaining tabs away from the battery.
- The battery should pop up enough to rotate it toward yourself and lift it out of the lower case.

To reassemble your device, follow these instructions in reverse order.