


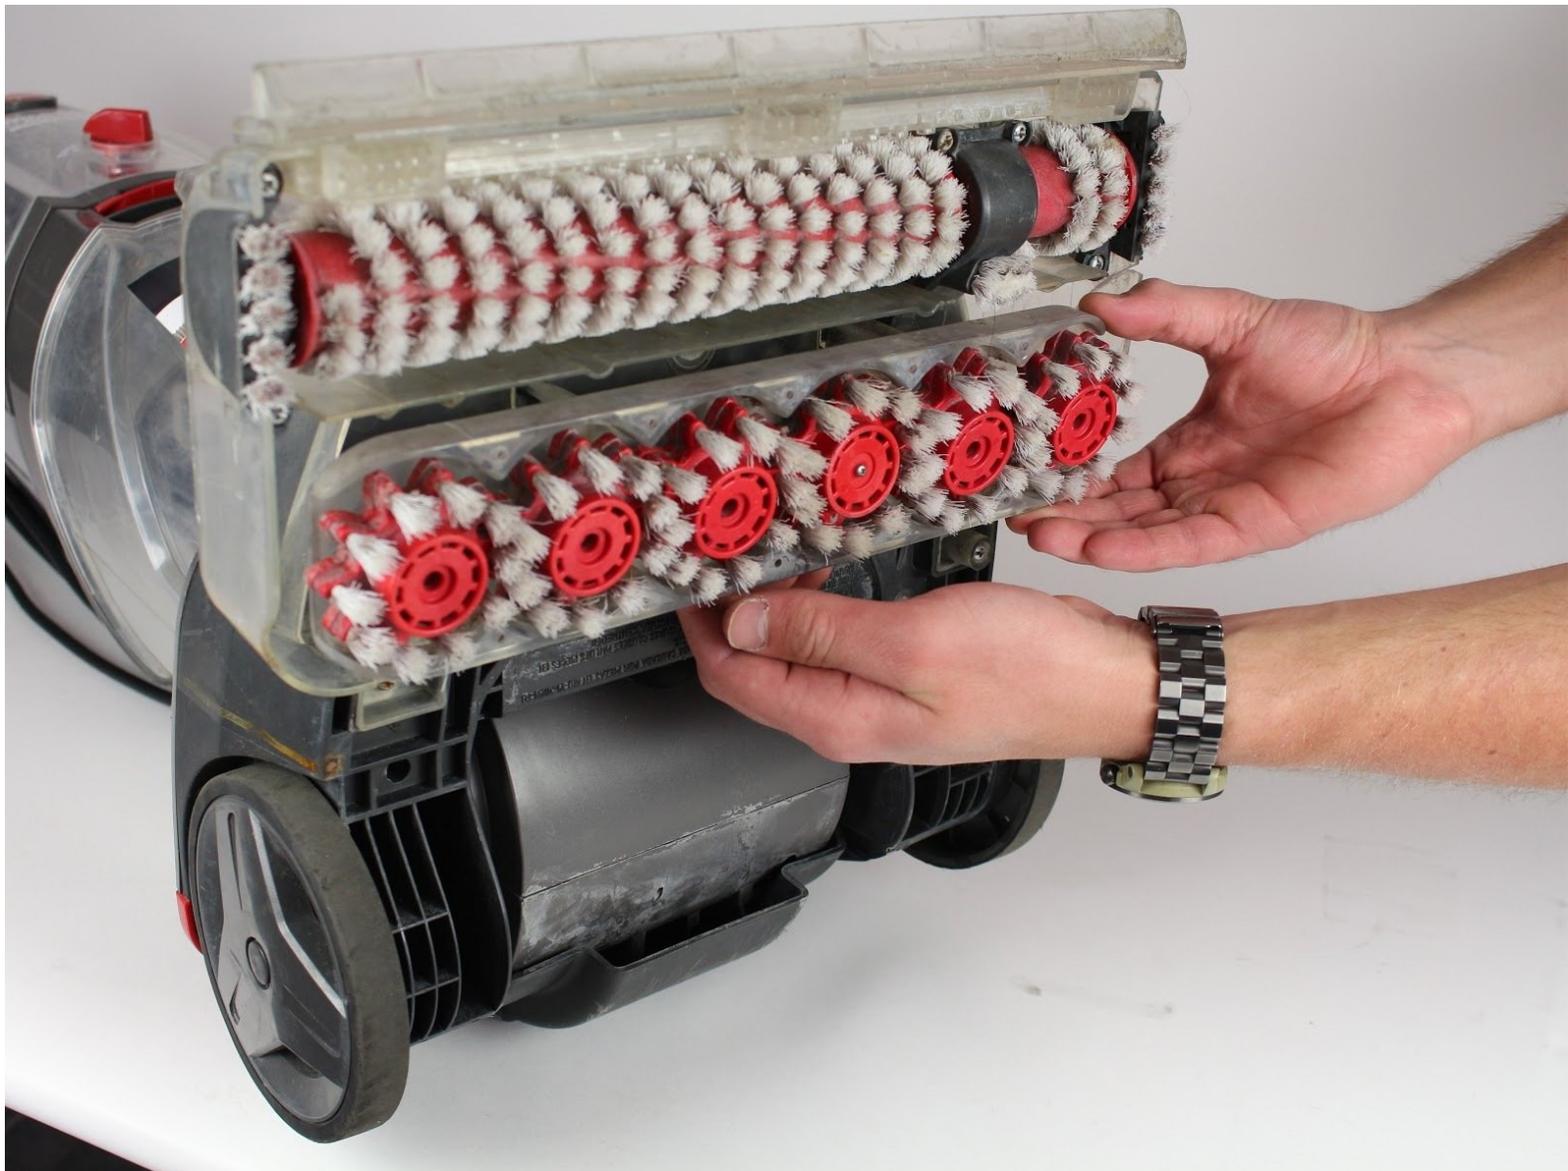

Hoover Power Path Pro Advanced Brush Roller Replacement

This guide will show how to replace the brush roller on your Hoover Power Path Pro Advanced.

Written By: Jose Andres Gonzalez Valdes



INTRODUCTION

The brush rolls of the Hoover Power Path Pro Advanced picks up debris from the floor. However, large debris can cause the brush rolls to stop spinning. When this happens, the brush rolls need to be removed for cleaning.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)



Step 1 — Brush Roller



 Unplug the vacuum cleaner from the wall outlet before starting. Make sure the water tanks are empty.


- Lay the cleaner down horizontally with its wheels closest to the floor.

Step 2

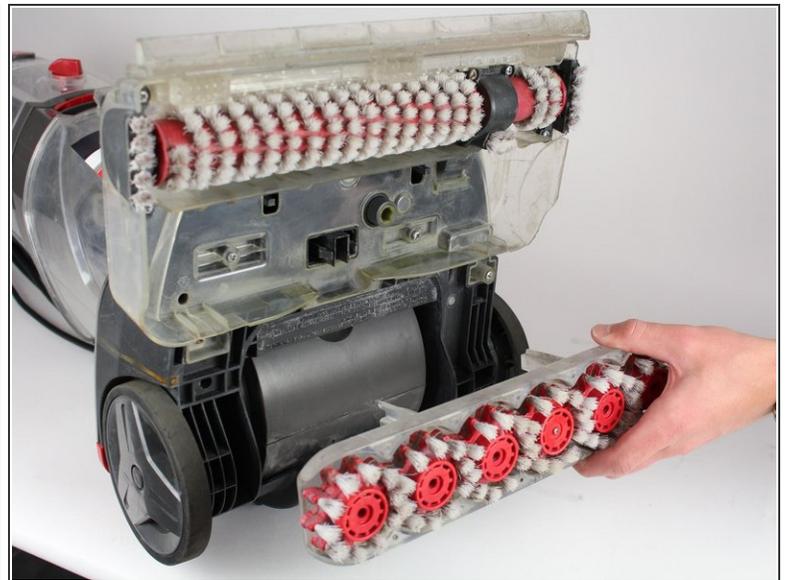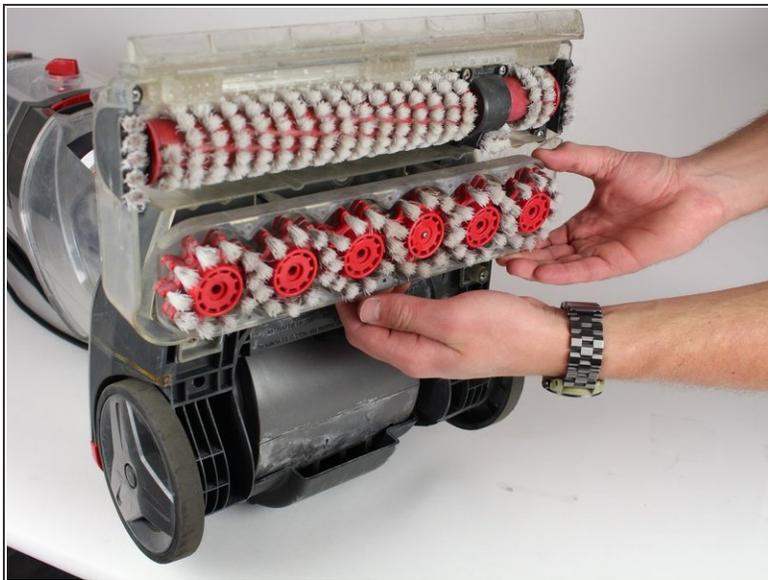

- Hold the lower brush roll with both hands and pull outwards until it is detached.

Step 3

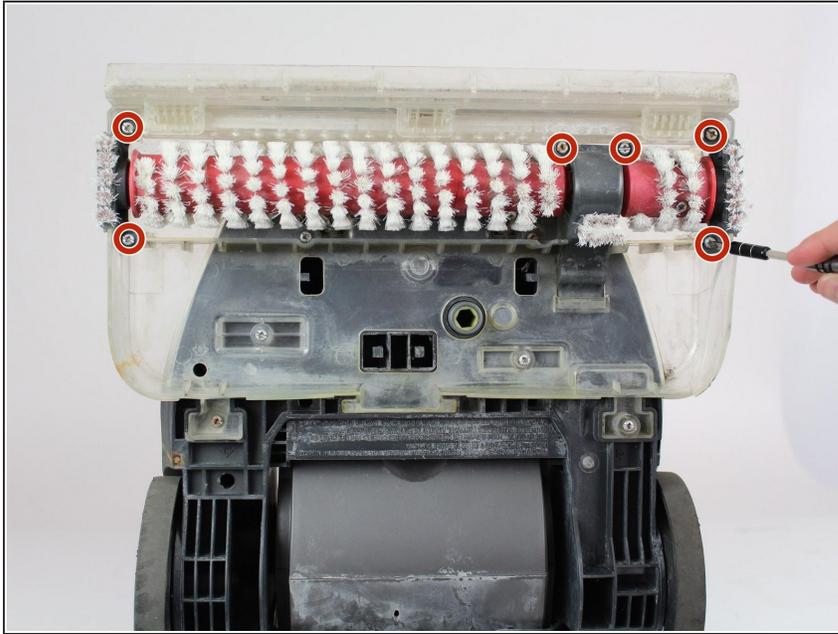

- Unscrew the 6 marked screws using a Phillips #2 head screwdriver.
- Remove the brush roller.

To reassemble your device, follow these instructions in reverse order.