



# Sonos One Protective Cover Replacement

This guide will demonstrate how to detach and replace the protective metal housing for the Sonos One.

Written By: Marcus Glowa



## INTRODUCTION

This guide is for the replacement of the metal housing for the Sonos One.

Important: Accessing the internals of the Sonos One will void the factory warranty and make the unit rejected for factory repair, even if warranty is expired.



### TOOLS:

- [iFixit Opening Tool](#) (1)
- [TR10 Torx Security Screwdriver](#) (1)



### PARTS:

- [None](#) (1)

## Step 1 — Protective Cover



- Disconnect all power cords.
- Remove the rubber foot and plastic screw guard on the bottom of the device using a plastic opening tool.
- Note: the rubber foot and plastic screw guard can be removed as one piece to make reassembly easier

## Step 2



- Remove the four 10mm Torx T10 screws from the bottom of the speaker.

### Step 3



- Remove the bottom cover by squeezing the protective cover slightly while pushing up with your fingers.

### Step 4



- ⓘ The protective cover clip is very thin and deforms easily.
- Remove the single 8mm Torx T10 screw and protective cover clip.

## Step 5



- Slide the protective cover upwards to remove.

To reassemble your device, follow these instructions in reverse order.