



# HP 15-ac121dx Back Panel Replacement

This is a prerequisite guide on how to remove the back of the laptop.

Written By: Ashton Martin



---

## INTRODUCTION

Use this guide to replace the back panel of your device.



### TOOLS:


- [iFixit Opening Tools](#) (1)
-

## Step 1 — Back Panel



- Locate the CD Compartment panel and gently slide it out.

## Step 2

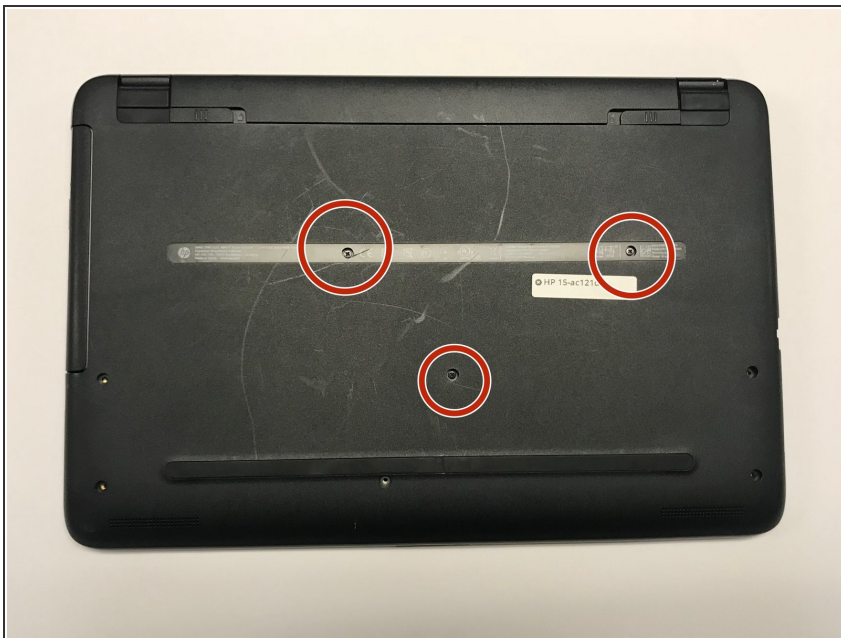

- Remove the back of the laptop by unscrewing the screws shown.
- Also remove the other 5 Phillips screws lining the back cover.

## Step 3



- Using the prying tool, wedge it underneath the back of the laptop and do the same all around until the back comes off.
- Dont forget to unscrew 2 screws under 2 plastic tabs (one on each hinge). The lid will not come off without them being removed!

To reassemble your device, follow these instructions in reverse order.