



# Battery Disconnect

Prerequisite-only guide to disconnect the battery in the Samsung Galaxy S7 Edge.

Written By: Arthur Shi



---

## INTRODUCTION

This is a prerequisite only guide to disconnect the battery in a Samsung Galaxy S7 Edge.

---



### TOOLS:

- [Spudger](#) (1)
-

## Step 1 — Battery Disconnect



- Use the flat end of a spudger to disconnect the battery connector.

To reassemble your device, follow these instructions in reverse order.