



Nostalgia Electrics RHP-310 Power Switch Replacement

If the device will not turn on or has a broken...

Written By: Dana Clarke



INTRODUCTION

If the device will not turn on or has a broken power switch, use this guide to replace the switch.

TOOLS:

[Phillips #2 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)


Step 1 — Power Switch



 **Unplug the popper.**


- Lift the lid up to remove it.

Step 2

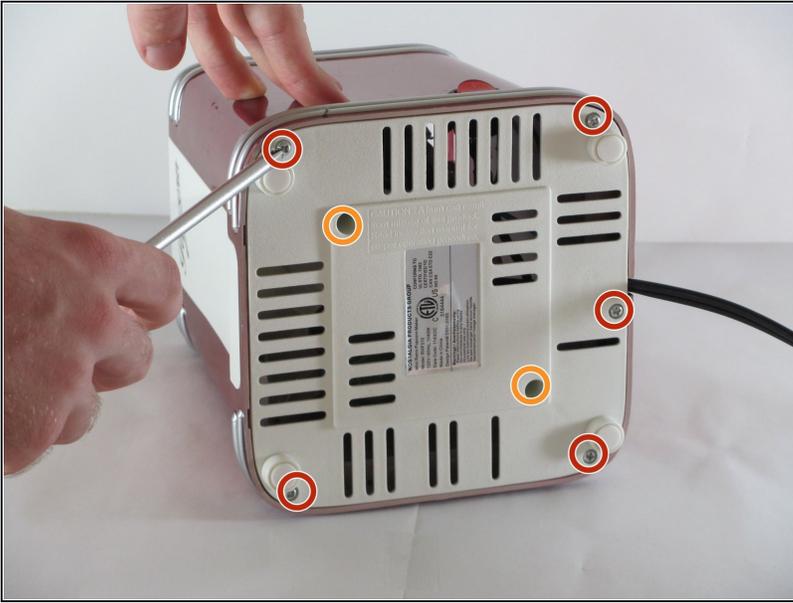

- Lay the popper on its side.
- Remove the five 12mm Philips #2 screws around the perimeter of the base with the Phillips #2 screwdriver.
- Remove the two 15mm Philips #2 screws in the center of the base with the Phillips #2 screwdriver.
- ⓘ Put the removed screws in a safe place, they will be needed later to reattach the housing to the base.

Step 3

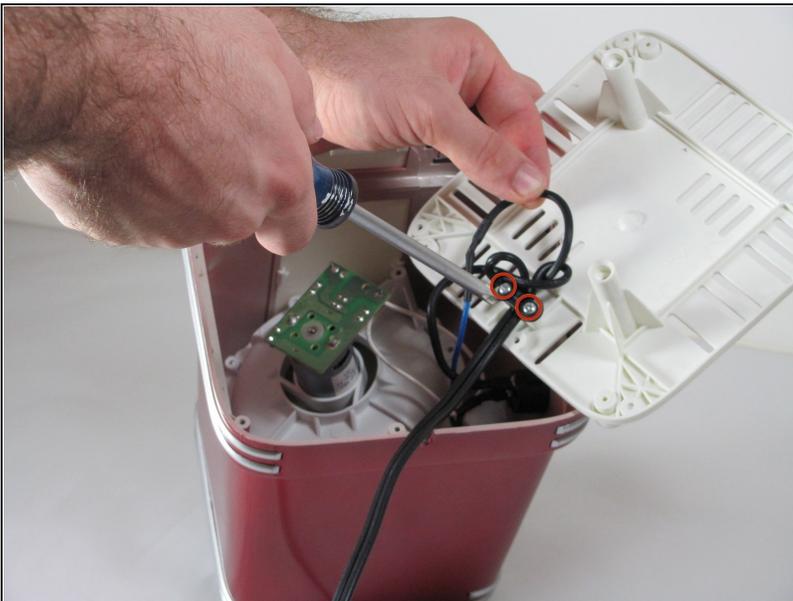

- Flip the base over to view the interior of the base panel.
- Unscrew the two 10 mm Philips #2 screws from the base panel.
- Remove the base and set it aside.

Step 4



- Locate the power switch connected to the side of the housing.
- Pinch the sides of the power switch.
- Push the power button up and out of the housing.

Step 5



- Remove the wires connected to the power switch that should be detached from the housing.
- Gently pry the wires loose from the power switch with the plastic opening tool.
- ⓘ The wires should easily pop out from the power switch.

Step 6



- Remove the power switch from the housing unit.
- You can now replace the power switch, if necessary.

To reassemble your device, follow these instructions in reverse order.