



Nikon Coolpix 4100 Batteries Replacement

Written By: Joshua Sweeney



Step 1 — Batteries



- Flip the camera over so the bottom is facing up.

Step 2



- Push down on the grey button on the battery compartment that says "push"

Step 3



- Remove the batteries.

⚠ When replacing batteries, be sure to install them in the correct polarity.

To reassemble your device, follow these instructions in reverse order.