



Huawei Honor 6x SIM Card Replacement

Use this guide to replace the SIM card on your Huawei Honor 6x.

Written By: Kalynn Harris



INTRODUCTION

A SIM card connects the device to cellular services. Replacing a SIM card is necessary when changing your cellular provider or when your SIM card proves faulty.

TOOLS:

- [SIM Card Eject Tool](#) (1)

A small paper clip works sufficiently

Step 1 — SIM Card



- Turn off the device.

Step 2




- Insert the SIM Card Eject Tool into the SIM card tray hole.
- Press the eject tool into the hole until the tray clicks open.

Step 3



- Remove the SIM tray from the device using two fingers.
- ☑ When reinserting the SIM card, be sure it is properly aligned with the SIM tray.

Step 4

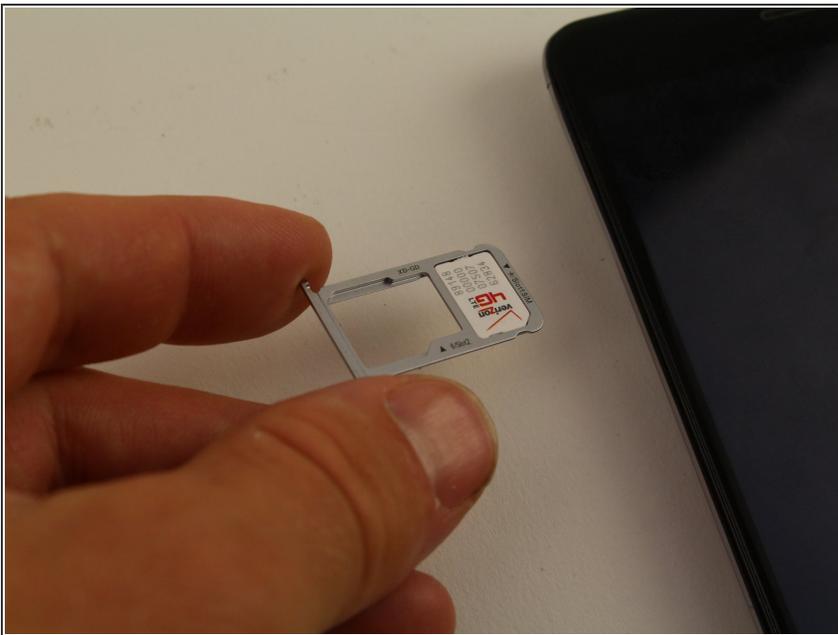

- Remove the SIM card from the compartment using two fingers.

To reassemble your device, follow these instructions in reverse order.