


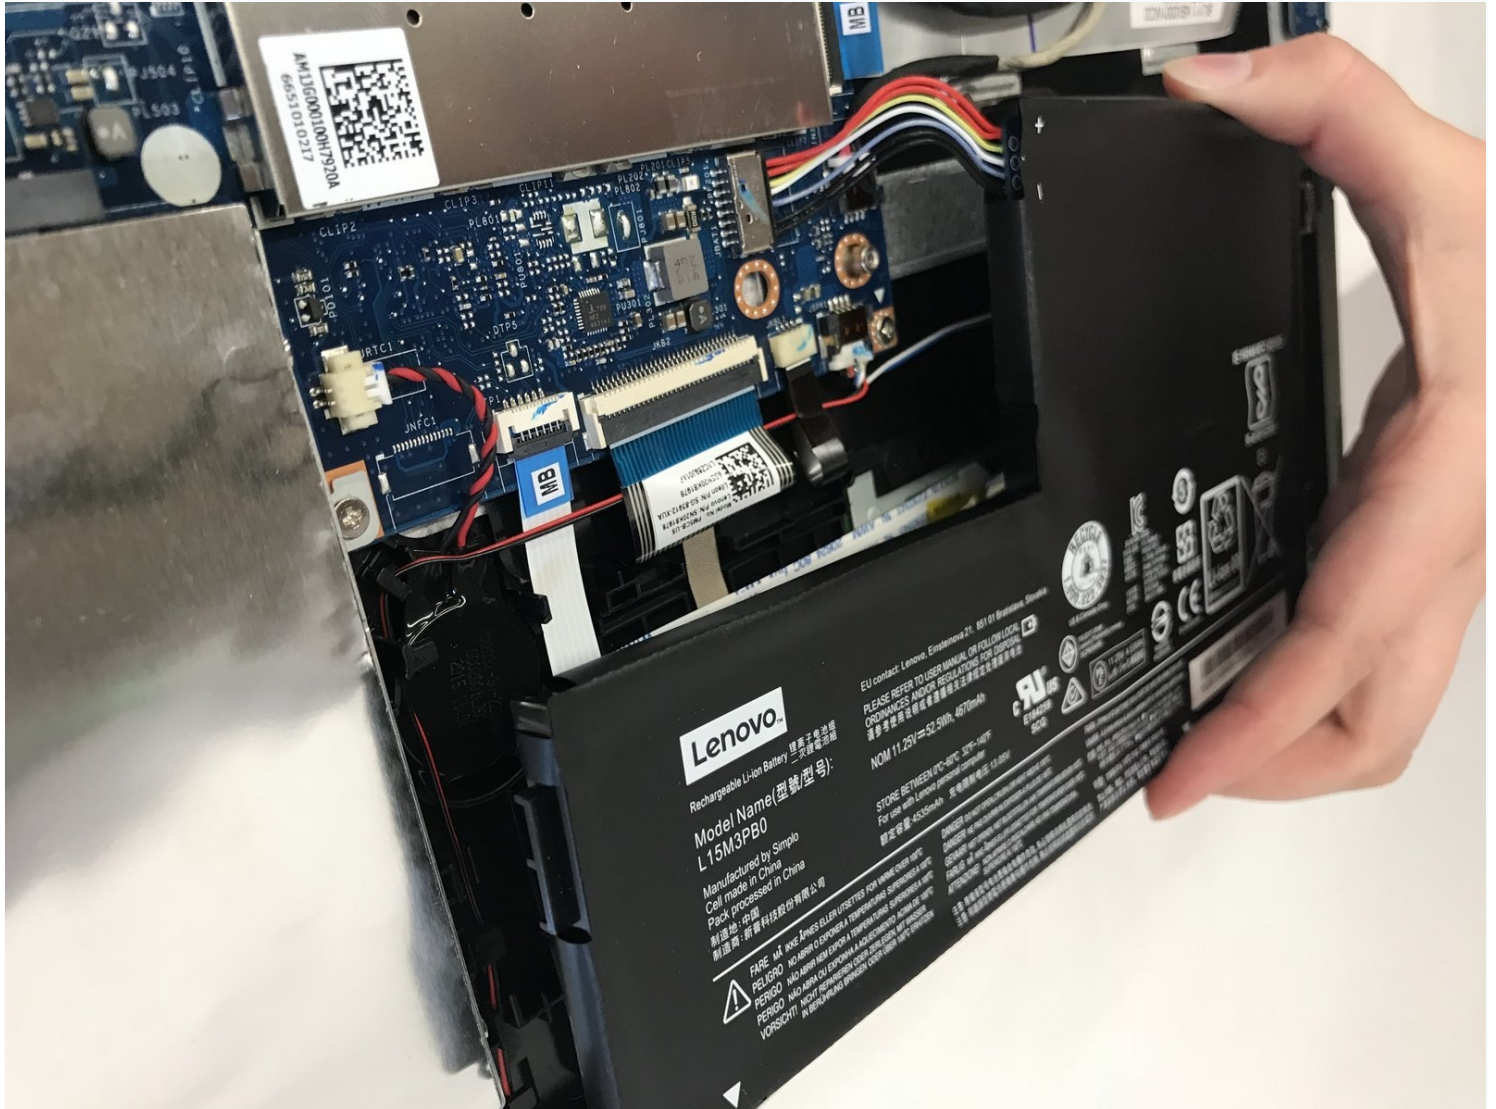

# Lenovo Ideapad Flex 4-1570 Battery Replacement

## If your Lenovo's Ideapad Flex 4 battery cannot...

Written By: Isaiah Vang



# INTRODUCTION

If your Lenovo's Ideapad Flex 4 battery cannot hold a charge, and your laptop dies if not plugged in, use this guide to replace your battery.



## TOOLS:

[T5 Torx Screwdriver](#) (1)  
[Magnetic Project Mat](#) (1)  
[iFixit Opening Tool](#) (1)



## PARTS:


[Lenovo Flex 4-1470 and Flex 4-1570 Battery](#) (1)

## Step 1 — Back Panel



Shut down and unplug your laptop before you begin.

## Step 2

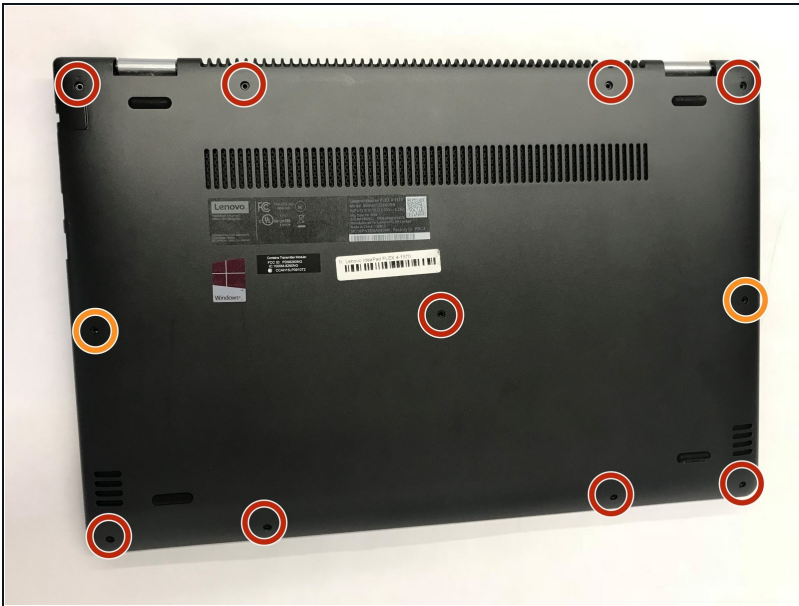

- Remove the nine 6 mm screws using a T5 Torx Screwdriver.
- Remove the two 10 mm screws using a T5 Torx Screwdriver.


## Step 3




- Use a plastic opening tool to carefully pry off the back cover.
- Remove the back cover.




## Step 4 — Battery

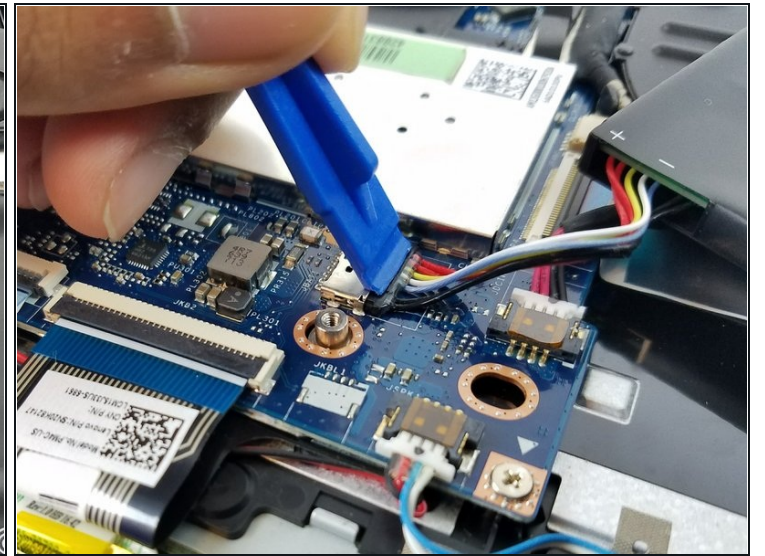


- Disconnect the battery by using a plastic opening tool or your fingers to push the connector towards the battery.
-  Do not pry or pull on the socket itself or you risk damaging the motherboard.

## Step 5

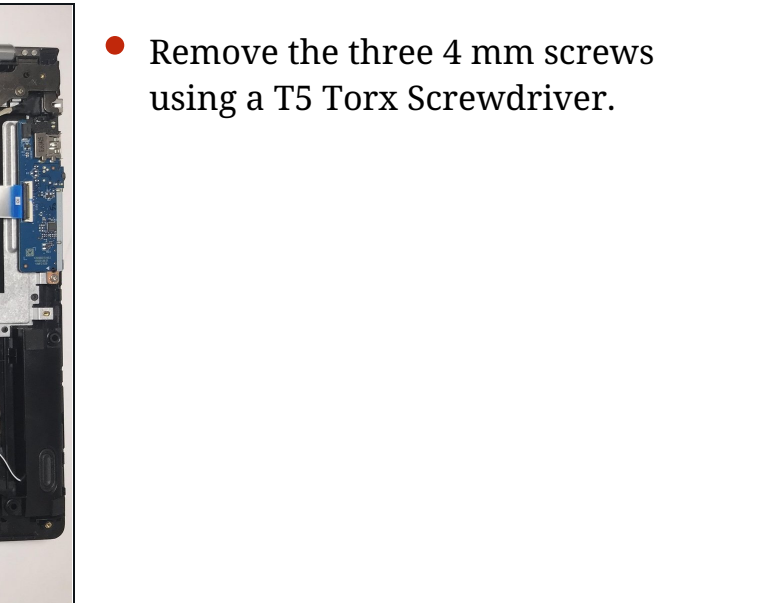

- Remove the three 4 mm screws using a T5 Torx Screwdriver.

## Step 6

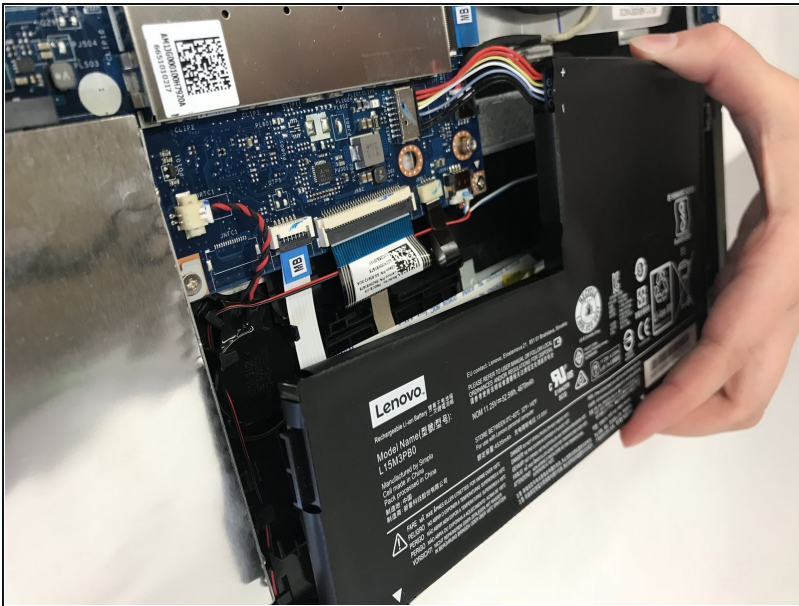

- Remove the battery.

To reassemble your device, follow these instructions in reverse order.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).