



Shark Rotator Powered Lift-Away Speed Headlight Replacement

Replacing the headlights on the Shark Rotator Powered Lift-Away Speed vacuum.

Written By: Dakota Rodriguez-Ransom



INTRODUCTION

The Shark Rotator Powered Lift-Away has two LED headlights to assist in vacuuming in poorly lit areas. The vacuum's headlights are designed to last approximately 7 years. Replacement of the headlights is needed to keep the vacuum at optimal condition. This replacement guide demonstrates how to replace both LED headlights in the vacuum.

TOOLS:


- [Coin](#) (1)

Quarter

It is easier for the user to use a large coin. A nickle or other currency of similar size will suffice.



- [Spudger](#) (1)
 - [T20 Torx Screwdriver](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Headlight

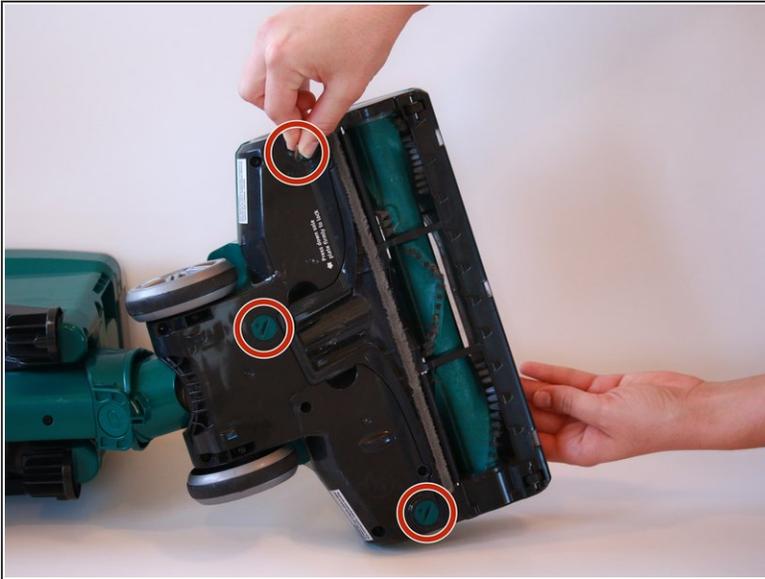


- Flip the vacuum on its underside, and use a coin to rotate the cam-screws on the bottom panel so that their grooves are parallel with the front of the vacuum.

Step 2

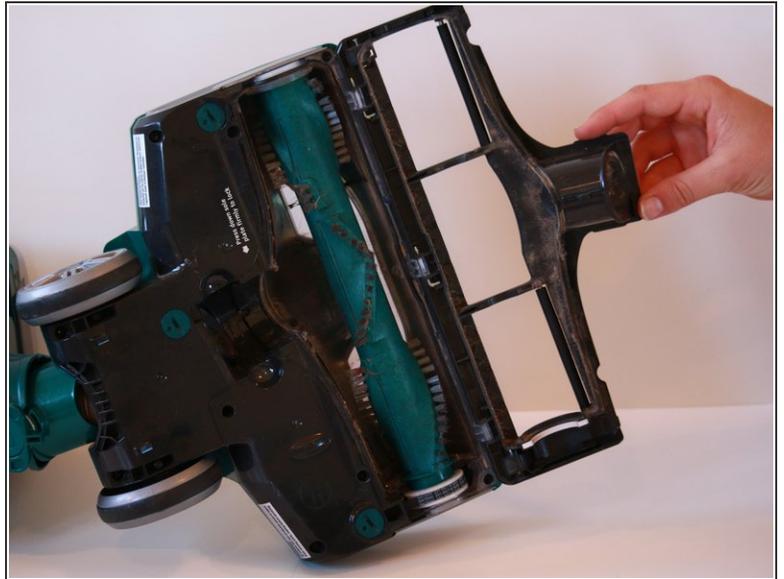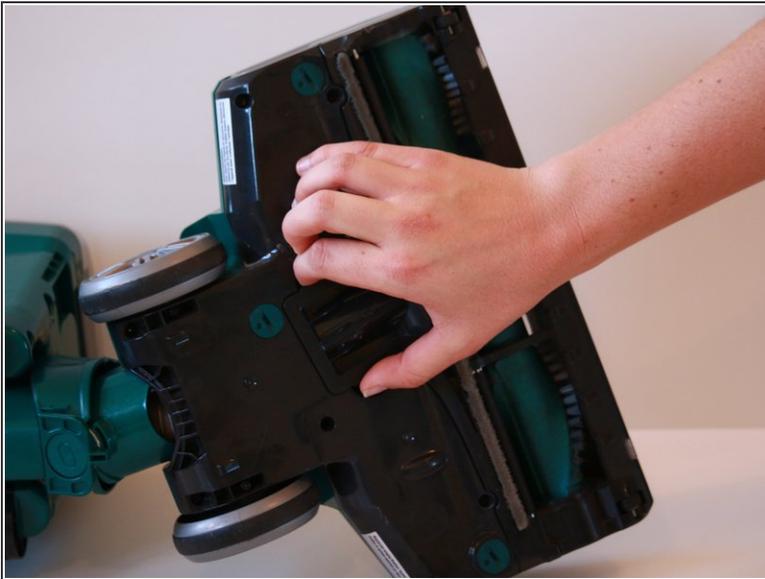



- Squeeze the sides of the roller brush cover release clasp, and swing the cover open.

Step 3

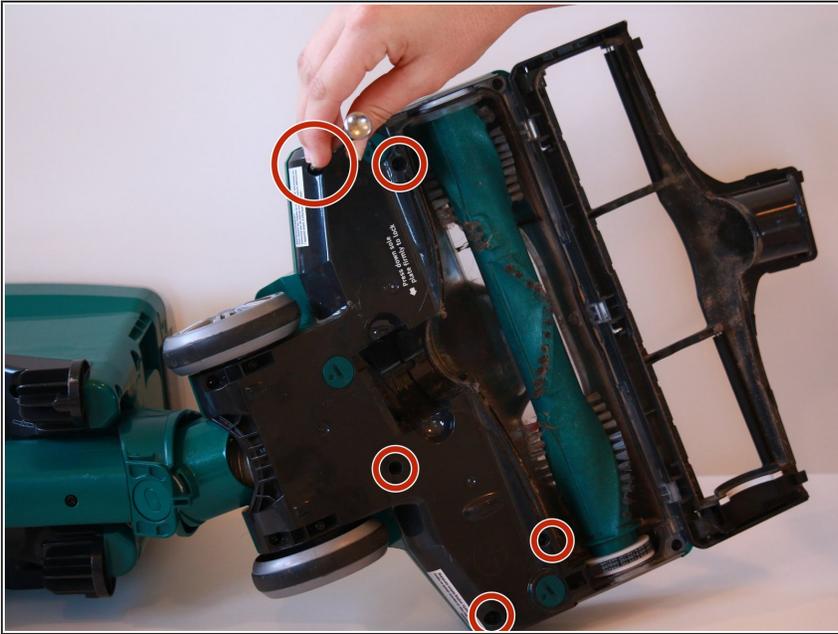


- Using a T20 screwdriver remove five 15.9 mm screws on the outside of the cover.

Step 4

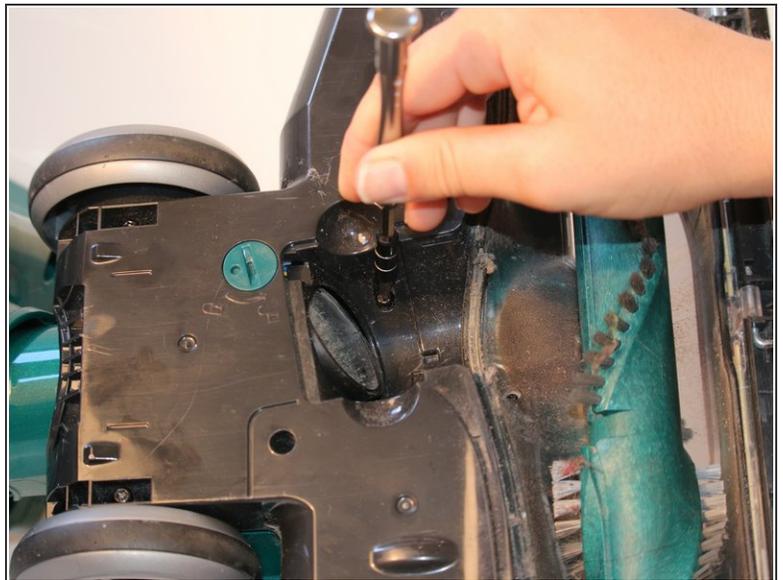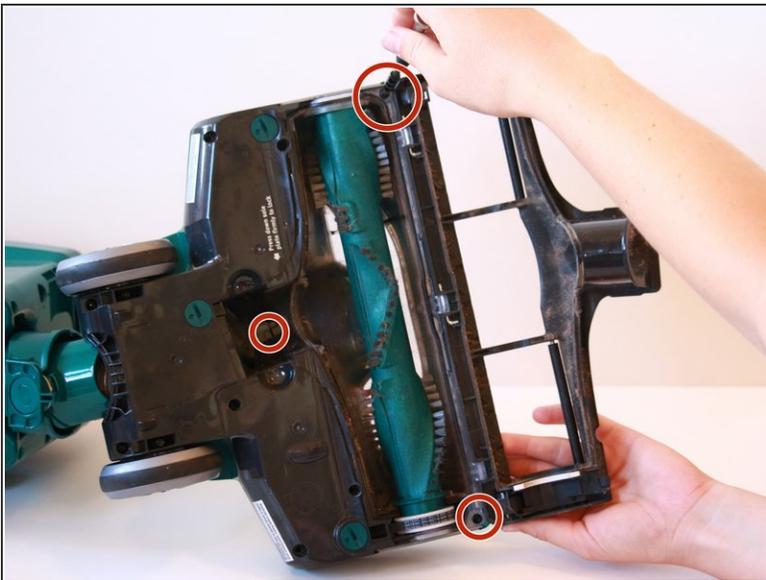

- Using a T20 screwdriver, remove three 13.4 mm screws from where the roller brush cover attaches to the bottom of the vacuum.

Step 5

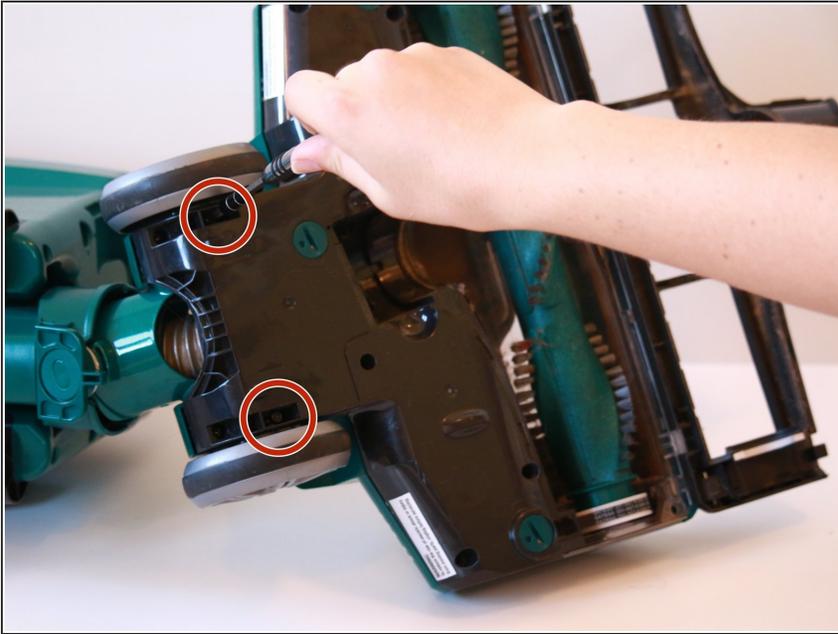


- Using a T20 screwdriver, remove two 13.4 mm screws from under the wheels.

Step 6



- Using a T20 screwdriver, remove two 15.9 mm screws behind the vacuum wheels.

Step 7

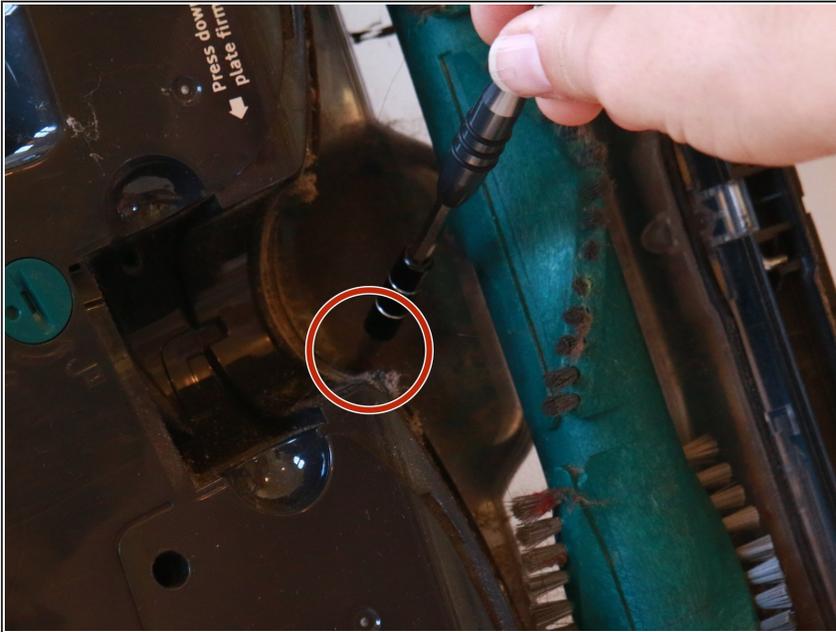

- Using a PH0 screwdriver bit, remove the single 13.4 mm screw in between the roller brush and where the release clasp was attached.

Step 8



- Using a T20 screwdriver, remove the single 13.4 mm screw from behind the belted end of the roller brush.

Step 9



- Flip the vacuum into the upright position, and use a spudger to open the front assembly cover by prying the seam where the colored front assembly and the grey side covers meet.

Step 10




- Separate the front assembly cover from the vacuum.

Step 11




- Use a spudger to remove the headlight covers by prying the seams where the headlight covers meet the bottom front of the vacuum.

Step 12

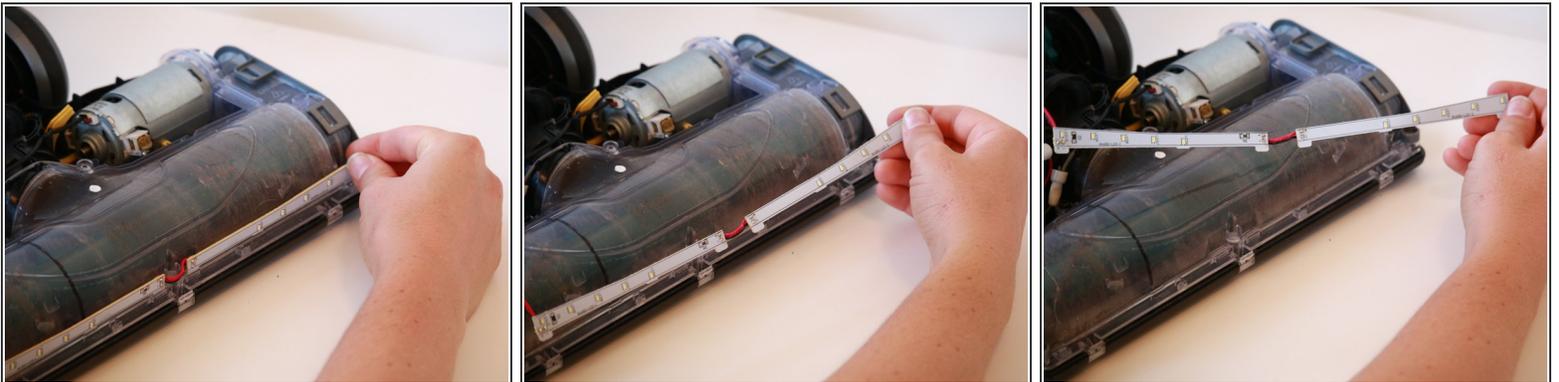

- Pull the LED headlight strand up and away from where it is attached to the bottom front of the vacuum.

Step 13

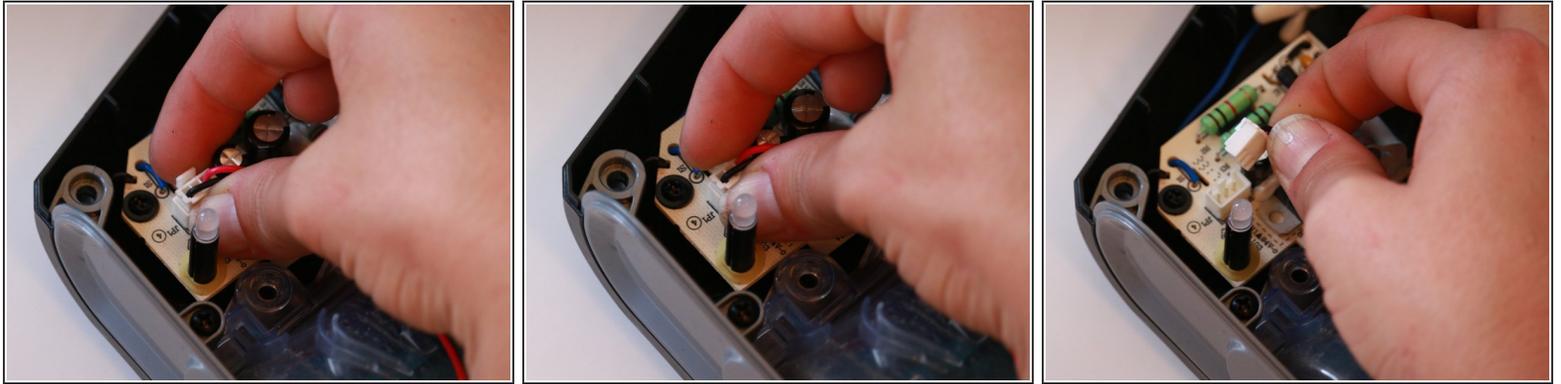

- Pinch the tabs on the circuit board clasp for the LED headlight inwards, and pull the clasp up and away to detach the headlight.

To reassemble your device, follow these instructions in reverse order.