



# Astro A20 Speaker Replacement

Astro A20 Speaker Replacement will demonstrate how to replace a speaker.

Written By: Jasmine Yarbrough



---

## INTRODUCTION

If the Astro A20 does not have any audio transmitting from the speaker then you will need to follow these steps to replace the speaker.

---

### TOOLS:

- [Spudger](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Cushion



- Place one hand on the hard side of the headset ear portion and on the cushion.
- Lift the small portion on the edge of the cushion.

## Step 2



- Slide the metal spudger underneath the lift part of the ear cushion.
- Pull the ear cushion while wedging the spudger around the edge of the ear cushion.

### Step 3



- Remove the ear cushion from the headset.

### Step 4 — Speaker




- Place your hand on the opposite side of the speaker.

## Step 5



- Remove the four 7mm screws with a Phillips #1 screwdriver.
- ⓘ You may want to use a 60mm screwdriver extension to reach the screws inside of the headset.

## Step 6

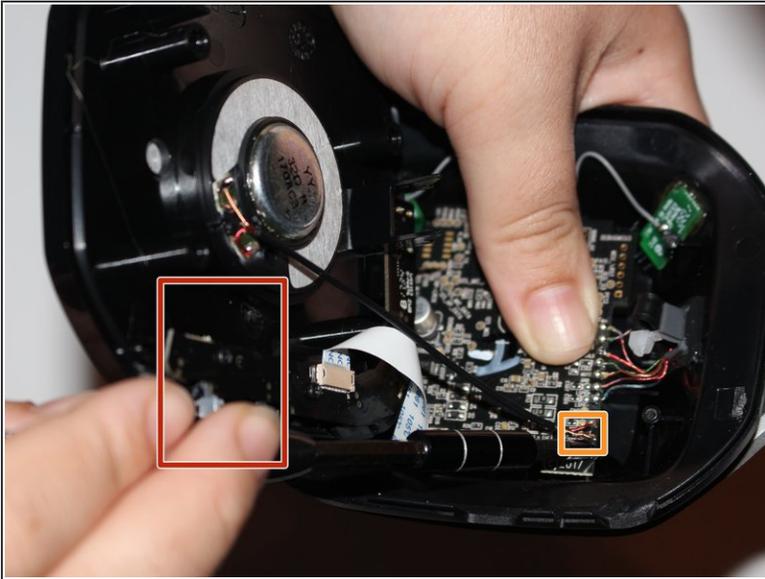

- Lift the speaker area.
- Disconnect the wires connected to the speaker.
- Wedge a spudger on the edge of the speaker and lift upwards to remove the speaker from the device.

To reassemble your device, follow these instructions in reverse order.