

Written By: Phat Tran



## INTRODUCTION

This guide may be used to remove the computer board that operates the Audio, USB2, and Display Ports from the Samsung ATIV Book 9 Lite for replacement. Have a Phillips screwdriver ready. Be sure to keep track of all screws removed and where they belong. When removing the audio port, be sure not to damage any cords connecting the charging port to the laptop. Dispose of the broken audio port properly.




### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Audio Port/USB2/Display Port Board




 Put a protective lining such as a piece of cloth in between the screen and the keyboard when closed to protect your screen when performing this replacement.

- Turn the laptop upside down to show the screws holding the back cover on.
- Using a Phillips #0, remove the ten 4mm screws located around the edges and one central.

 
 
## Step 2



- Use two plastic opening tools to separate the back cover from the laptop.
-  This may take some force because the back cover is snapped into place before the screws are used to keep it in place.



## Step 3

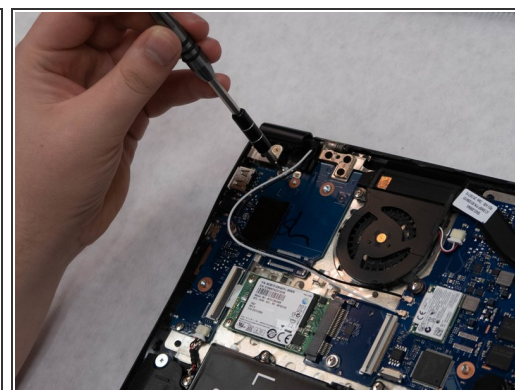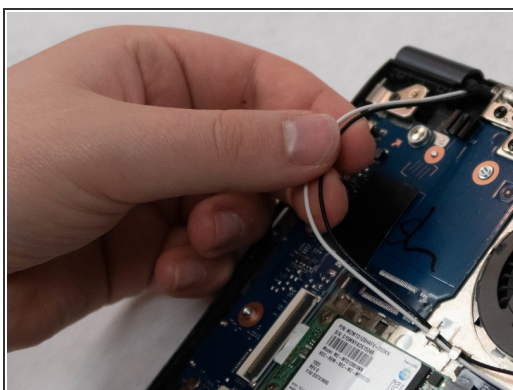

- Using your hands move the black and white wires that are layered on top of the board to be out of the way of the removal.
- Using a Phillips #0, remove three 3.5mm screws.

## Step 4



- Using your hands remove the cord that connects the speakers to the board you are removing.
- ⚠ Do not pull on the cord as that might damage it; remove it by pulling on the white wire head.
- Using your hands, remove the board from the computer.

To reassemble your device, follow these instructions in reverse order.