



Nikon Coolpix S9050 Battery Replacement

This guide will show how to replace the battery to bring power back to the camera. You can remove the battery to either charge it or replace it.

Written By: Catrionna Bruce



INTRODUCTION


If your Nikon Coolpix S9050 is not turning on. It may be possible that the camera is dead or the battery is damaged. Replacing the battery could fix both of these problems. Make sure the camera is off and it is recommended to work in a dry area.

Step 1 — Battery




- Move slider to opposite side which will allow battery door to open.

Step 2

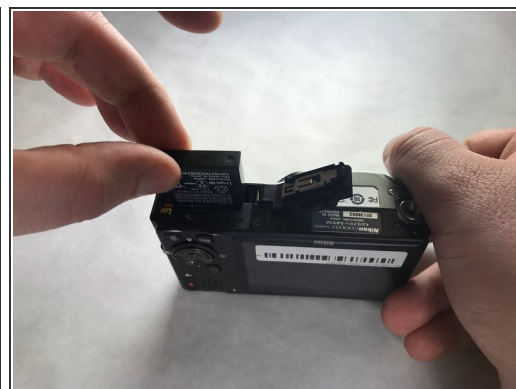

- Compress the yellow clip away from the the battery until battery is released outward.

Step 3

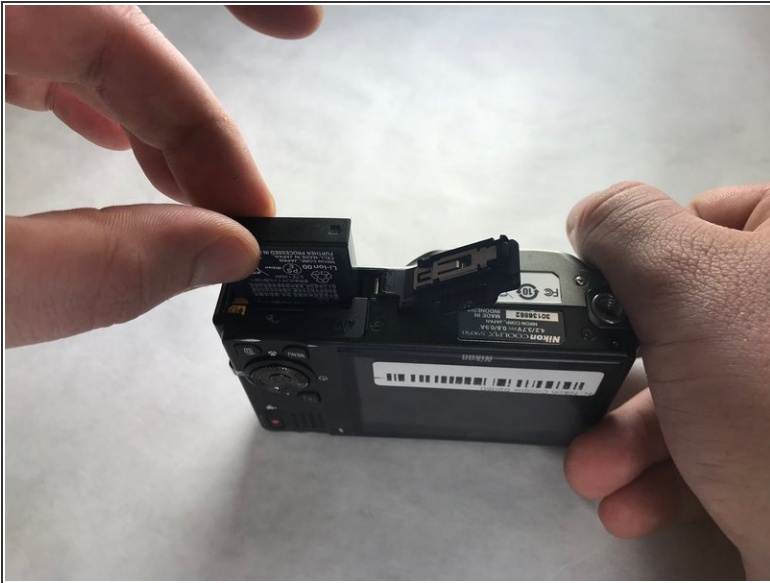

- Remove battery with hands.

To reassemble your device, follow these instructions in reverse order.