


# SG 552-1 Commando Gearbox Replacement

Step-by-step instructions on how to replace the gearbox.

Written By: Amanda Toan

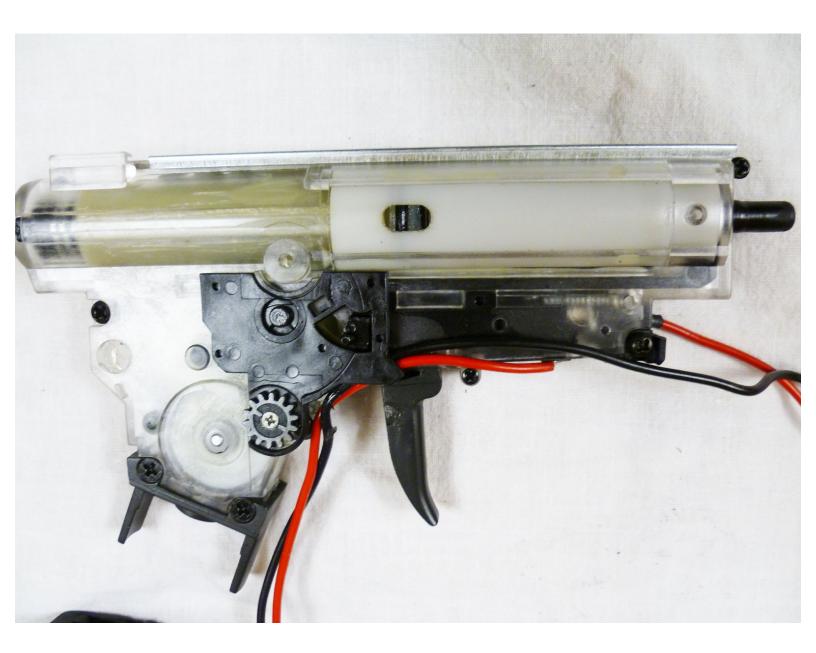

#### **INTRODUCTION**

This guide will be showing step-by-step instructions on how to get to and replace the gearbox of the airsoft gun.



# **TOOLS:**

- Macro Bit Set (1)
- 1.5mm Allen Wrench
- 6-in-1 Screwdriver (1)
- Phillips #0 Screwdriver (1)
- Phillips #1 Screwdriver (1)

## Step 1 — Gearbox





- Using a flathead screwdriver, remove the pin holding the hand guard in place.
  - (i) To remove this, turn the pin clockwise and push it through at the same time.
- Remove the hand guard.





- Using a Phillips #1 screwdriver, remove the two 8mm screws above the hand guard on both sides of the gun.
  - (i) There should be four total.





- Turn the gun over so that you are facing the bottom of the gun.
  - Using a Phillips #1 screwdriver, remove the following screws:
    - Remove the 8mm screw that is located directly underneath the cocking lever.
    - Remove the 8mm screw located beside the screw you just removed.



Carefully tug on the tip of the gun and pull the barrel and its cover out.



- Locate the hand grip.
- Using a Phillips #0 screwdriver, remove the two 6mm screws at the bottom of the hand grip.
- Slide the cover off.





- Pull the motor out of the hand grip.
- Using a Phillips #1 screwdriver, remove the two 5mm screws inside of the hand grip.







- Locate the pin holding the folding stock in place.
- Using an allen wrench or something small, carefully push the pin out.





- Using a Phillips #1 screwdriver, remove the 20mm screw behind the folding stock and above the gearbox.
- Remove the cover that was held on by the screw.

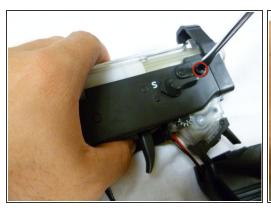

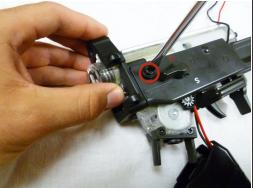



- Using a flathead screwdriver, remove the two 5mm screws beside the safety switch on both sides of the gun.
- Slide off the piece that was held on by those screws.






- Using a small allen wrench, carefully unscrew the screws holding the safety switch in place on both sides of the gun.
  - (i) The screws do not have to be taken out all the way, just slightly loosen them until you are able to pull the switch off.





- Using a Phillips #0 screwdriver, remove the two 6mm screws that were underneath the safety switch on both sides of the gun.
- Carefully remove the pieces that were held on by the screws.

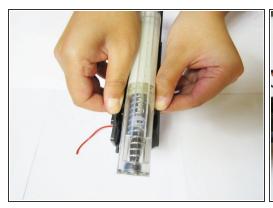





- Pull apart the cover when pulling the gearbox out.
- Pull the gearbox out.
  - (i) The gears will fall out when taking the gearbox out. Careful not to lose them.

To reassemble your device, follow these instructions in reverse order.