 




# Water connection seal replacement

Replacement of the water connection seal on a Saeco Vienna Sup018

Written By: VauWeh

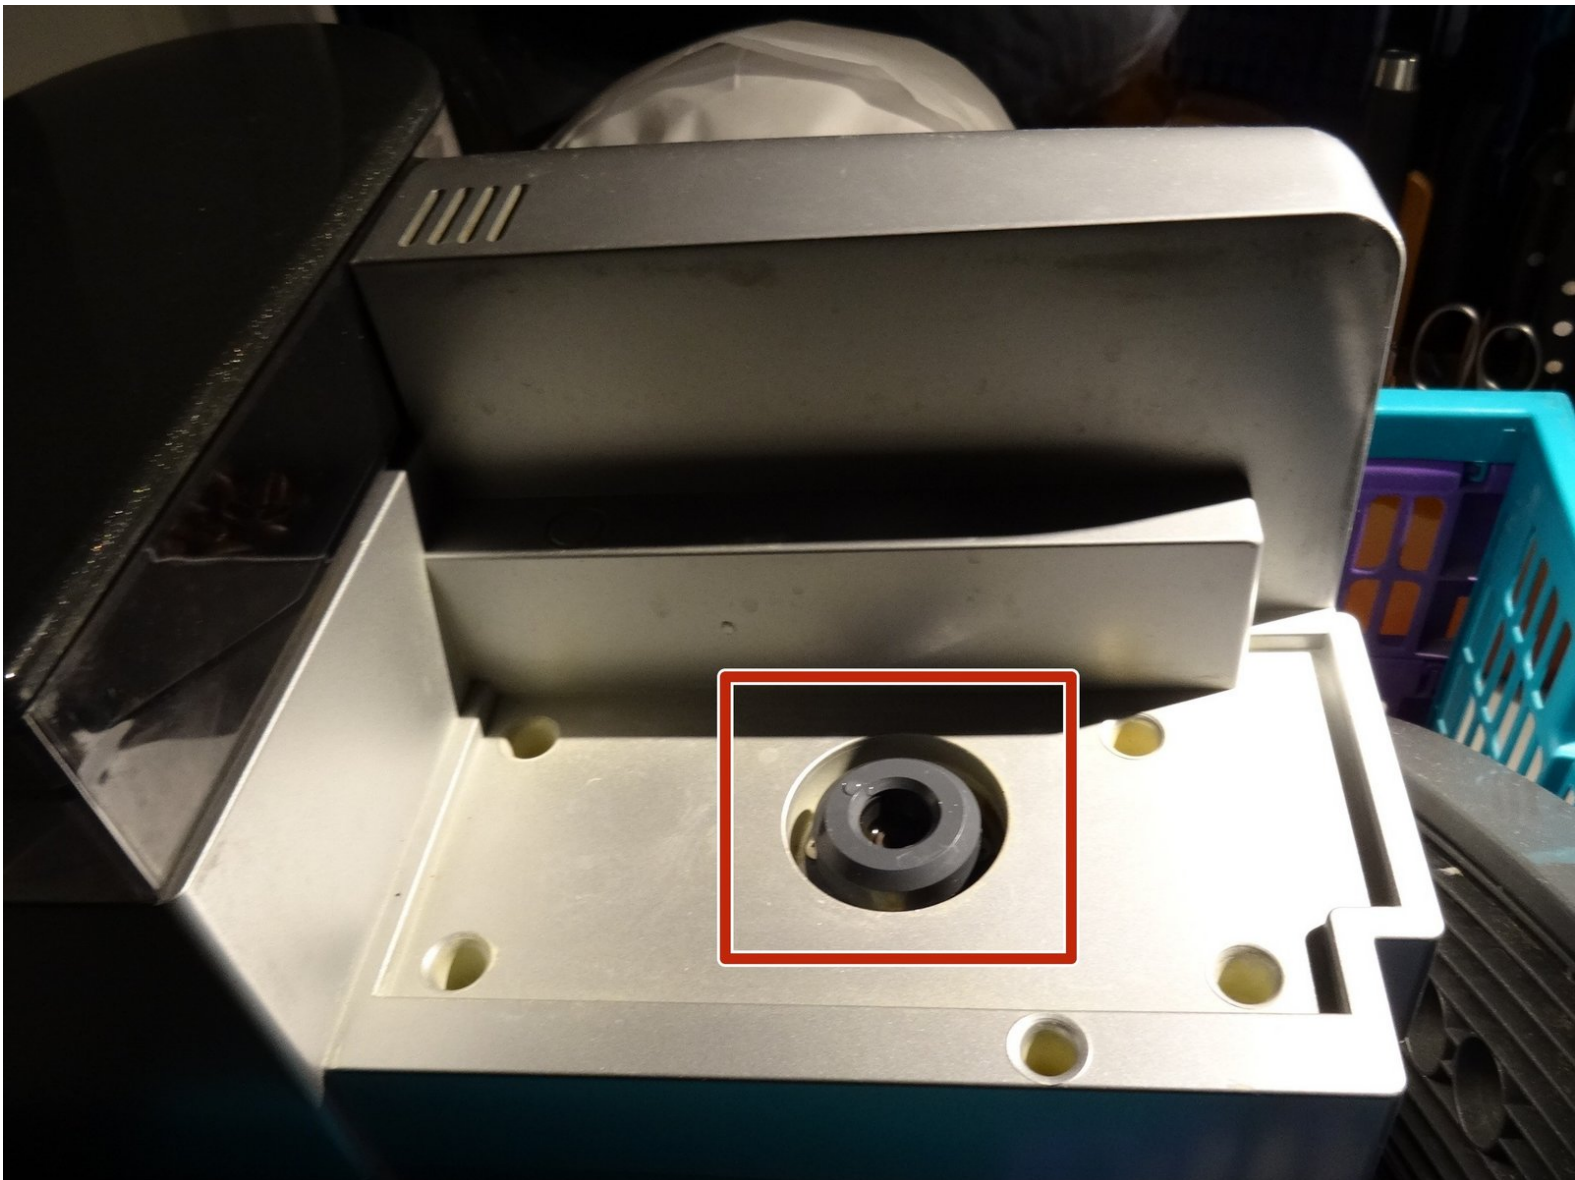

## INTRODUCTION

If the water runs out of the water tank when the tank is installed, then this seal (inner manifold sleeve) must be replaced. The repair is very simple. You do not have to open the coffee machine. If the water runs out of the tank itself, the seal in the tank must be replaced, this is described [here](#).



### TOOLS:

 
- [New Item](#) (1)



### PARTS:


- [New Item](#) (1)

## Step 1 — Water connection seal

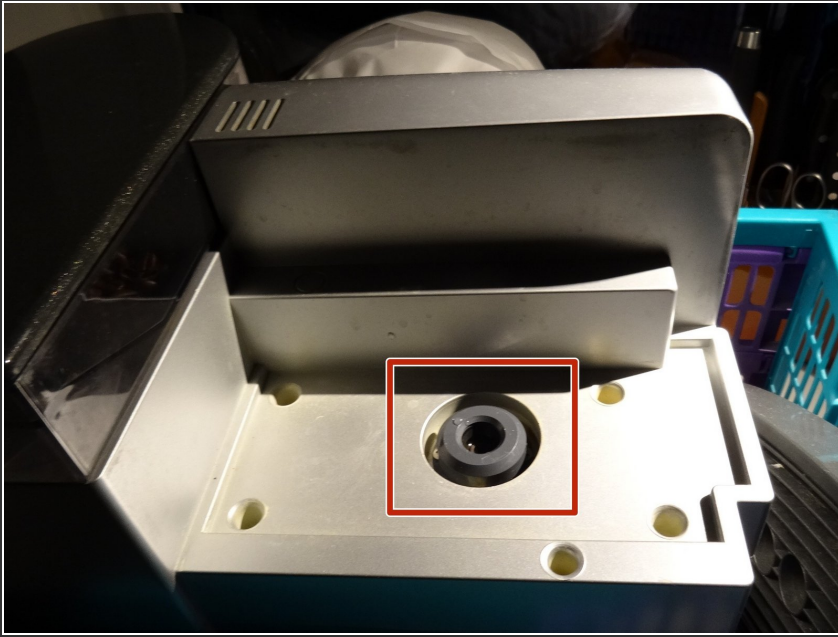

- Take the water tank off.
- The seal is held in place only by a cover.


## Step 2

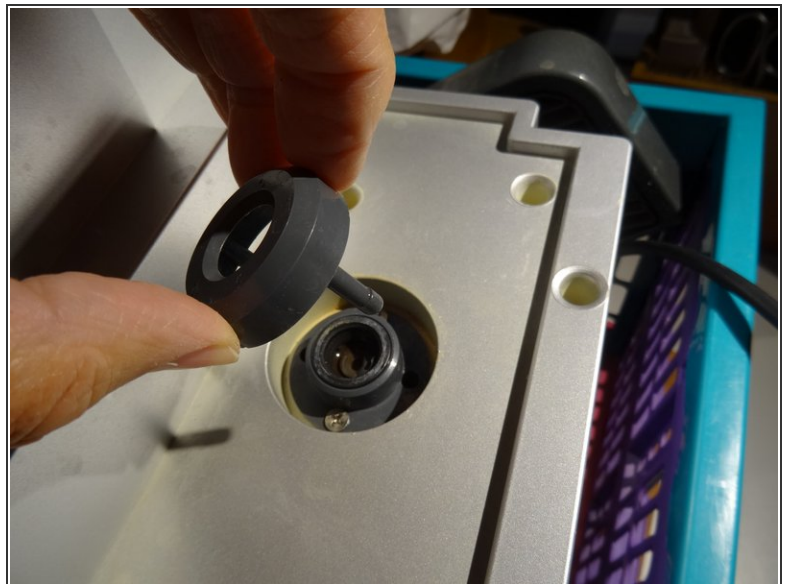 

- The cover is held in place by two notches below the marked points.
- Using a plastic opening tool, gently pry the seal cover alternately near the notches until it releases.
- Remove the cover



### Step 3

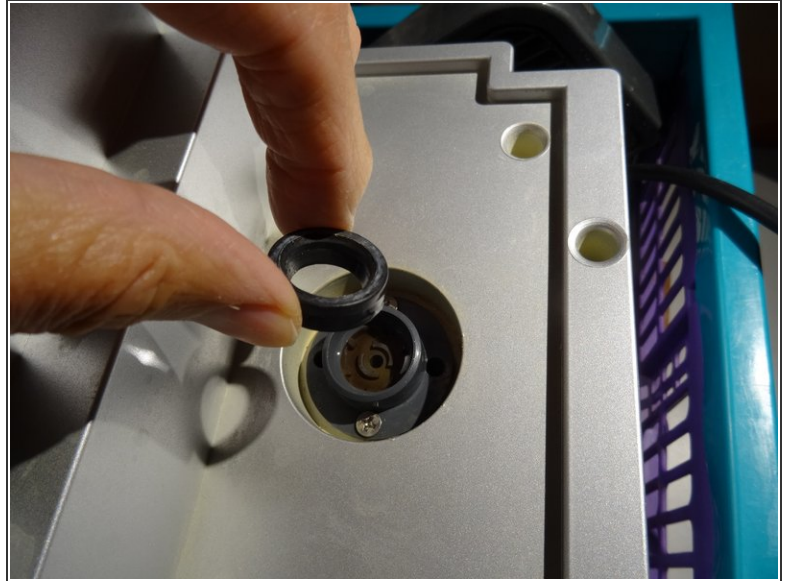 

- With the cover removed, simply remove and replace the gasket.
  - ⓘ The straight side of the seal points upwards, the side with the lip points downwards.
- Replace the seal cover by pressing it firmly until it clicks into place

Reinsert the water tank and enjoy a cup of coffee