



HP Chromebook 11-2210nr LCD Screen Replacement

To remove and or replace a faulty LCD Screen according to HP Chromebook 11-2210nr device.

Written By: Kimberly Rodriguez



INTRODUCTION

This guide will show you how to safely remove a damages or defective LCD screen for replacement according to a HP Chromebook 11-2210nr.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — LCD Screen



- Remove adhesive tabs using fine point tweezers or a metal spudger.
- ⓘ These adhesives are typically located at the bottom left and right corners of the screen.

Step 2



- Remove the one 3 mm screw located underneath both adhesive layers using a Phillips #0 screwdriver.

Step 3



- Using a metal spudger, gently pry the front plastic frame (or bezel) off of the device by inserting the tool along the inside edge of the bezel.
 - Completely open the screen as far as possible to remove the bottom edge of the bezel from the laptop.
- i** Be sure to disconnect the bezel from all the way around the screen before completely removing.

Step 4



- Remove the four black 3 mm screws along the left and right sides of the LCD screen using a Phillips #0 screwdriver.

Step 5



- After removing all screws, gently lower the LCD screen onto the keyboard.
- ⚠ The LCD screen will not be completely disconnected from the laptop just yet.

Step 6



- Gently use the spudger to pry off the tape on top of the gold chip. You may also use your hands to gently remove the tape.

Step 7



- Remove the display cable by gently sliding out the cable away from the LCD screen.
- ⓘ This action disconnects the LCD screen from the rest of the device, allowing it to be completely removed.

This document was generated on 2020-11-28 07:01:42 AM (MST).

To reassemble your device, follow these instructions in reverse order.