



ASUS ROG G46VW Speaker Cover Replacement

This guide will show you how to replace or remove the ASUS ROG G46VW speaker cover.

Written By: Amon Stewart




INTRODUCTION

The speaker cover is a very simple piece of the device but needs to be removed in order to get to most of the internal components.

TOOLS:


- [Spudger](#) (1)
-

Step 1 — Speaker Cover

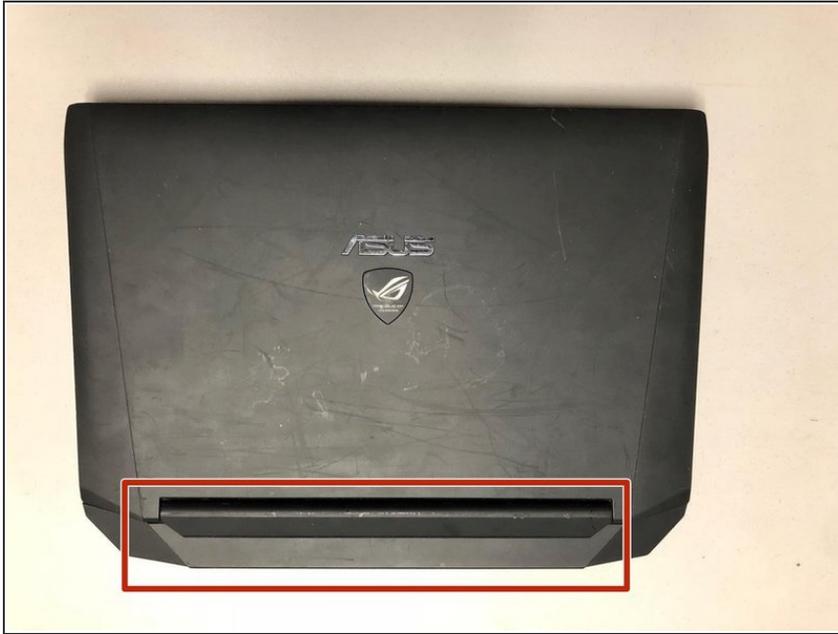

- Gently pry the back hinge cover piece away from the device.

Step 2

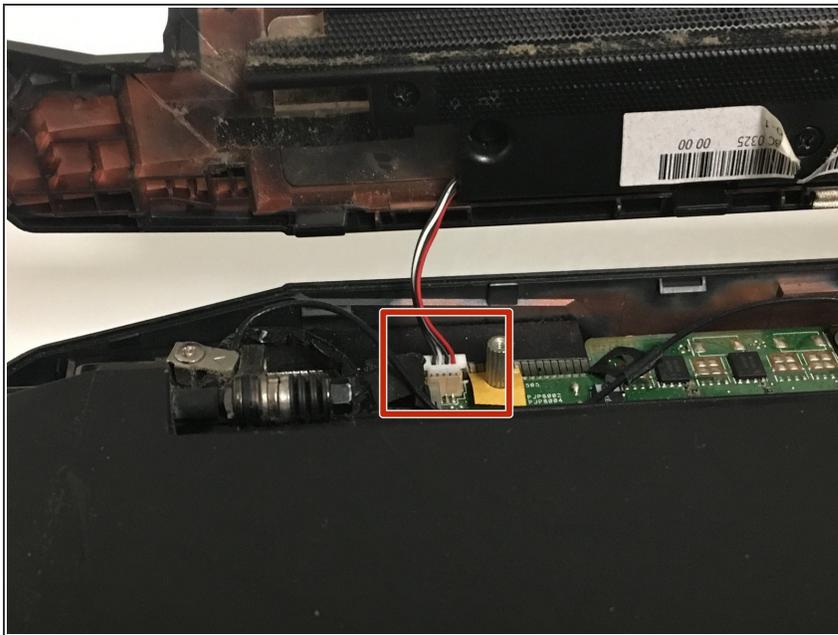

- Disconnect the speaker cable from the motherboard.

To reassemble your device, follow these instructions in reverse order.