




HP 14-ac151nr DC Power Jack Replacement

Replace the DC power jack in your HP 14-ac151nr.

Written By: Antonio Leonti

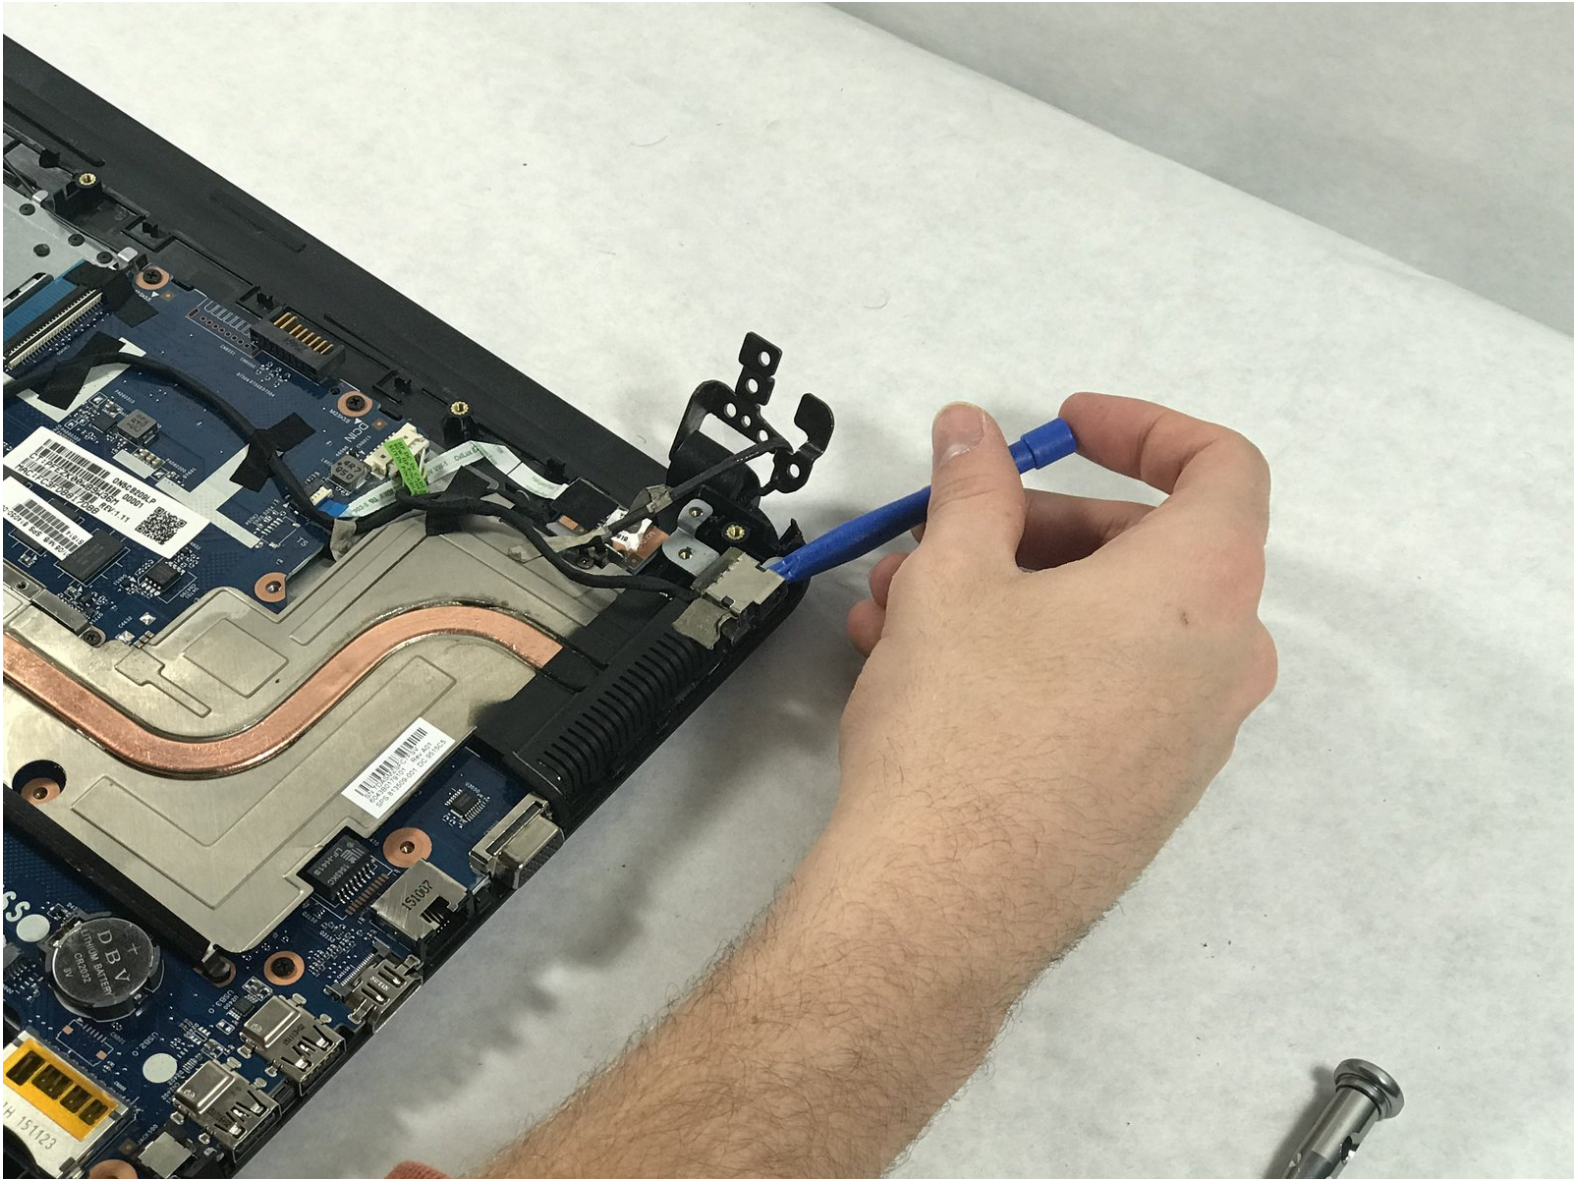


INTRODUCTION

If your computer won't charge and you have already ruled out a defunct charger, you can try replacing the power jack using these steps.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Backplate

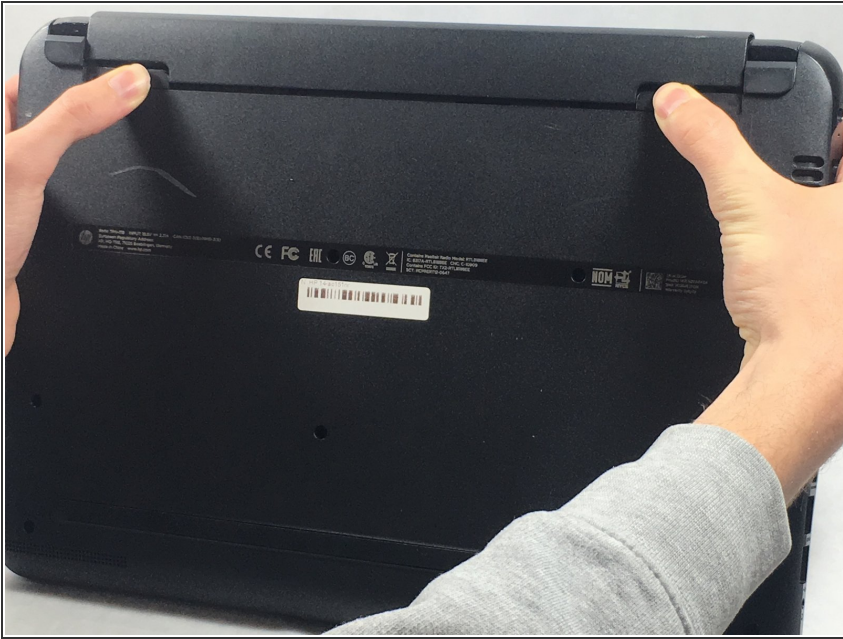


- Remove battery by pushing the two buttons inward.

Step 2

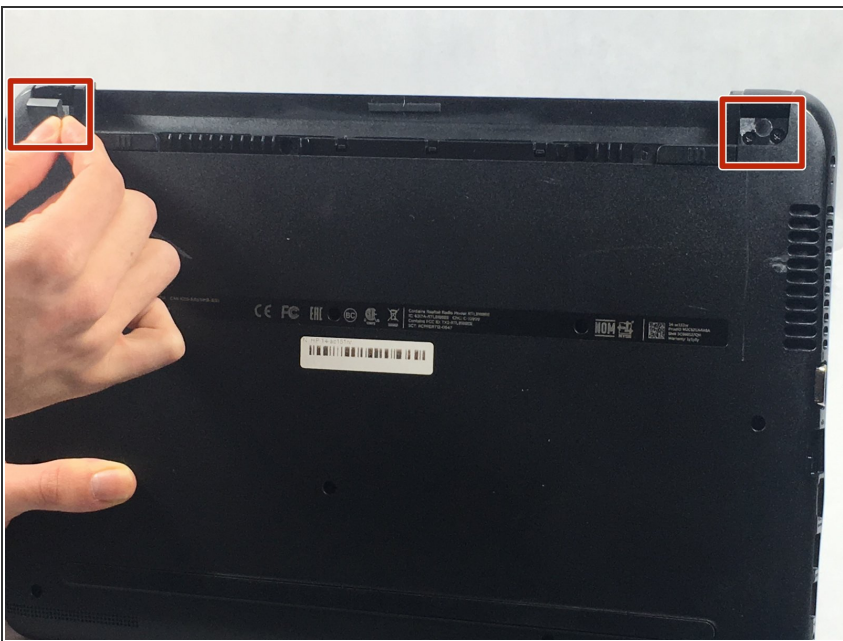


- Remove the two rubber feet next to the battery.

Step 3

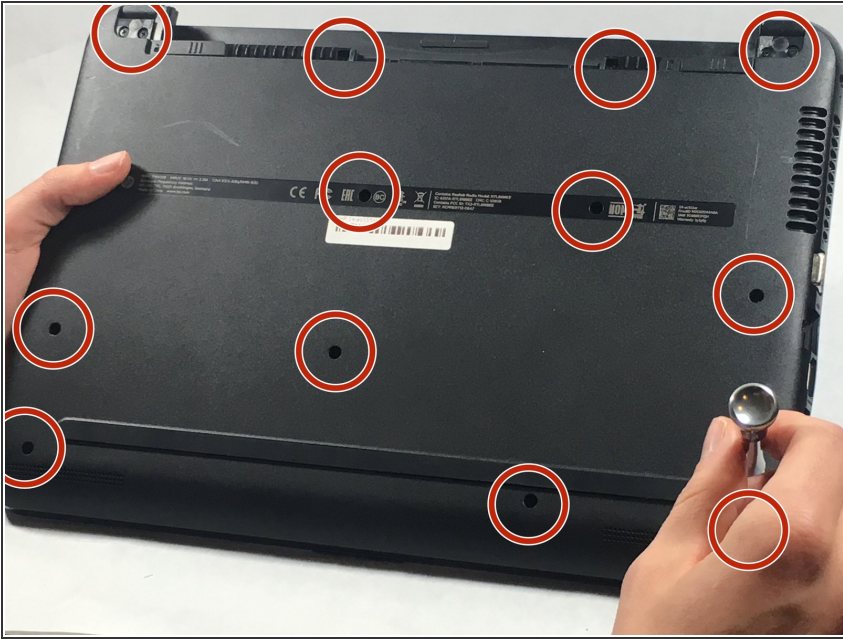



- Remove all 14 Phillips head #0 screws.

Step 4

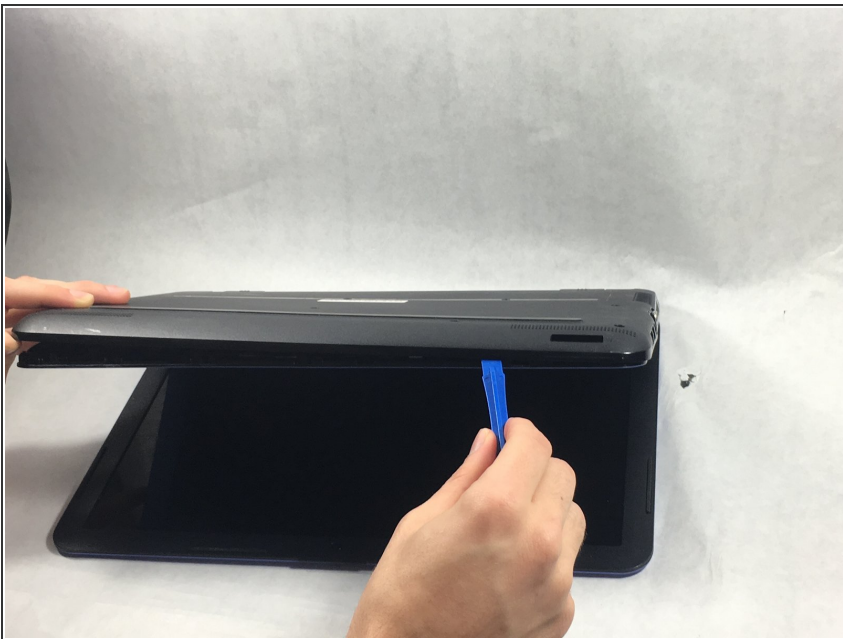


- Use a plastic opener tool to pry off the black backplate.

Step 5 — DC Power Jack

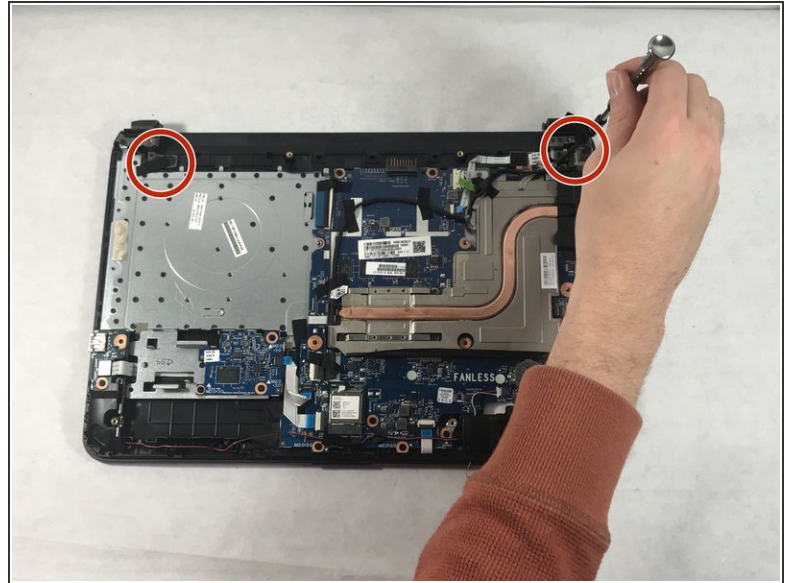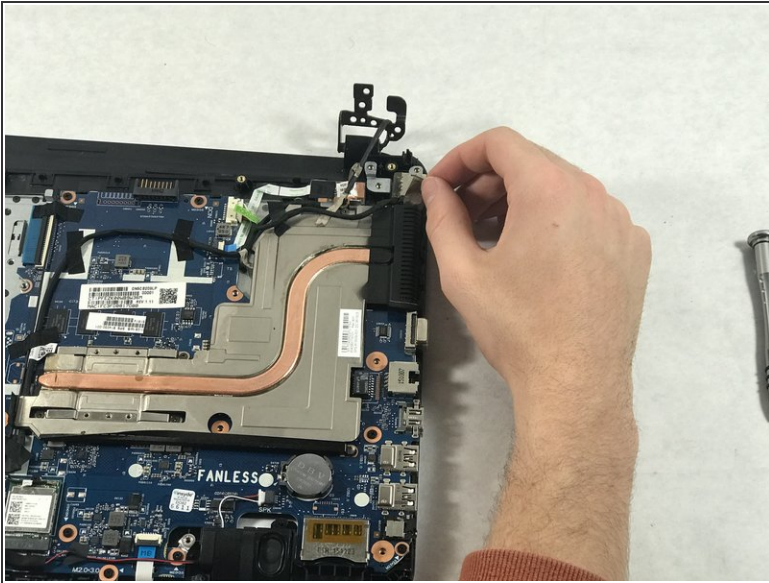




- Remove the black tape near the power jack.
- Remove the screws connecting monitor to the bottom of the computer.

Step 6

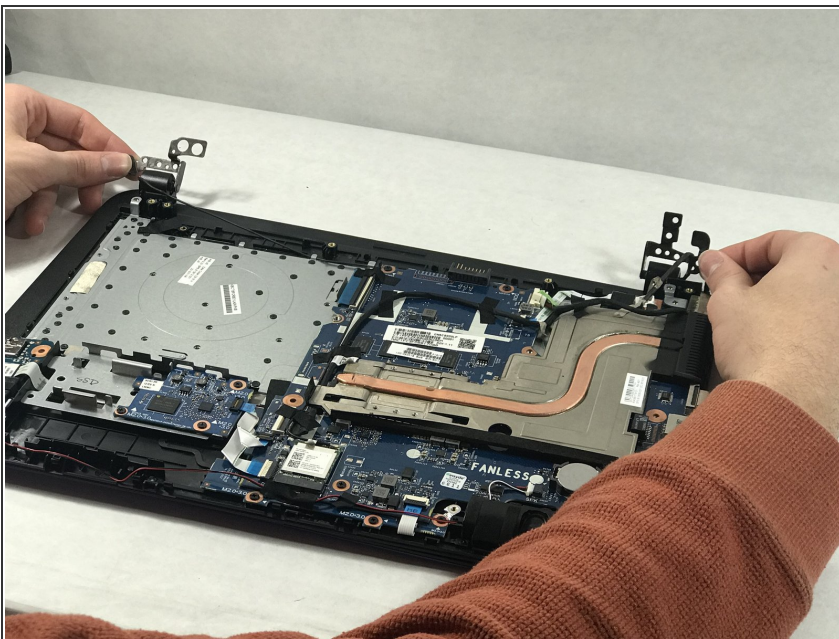

- Position the metal fittings attached to the monitor out of the way.
- ⚠ The monitor is still attached by wires — be careful not to pull on it too hard.

Step 7

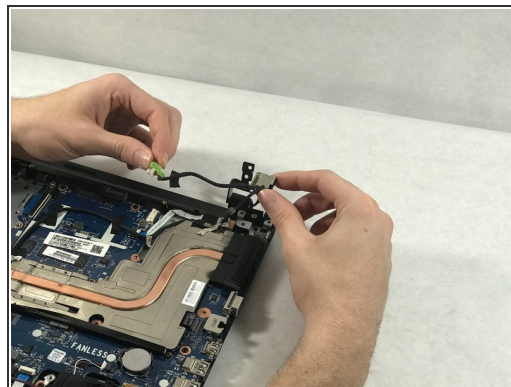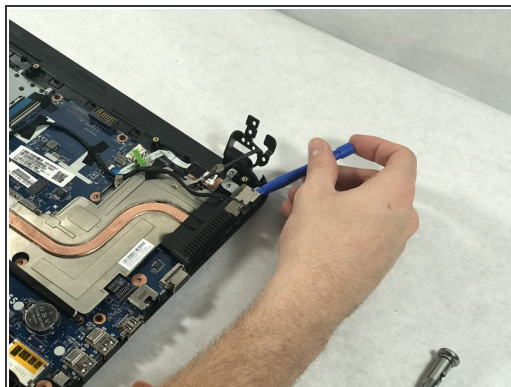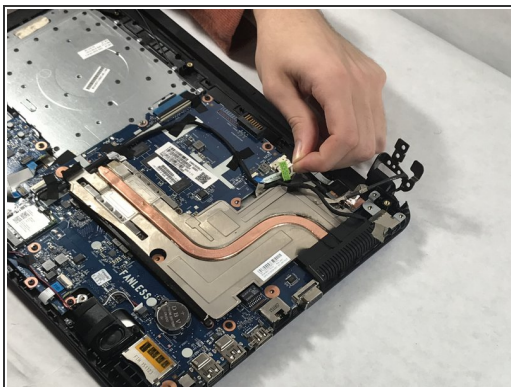

- Disconnect the power jack from the motherboard.
- Remove the power jack by lifting it up.
- ⓘ An opener tool may make this easier.

To reassemble your device, follow these instructions in reverse order.