

# **ASUS ROG G46VW Screen Replacement**

Pay attention to your device as you disassemble...

Written By: Ryan Riley



#### **INTRODUCTION**

Pay attention to your device as you disassemble so that you can successfully reassemble later.

## TOOLS:

TR9 Torx Security Screwdriver (1)

Fingers (1)

Spudger (1)

iFixit Opening Tool (1)


Phillips #0 Screwdriver (1)

Tweezers (1)

### Step 1 — Speaker Cover




 Gently pry the back hinge cover piece away from the device.

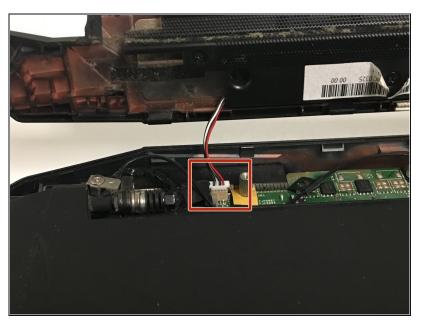

• Disconnect the speaker cable from the motherboard.

## Step 3 — RAM



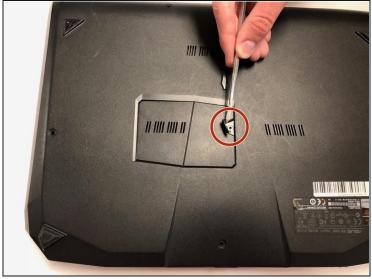

• Lift the screw cover and remove the screw using a Phillips #0 screwdriver.




 Remove the RAM cover by lifting the screw cover and pulling away firmly.

## Step 5



 Push outwards on the clips to release the RAM stick. The stick should pop up at an angle.

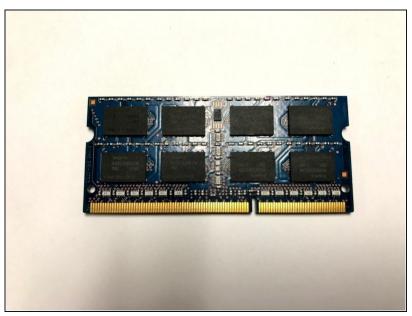

- Pull out the RAM stick carefully.
- ⚠ Do not use a prying motion as this will damage the hardware. Be careful not to damage the gold section of the RAM stick.

## Step 7



• Repeat steps 3-4 to remove the second RAM stick.

### Step 8 — Keyboard



• Remove the two screws from underneath the RAM cover.

## Step 9



- Remove all of the screws from the bottom of the case.
- If replacing the screen, remove the rubber feet to reveal two more screws.




• Turn the laptop over and remove the screws as shown

## Step 11



- Carefully pry the keyboard away using your spudger and the opening tools.
- ⚠ Be sure not to damage the clips holding the keyboard to the bottom case.

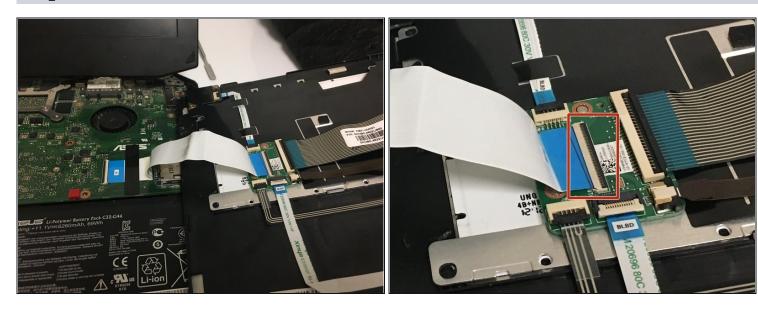

Detach the ribbon cable by releasing the clip

## Step 13 — Screen



• Remove screws from silver braces.



• Use <u>tweezers</u> to remove golden screw caps.

## Step 15



 Remove tape and gently pull up on golden cap connectors to disconnect them.



• Gently pull the white connector until it comes loose.

To reassemble your device, follow these instructions in reverse order.