


HP 15-g010dx Speakers Replacement

Use this guide to replace the speakers.

Written By: Christopher

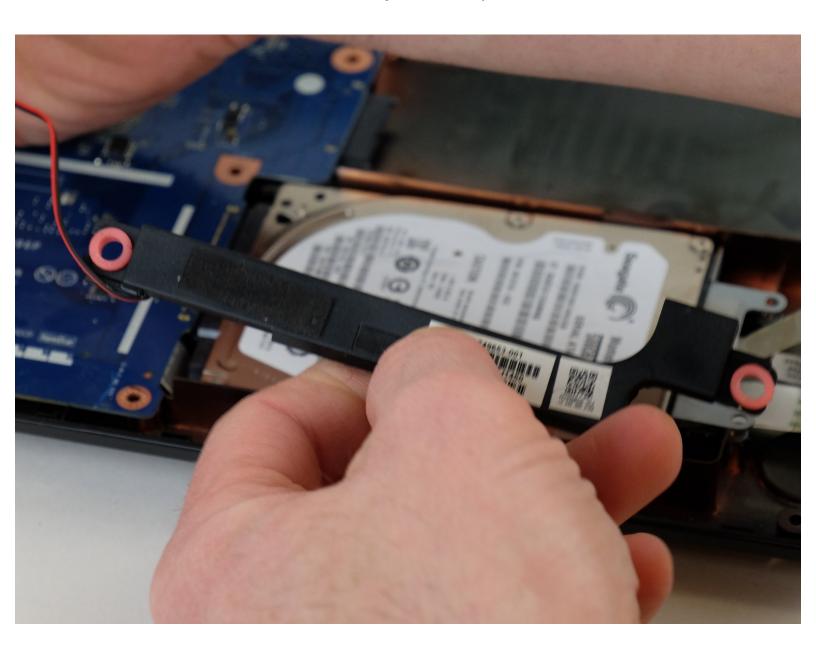

INTRODUCTION

This guide will walk you through step by step on how to replace the speakers on the HP 15-g010dx laptop. You will need about 10-15 minutes to do this replacement. Before you embark make sure that you have your replacement speakers ready to install.



TOOLS:

- Phillips #00 Screwdriver (1)
- Spudger (1)

Step 1 — Battery



 Slide the latch towards the center of the laptop so the unlock emblem appears.

Step 2



 Place your finger on the left latch and slide it towards the center of the laptop.



Pull on the battery to remove.

Step 4 — Keyboard



 Remove the two 5 mm screws with the Phillips #00 screwdriver.



 Using either a credit card or flat spudger, wedge it between the palm rest and the keyboard.

Step 6



 Using the tool of your choice, gently pry up on the top of the keyboard.




Release the top of the keyboard.

Step 8



 Remove the ZIF connector that connects the laptop to the keyboard cable.

Step 9 — Speakers

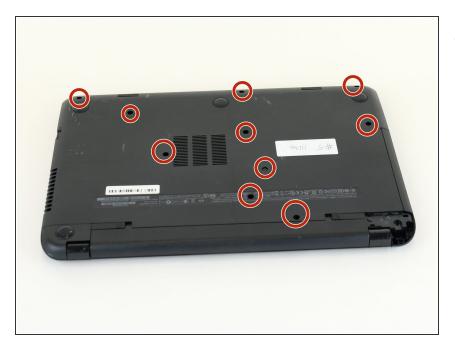

 Using the Phillips #00 screwdriver, remove the 5 millimeter screws that are visible.

Step 10





Using the spudger, remove the two rubber feet that are located near the battery.

Guide ID: 116032 - Draft: 2019-01-03

Step 11




Now remove the two Phillips screws that are located below the rubber feet.

Step 12




Remove the optical drive by pulling it out by hand.

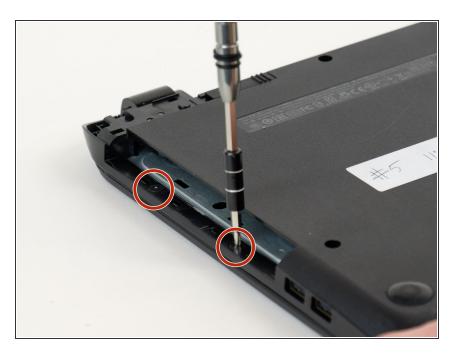

 Remove the two Phillips screws inside the optical drive housing.

Step 14

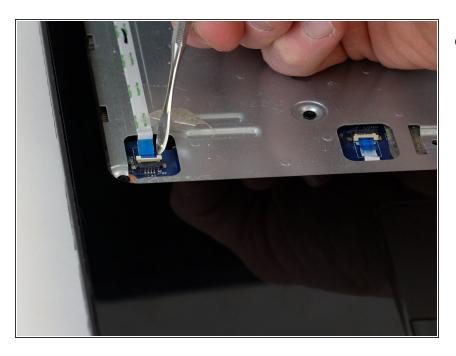

 Disconnect the power button ribbon cable by lifting the connector.








Disconnect the touch pad ribbon cable by lifting up on the connector.

Step 16





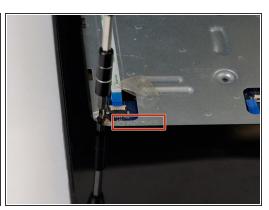


 Now remove the screws indicated by an arrow stamped into the metal, located where the keyboard was.



 Take the metal spudger and gently insert in between the palm rest and the body.

Step 18

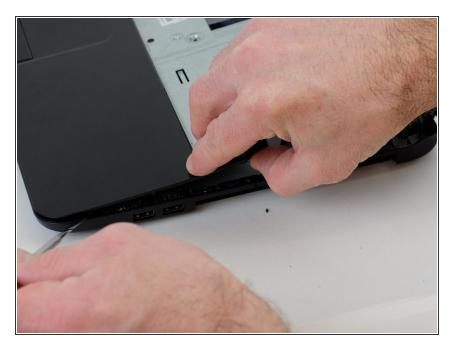

 Work the spudger in small increments around the palm rest while lifting it up in the air.










Carefully remove the palm rest and flip it over.

Step 20

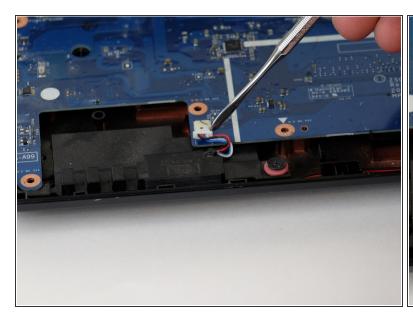

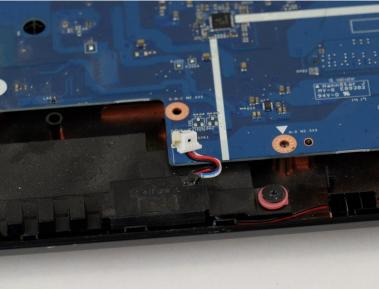


• Lift up on the speaker connectors to unplug the speaker cables.

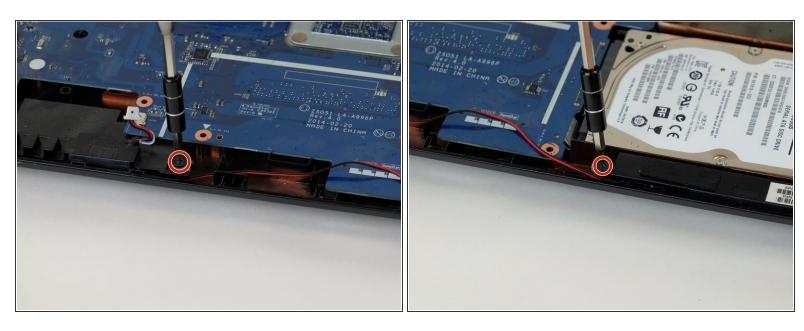

Remove the screws that are securing the speakers.

Step 22

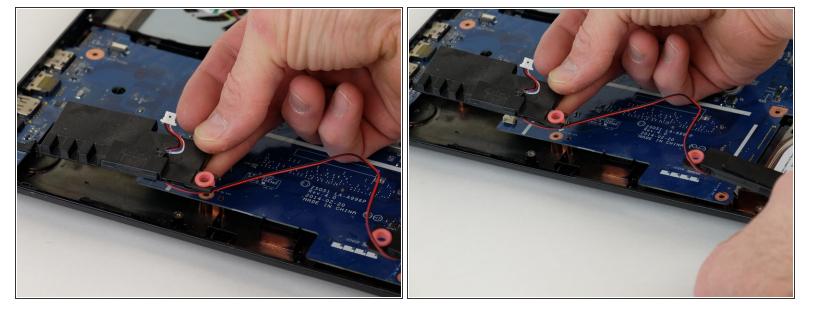

Remove the speakers.