




Lenovo IdeaPad Y510P Battery Replacement

Written By: Alyssa Wheeler

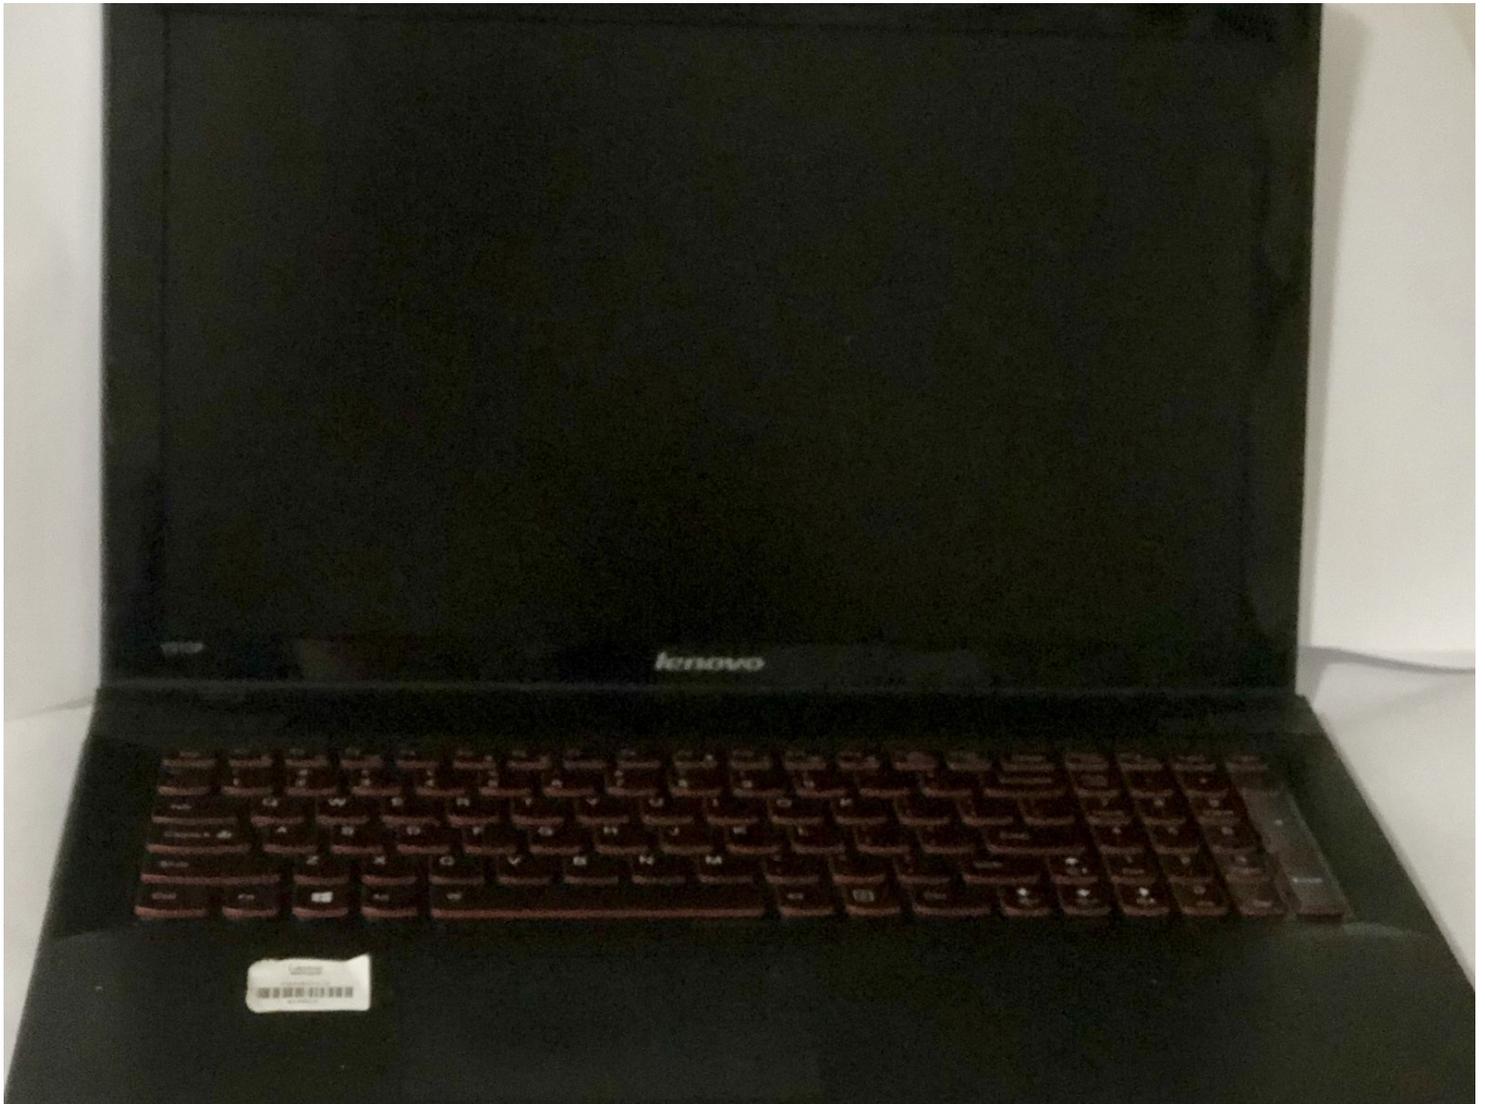

 **TOOLS:**

Fingers (1)

Step 1 — Battery



- Flip laptop over to expose battery.

Step 2



- Move the latches to the unlocked position.

Step 3



- Slide the battery out.

To reassemble your device, follow these instructions in reverse order.