




HP 14-ac151nr Battery Replacement

How to replace the battery in an HP 14-ac151nr


Written By: Jack Coakley

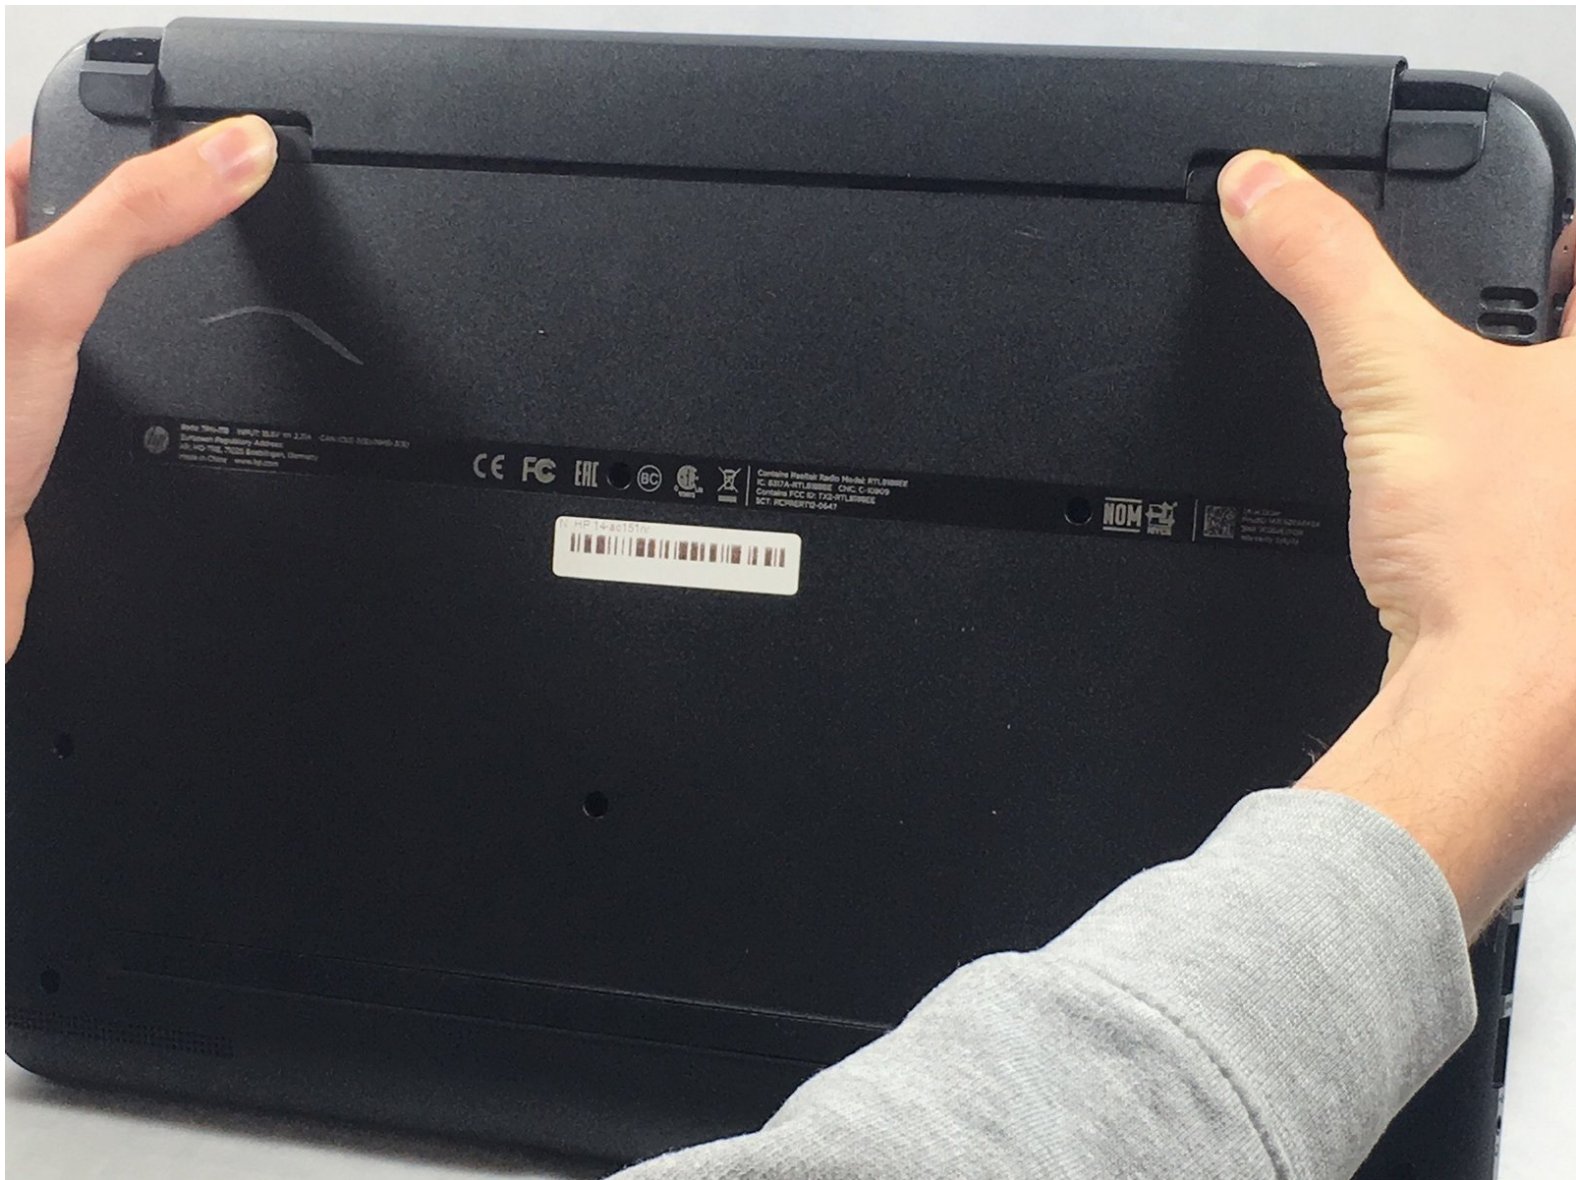

INTRODUCTION

If your battery is not working properly and you need to replace it, then here are the steps to remove it.

Step 1 — Battery

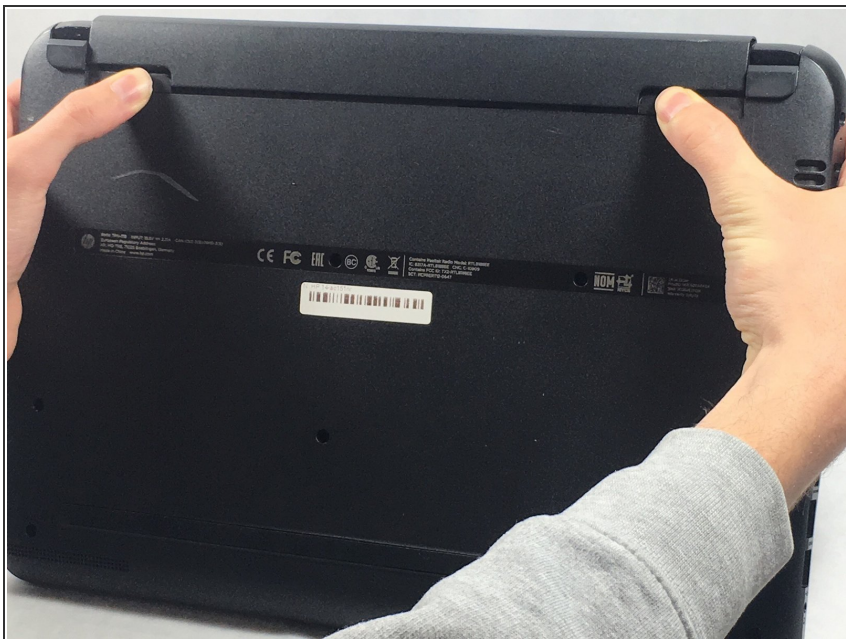

- Press the two buttons inward to unlock the battery.

Step 2



- Remove the battery by pulling it from the slot.

To reassemble your device, follow these instructions in reverse order.