



Ordro HDV-D395 Lens Replacement

Guide to remove lens from the Ordro HDV-D395 camcorder.

Written By: Nathan McIntyre



INTRODUCTION

This guide would be useful in the event of a broken, scratched, or cracked lens.

TOOLS:

- [JIS #000 Screwdriver](#) (1)
 - [Soldering Iron](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Lens



- Pull the slider labeled open, on the bottom right, to unlock the battery.

Step 2



- Pull battery out of slot.

Step 3



- Remove the three screws (length 7.7 mm) from the bottom of the outer case using a JIS000 screwdriver.

Step 4



- Remove plastic casing hiding screws from the strap side of the casing.
- Unscrew the three screws (length 4.75 mm) using a PH000 screwdriver.
- Unscrew the two screws (length 6.4 mm) using a JIS000 screwdriver.

Step 5



- Unscrew the four screws (2.9 mm length) from the screen side of the casing using a JIS000 screwdriver.

Step 6




- Remove both side casings by gripping the sides with your hands and pulling gently.

Step 7





- i** Although it requires extra steps, it is advised that you remove the motherboard and screen to ensure that nothing is damaged in the process of replacing the lens.
- Unscrew the seven screws (length 4.22 mm) from the motherboard using a PH000 screwdriver.
 - Pull out or desolder all connected cords from motherboard.

Step 8

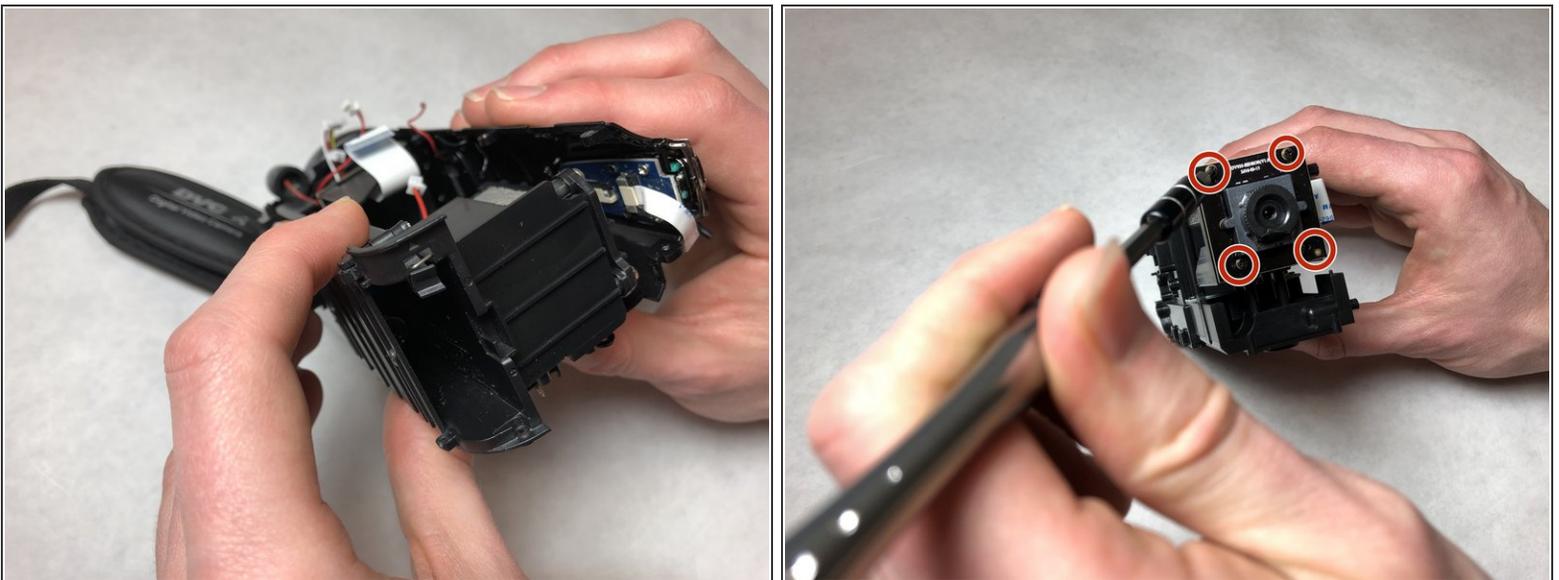

- Remove top of the casing to reveal the screws on lens.
- Unscrew the four screws (size 4.90 mm) using a PH00 screwdriver.

Step 9

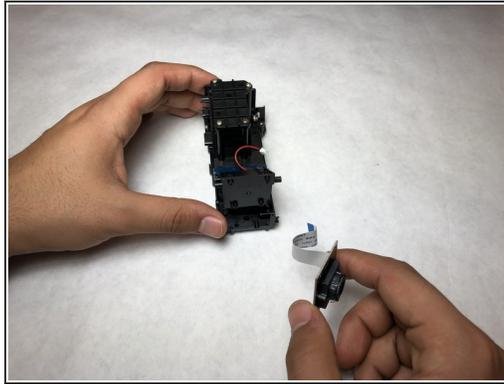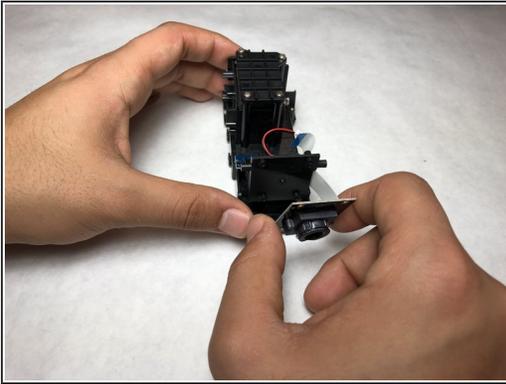

- Pull out lens.
- Remove cord from lens.

To reassemble your device, follow these instructions in reverse order.