




# Lenovo Essential G555-0873 RAM Replacement

This guide details how to remove and replace the RAM (Random Access Memory).

Written By: Michael Elledge

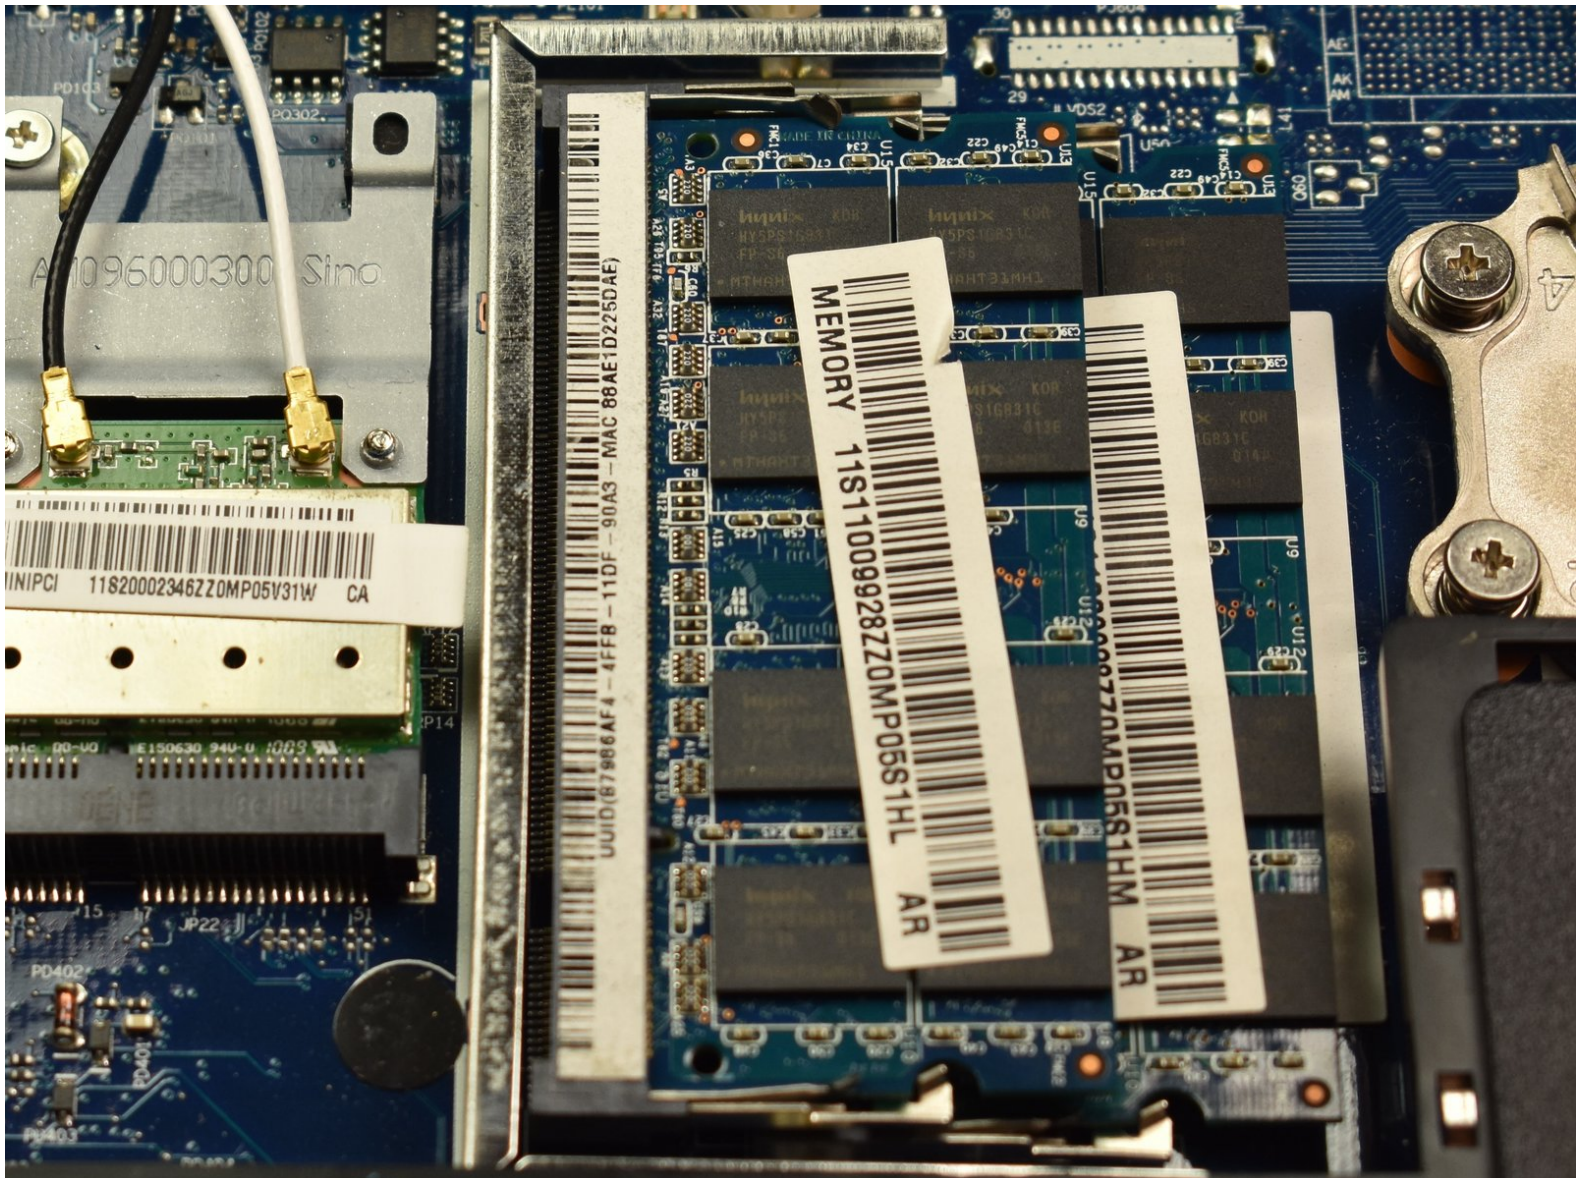

---

## INTRODUCTION

Use this guide to replace the RAM sticks in the Lenovo Essential G555-0873. The RAM sticks are clipped in and don't require a tool for replacement.



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-




## Step 1 — Bottom Panel






- Unscrew the two 5.1 mm screws that secure the bottom cover.
- ⓘ Note that the screws will not come all the way out of the sockets.

## Step 2

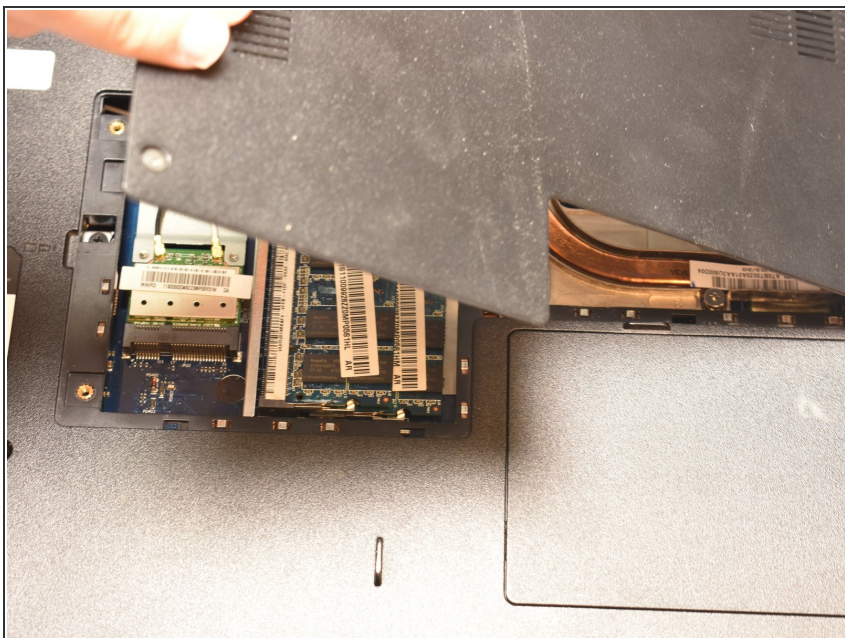


- Lift from the notch until the back panel comes up.

## Step 3 — RAM

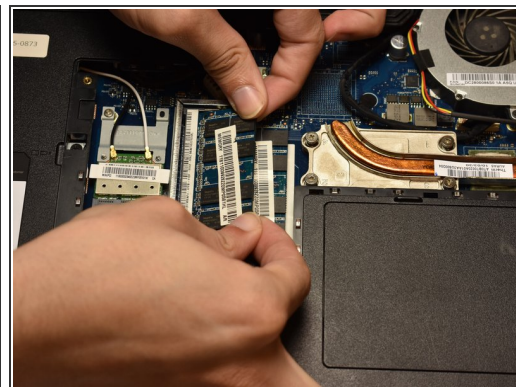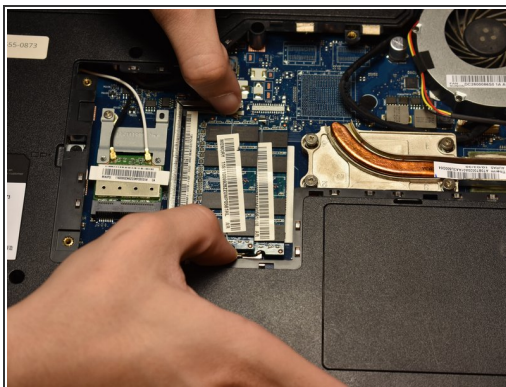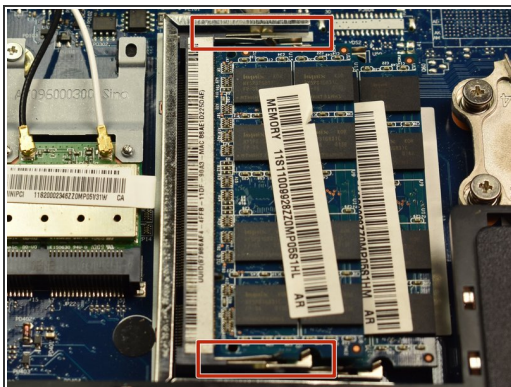

- Push apart hinges shown in picture until RAM pushes itself up to approximately a 30 degree angle.


## Step 4

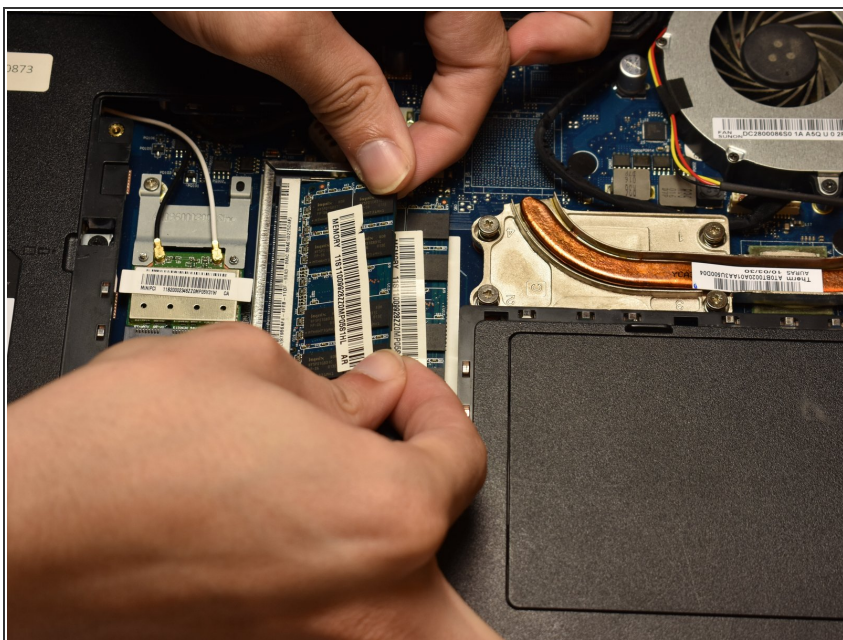

- Pull the RAM stick out of its socket.




## Step 5

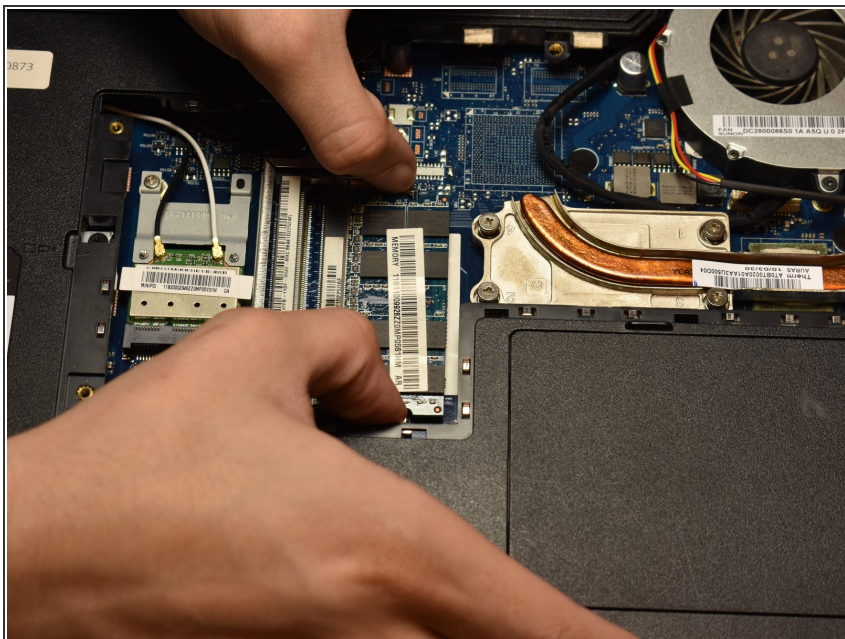



- Push apart hinges of lower RAM stick until it pops up to a similar angle.

## Step 6

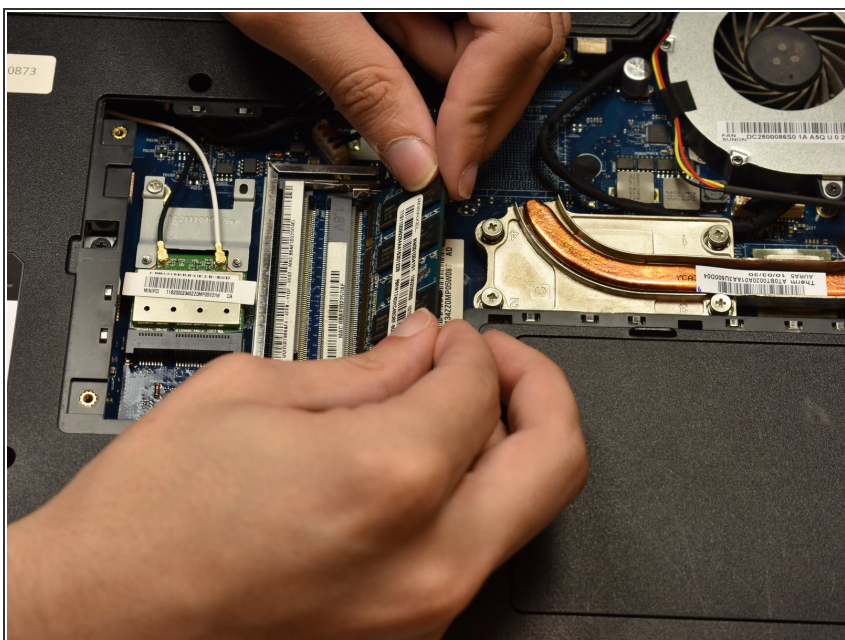

- Pull out second RAM stick in the same way as the first.

## Step 7

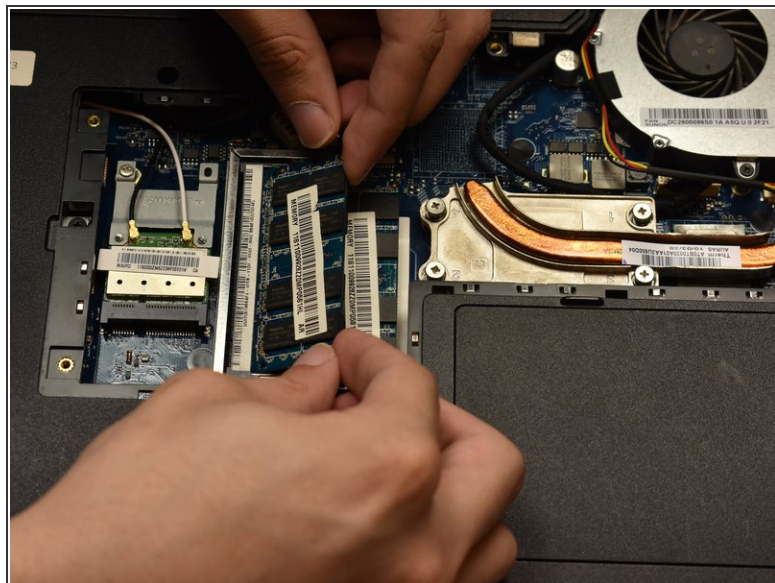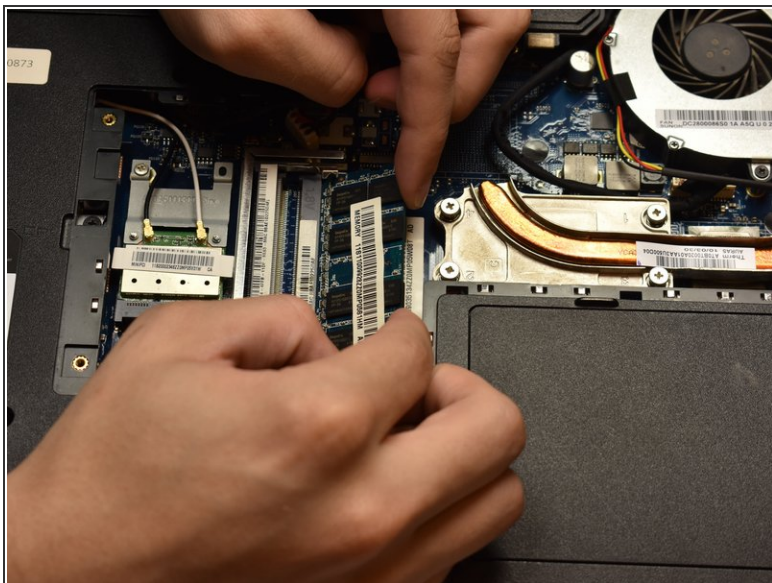

- ✦ Push RAM sticks in diagonally, then push down and snap it in with hinges.
- ✦ Make sure that the RAM stick is aligned with the notch on the port when inserting it.

To reassemble your device, follow these instructions in reverse order.