



# HP Elite x2 1012 G2 Prop Stand Replacement

This guide will help you replace the prop stand of your HP elite x2 1012 G2.

Written By: kefil





## TOOLS:

- [T5 Torx Screwdriver](#) (1)
-

## Step 1 — Prop Stand



- Lift the prop stand approximately 140 degrees from its home position to expose two T5 Torx head screws.


## Step 2



- Use the T5 Torx bit to remove both screws from the prop stand pivot points.



### Step 3

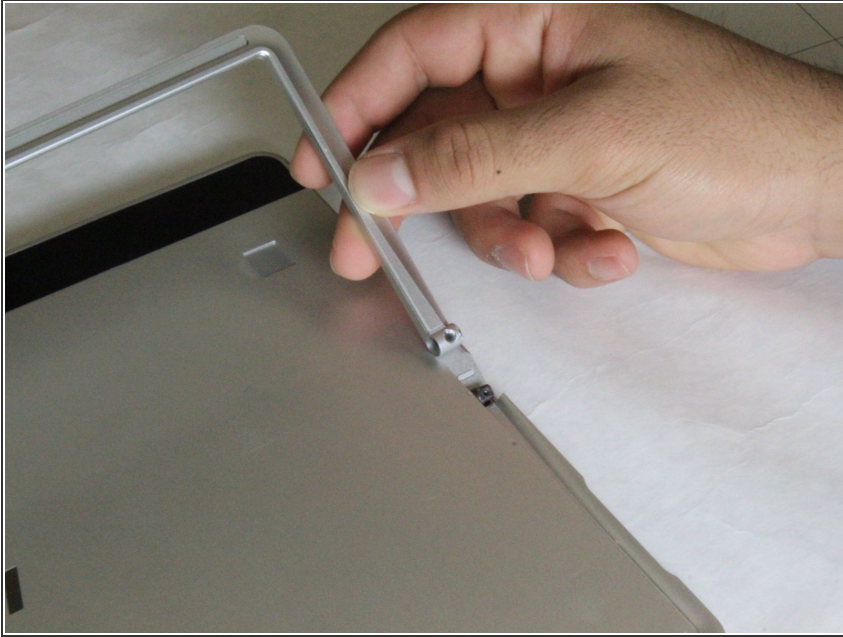

- Gently pull the stand away from the device until you can lift the prop stand away from the device.

To reassemble your device, follow these instructions in reverse order.