




# Samsung Chromebook 3 XE500C13-K02US

## Battery Replacement

This guide illustrates how to remove the Samsung Chromebook 3 XE500C13-K02US battery.

Written By: Mick McCarty

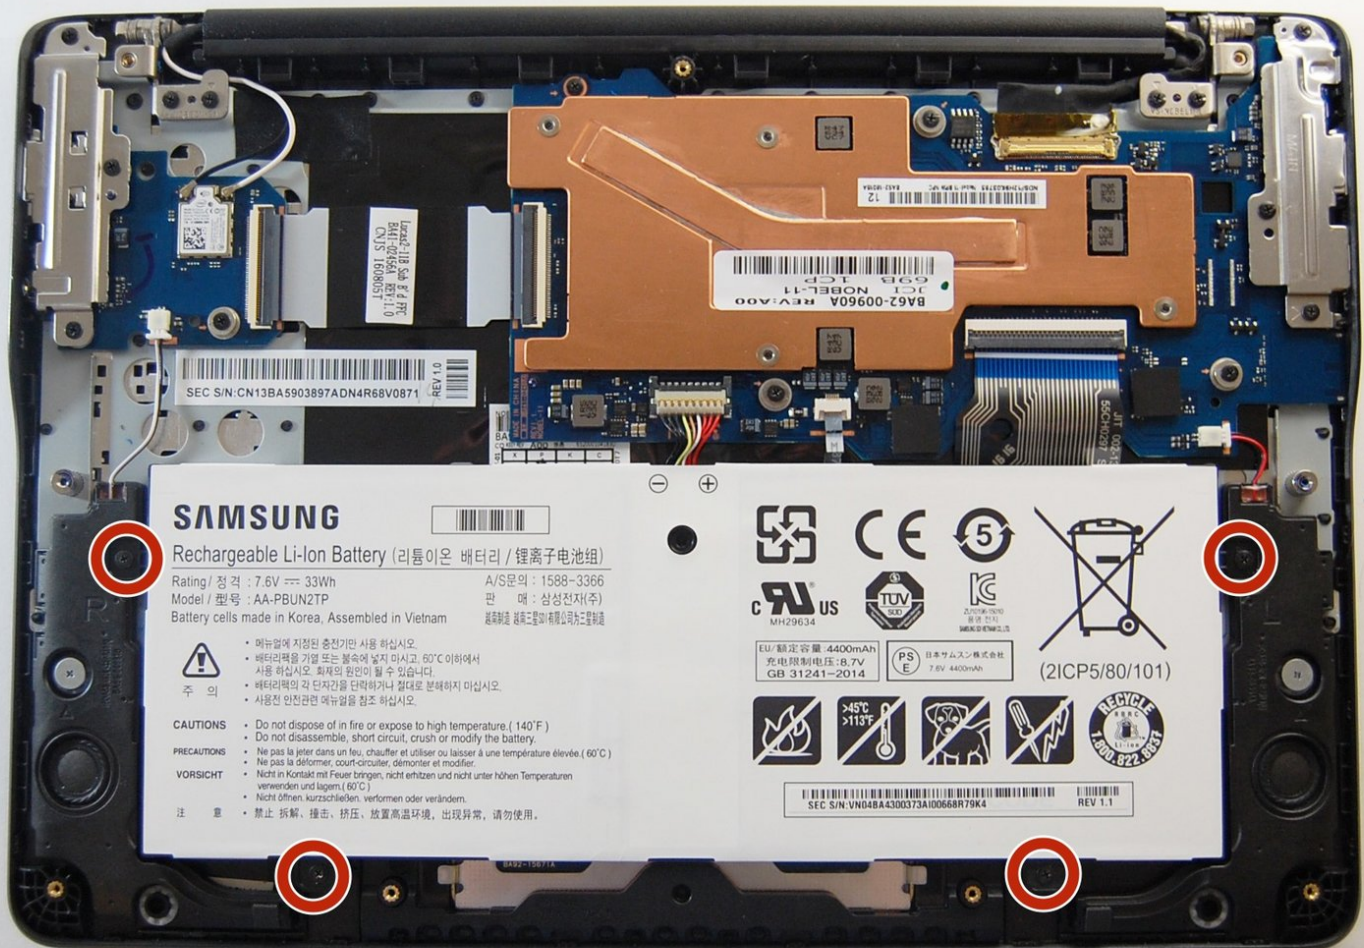

---

## INTRODUCTION

This guide illustrates how to remove the Samsung Chromebook 3 XE500C13-K02US battery. You will need to open the device's back panel as the battery is located inside the case.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Bottom Case



- Place the laptop back cover facing up to expose the screws.
- Using a Phillips #00 screwdriver, remove nine 4.6mm screws from the back casing.

## Step 2



- Use an iFixit opening tool to wedge in between the case and body of the laptop.
- Once the tool is wedged in between the case and laptop, slide it around the entire laptop's edge to disengage the retaining clips.
- ⓘ You should hear a popping sound as you slide the iFixit opening tool around the laptop.



## Step 3



- Remove the cover exposing the inside of the laptop.

## Step 4 — Battery



- Remove the four 4.6mm screws with the Phillips #00 screwdriver.

## Step 5



- Use the spudger to pry underneath the cable and gently lift the connector up.

## Step 6



- Lift the battery up and out of the case.

To reassemble your device, follow these instructions in reverse order.