



Toshiba Satellite L755-S5244 RAM Replacement

How to remove and replace RAM on a Toshiba Satellite L755-S5244.

Written By: Carter Willson



INTRODUCTION

If your computer has become very slow, crashed frequently, or you simply do not have enough RAM to run a program, this guide will show you how to access and replace RAM sticks.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — RAM




- Loosen the two 3mm Phillips #0 screws securing the hard drive panel. The panel will retain the screws, so do not remove them completely.
- Remove the panel from the laptop (the hard drive does not need to be removed).

Step 2



- Loosen the three 3mm Phillips #0 screws that secure the center panel. The screws are retained by the cover, so do not remove them completely.
- Remove the panel by pulling out to the right.
- The two RAM sticks are stacked, one on top of the other.

Step 3

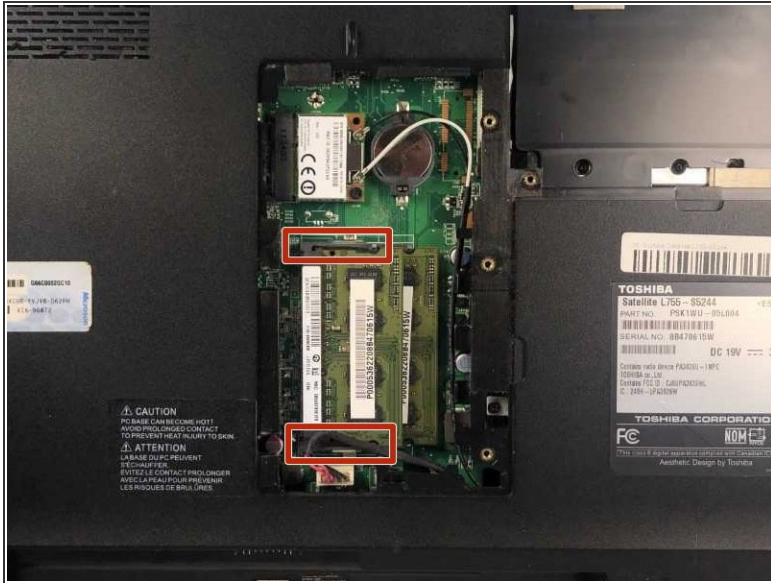

- Each RAM stick has two (2) snap locks, one on each end. In the image the bottom snap is obscured by the cable.

Step 4



- Move the retaining clips out of their locking position, allowing the RAM stick to pop up.
- Lift the free end of the RAM stick until the stick can be freely removed from its slot.

Step 5



- ❗ The RAM stick has a notch that is not centered on the stick. Be sure to take note of the RAM stick's orientation for reinstallation

Step 6



- Repeat for the second RAM stick.

To reassemble your device, follow these instructions in reverse order.