



Samsung Galaxy S Vibrant Midframe Replacement

Replace the midframe of your Samsung Galaxy S Vibrant.

Written By: Krista Purser



INTRODUCTION

Replace the midframe of your Samsung Galaxy S Vibrant or remove the midframe to access the phone's internal components.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery




- Locate the small slit on the bottom edge of the device between the back and front cases.
- Pop the back case off by inserting your finger and pulling the case away from the phone.
 - ⓘ If necessary (it shouldn't be), use the Plastic Opening Tools to pry the back case off.

Step 2

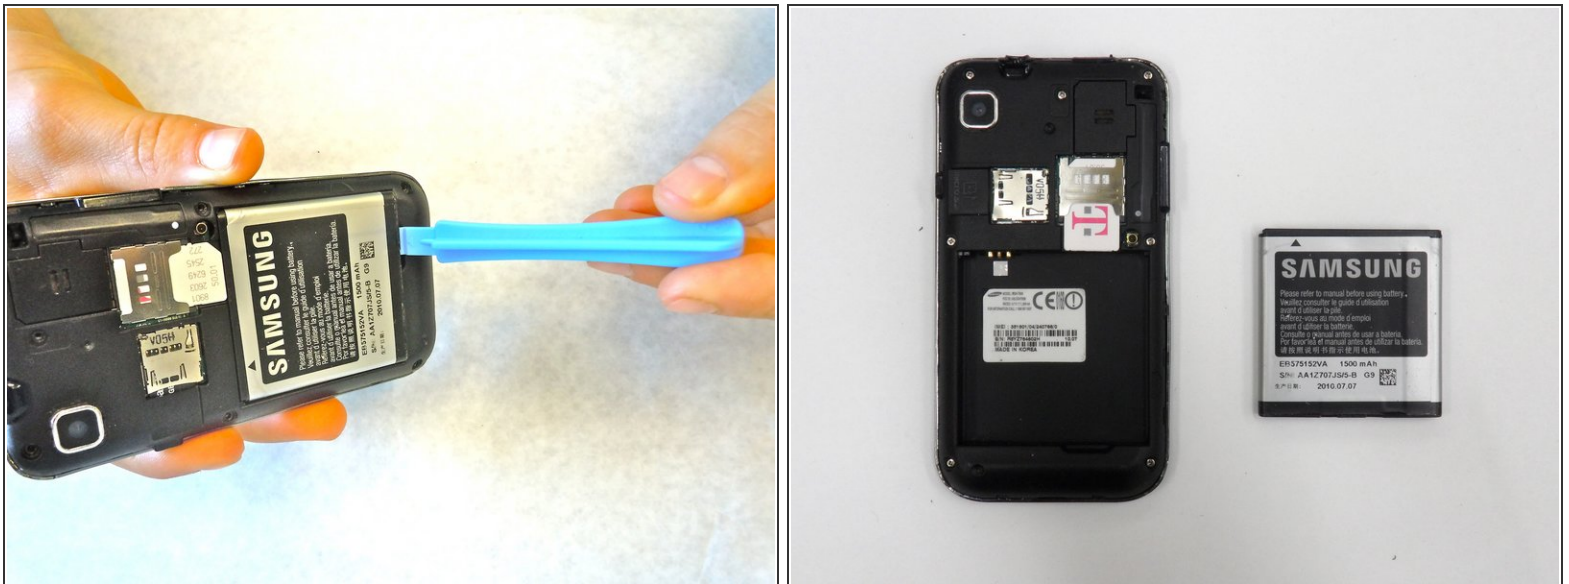

- Remove the battery by pushing the bottom edge of the battery up and away from the phone
 - ⓘ If you would prefer, you may use the Plastic Opening Tools for this step as well.

Step 3 — Midframe

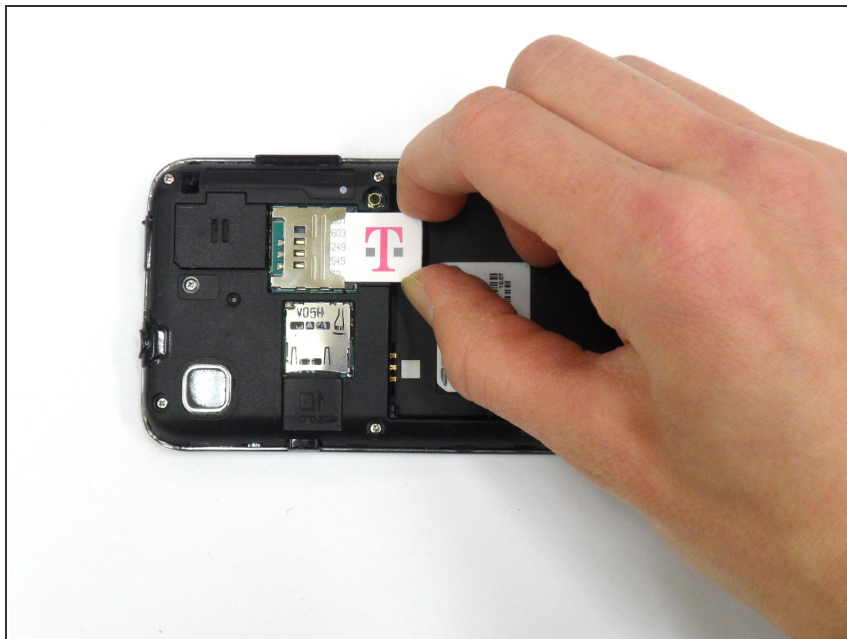

- Remove SIM card by pushing down and away from the slot, then pulling it out toward the bottom edge of the phone.

Step 4




- Remove the seven 4.5 mm Phillips #00 screws along the perimeter of the phone.

Step 5



- Starting near the power button, use a plastic opening tool to disengage the plastic clips securing the midframe.
 - ⚠ Work carefully, and disengage all of the clips before removing the midframe.
- ⓘ The power button and the volume control button on the sides of the phone will fall out when the midframe is removed.

Step 6

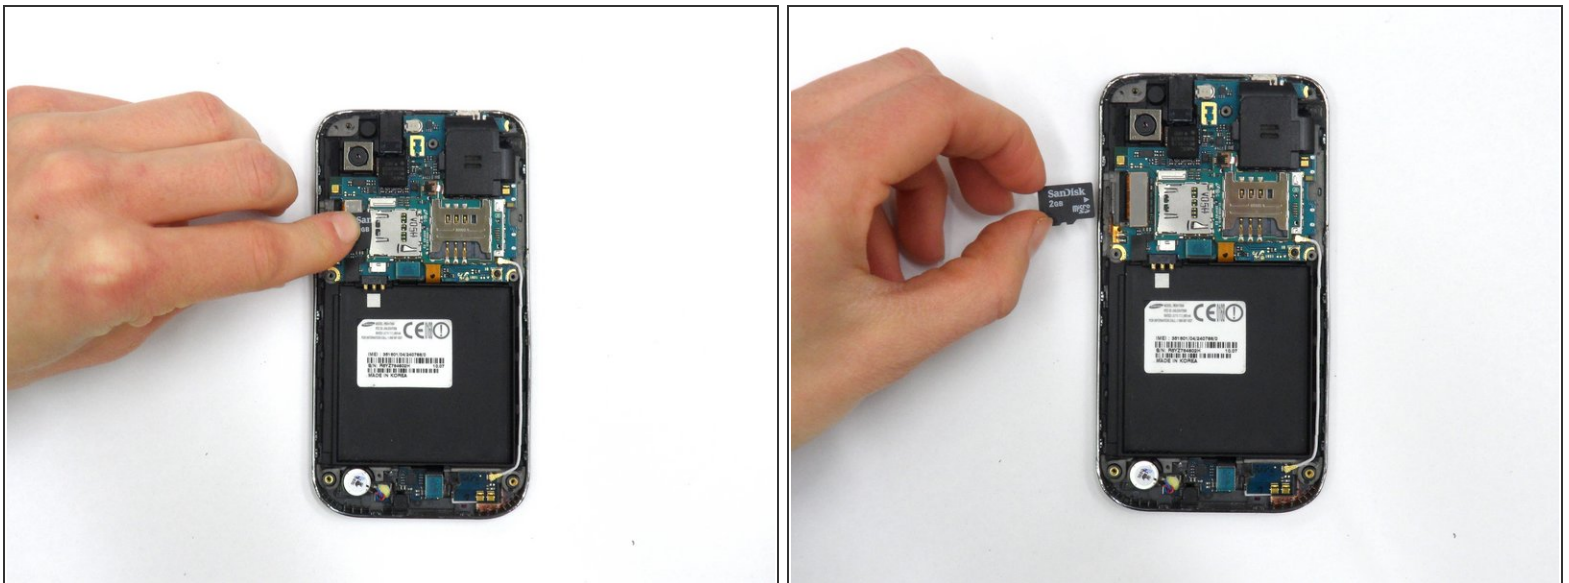

- Slide the SD card out of its slot.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 02:49:19 AM (MST).

