


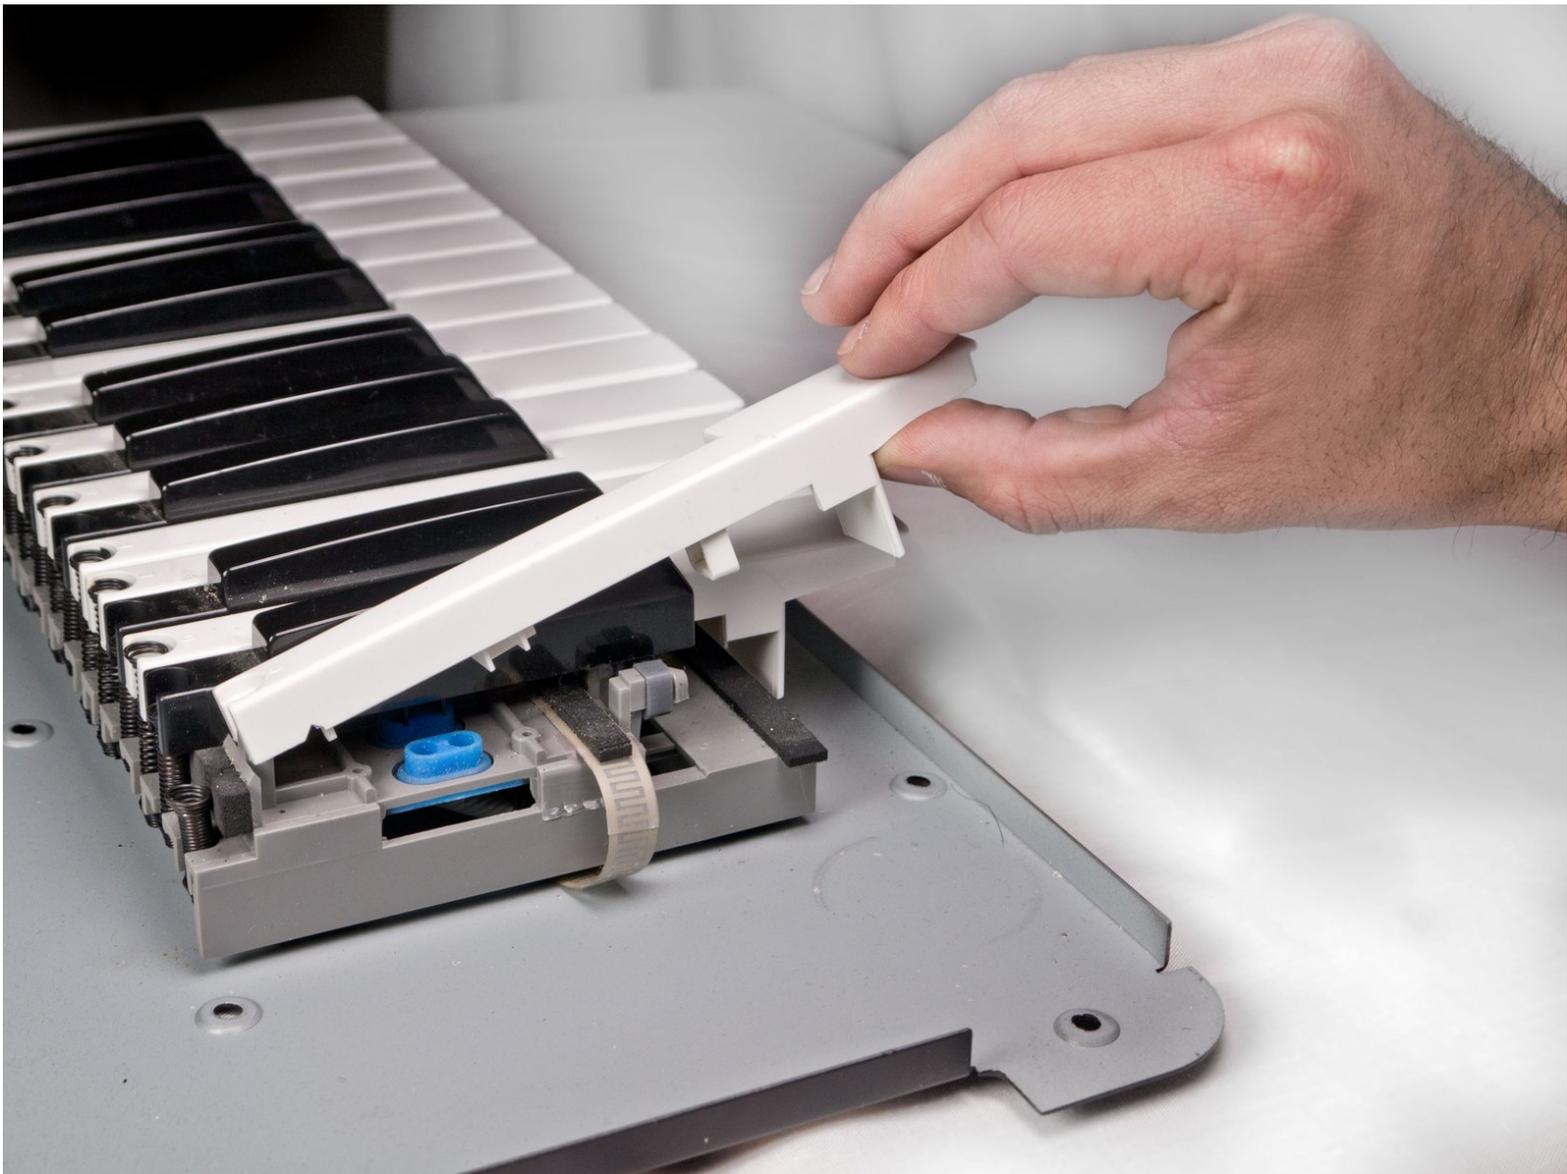

Akai MPK25 Keys Replacement

This guide shows how to replace a key on the keyboard.

Written By: Will Saba



INTRODUCTION

Use this guide if any of the keys are broken, chipped, or stuck.



TOOLS:

- [Large Needle Nose Pliers](#) (1)
- [Phillips #2 Screwdriver](#) (1)



PARTS:

- [Akai MPK Replacement Spare Key](#) (1)
The same note that is being replaced

Step 1 — Face Plate



- Remove all the selector knob covers by pulling them off.

Step 2



- Using needle nose pliers, remove the washers from the four corner selector knobs.

Step 3



- Flip the device over. Using a Philips #2 screw driver, remove the fourteen 10.3 mm black screws holding the back panel in place.

Step 4



- Carefully flip the device to the front making sure you secure the face plate and the chassis together.
- ⚠ Please use care in following the step above to avoid ripping the ribbon cables connecting the two sides.

Step 5



- Rotate the device 180 degrees and carefully remove the face plate by slightly lifting the screen side towards you and then sliding the bottom out from under the keys.


⚠ Use care when doing the step above so that the ribbon connectors which connect the top of the chassis to the top of the face plate are not damaged.

Step 6 — Keys



- Using needle nose pliers, grip the top of the spring coil, that is holding down the key, and gently lift the spring away from the key.

Step 7

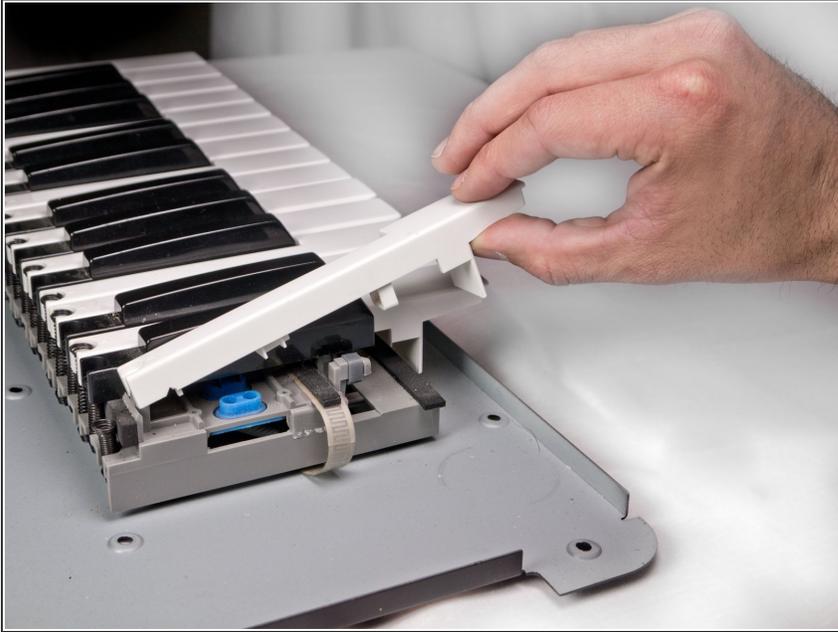

- Lift the key from the front of the keyboard towards the back in order to remove it completely.

To reassemble the keyboard and close up the case, follow these instructions in reverse order.