




Billy Goat Brush Cutter BC2600HHF 2015 Rear Guard Replacement

How to remove and replace the rear guard/cover to access internal components for service.

Written By: Jeff Suovanen

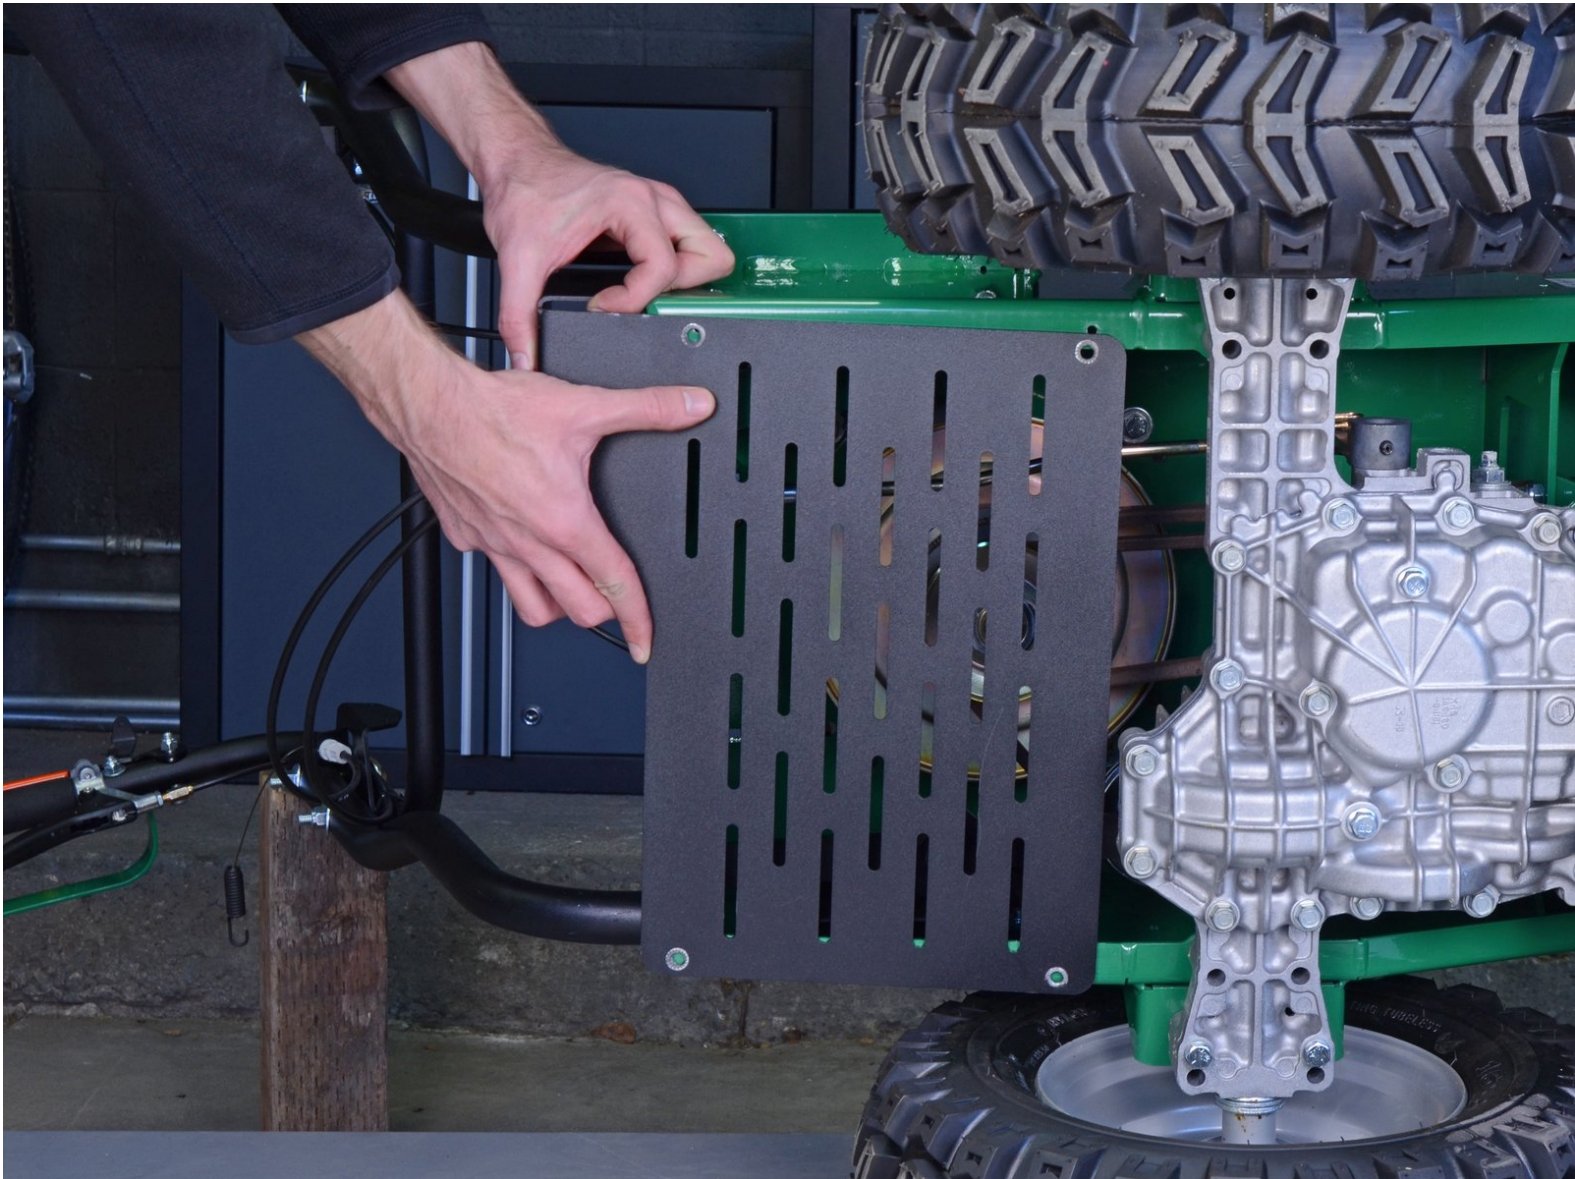

INTRODUCTION

Instructions for removing the rear guard/cover to access internal components for service.



TOOLS:


- [1/2" Socket](#) (1)
- [3/8" Socket](#) (1)
- [Socket Wrench](#) (1)



PARTS:

- [Billygoat Guard Rear Hydro Bc26 501295](#) (1)

Step 1 — Spark Plug Disconnection

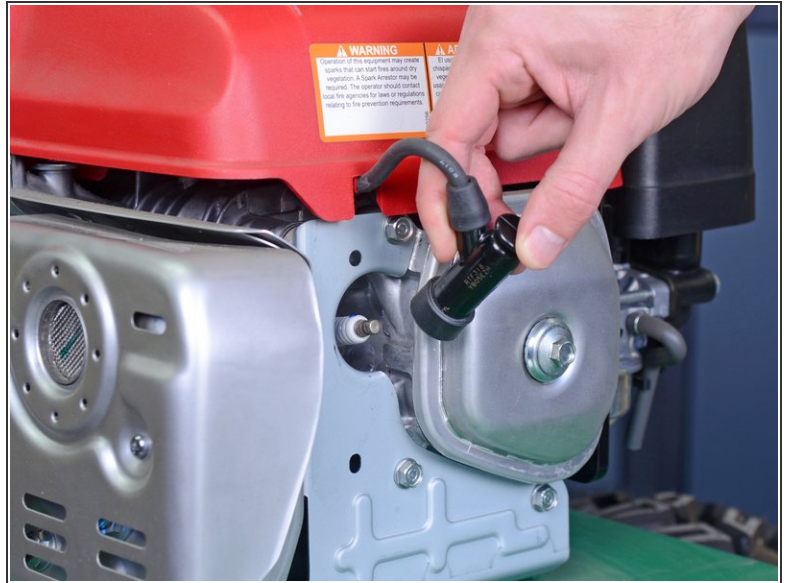



- Grab the plastic housing at the end of the spark plug wire.
- Pull firmly to disconnect the wire from the spark plug.

Step 2 — Rear Guard






- Use a 1/2" socket or wrench to remove the two 26 mm bolts securing the rear guard to the back end of the brush cutter.

Step 3

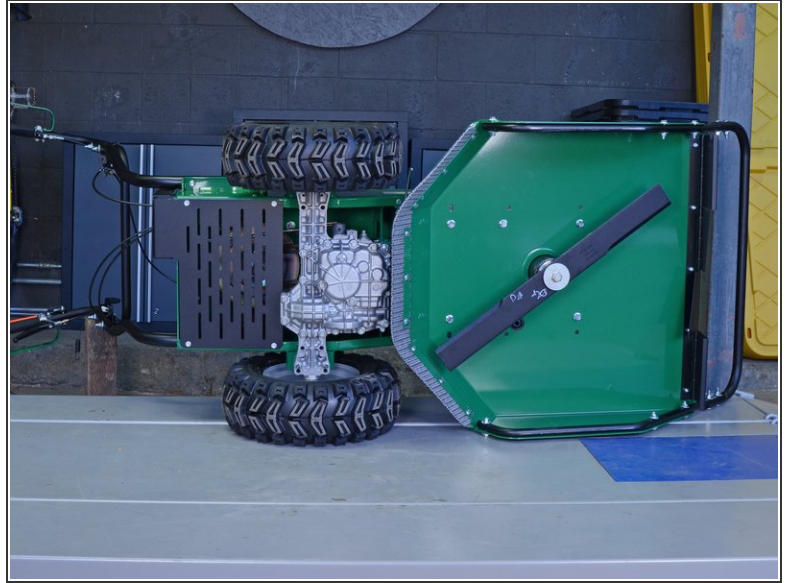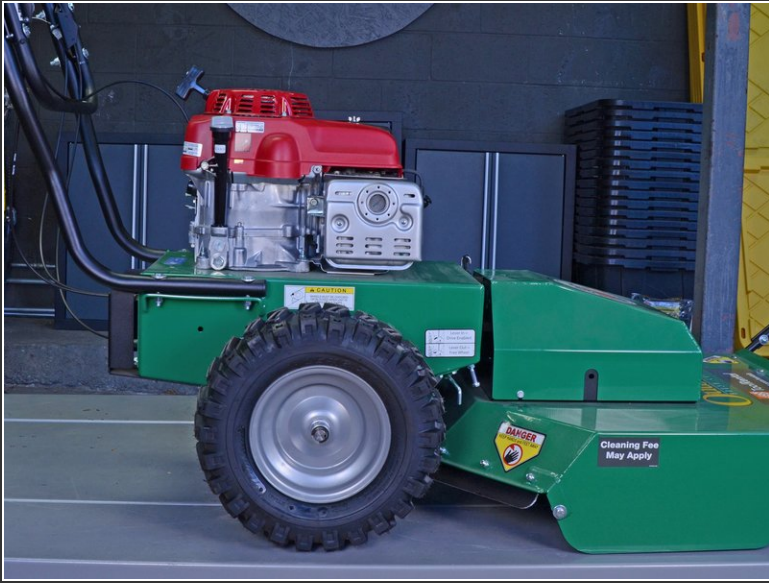

- ⚠ The brush cutter is heavy—get help before attempting to lift it.
- ⚠ If you choose to tip the brush cutter onto its side, first drain the oil and gas.
 - Raise and support the back end of the brush cutter—or tip it carefully onto its side—in order to access the bottom cover.

Step 4

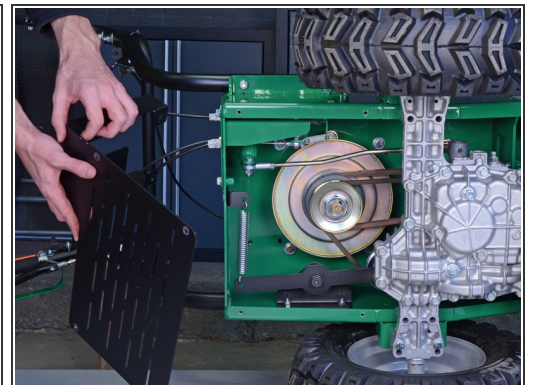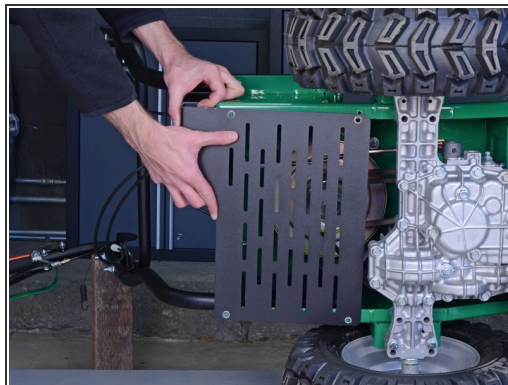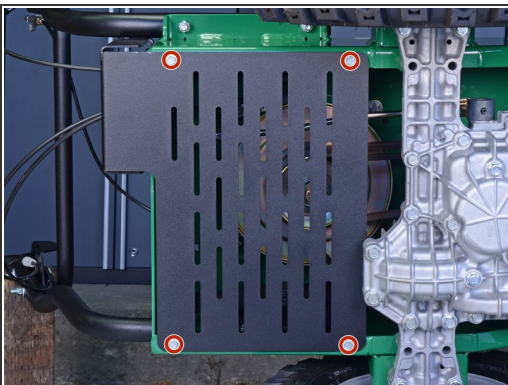

- Use a 3/8" socket or wrench to remove the four 21 mm bolts securing the rear guard.
- Remove the guard.

To reassemble your device, follow these instructions in reverse order.