

Sony Bloggie 3D Player USB Drive Replacement

The USB is a very important part of the Sony...

Written By: Craig Sweet



INTRODUCTION

The USB is a very important part of the Sony Bloggie as it is the only way to get your movies from the camera to a computer. This guide will show you how to install a new USB drive in the Sony Bloggie 3D.


TOOLS:

Phillips #00 Screwdriver (1) iFixit Opening Tool (1) Spudger (1) Tweezers (1)

Step 1 — Front Cover



 Remove the two 2.5mm Phillips #00 screws using the Philips #00 screwdriver.

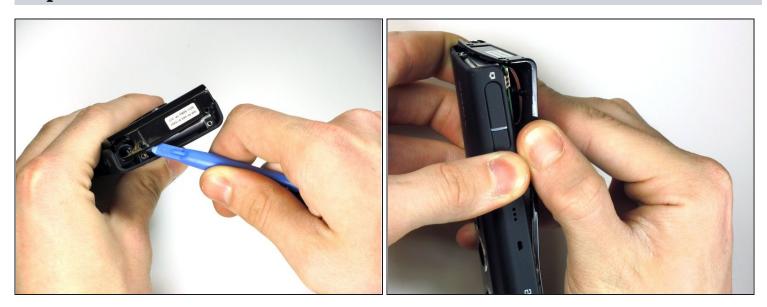


- Use a plastic opening tool to pry the cover open.
- After the the cover is partly open as shown, remove the cover with your hands.

Step 3 — Back Cover




• Using your hand, or a pair of <u>tweezers</u>, remove the ZIF connector by gently pulling it out of the dock on the circuit board.



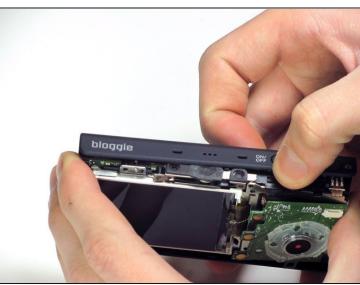

- Use a plastic opening tool to loosen the back cover off the device.
- Once the back cover is loose, remove it gently by hand.


Step 5 — USB Drive

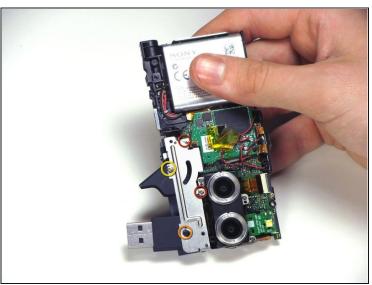





- Once the back cover is removed, by using the opening tool, remove the following screws using a Phillips #00 screwdriver.
 - Two 4.0mm Phillips #00 screws
 - One 8.0mm Phillips #00 screw
 - One 9.5mm Phillips #00 screw


Step 6

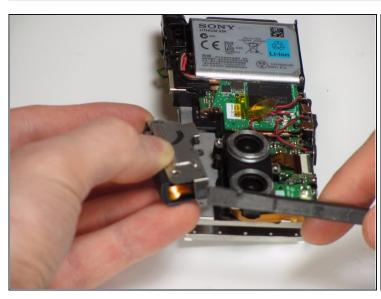

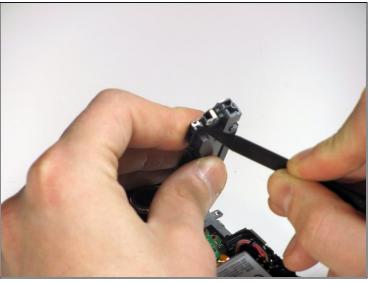

• Using a spudger, remove the clips of the metal casing from each end of the USB drive.

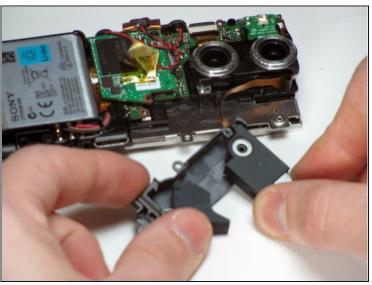

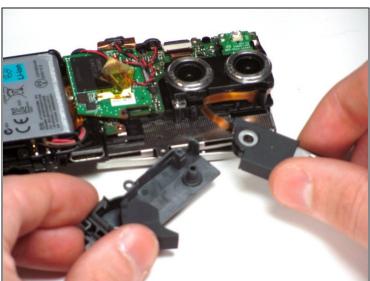


• Carefully lift the USB drive off of the peg that it is attached to.

Step 8



• Now that the USB component is on its own, untangle the ribbon from inside the device.

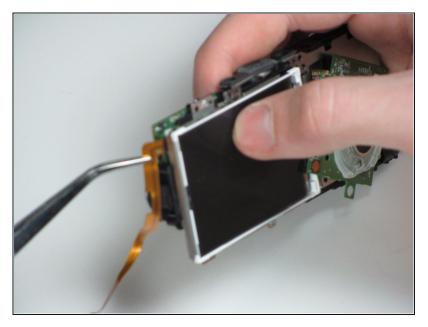

 Now remove the ZIF connector from the device using a pair of tweezers.

To reassemble your device, follow these instructions in reverse order.