



# Sony BDP-s7200 Back Cover Replacement

This guide will help you to replace the back cover of the Sony BDP-s7200

Written By: Mitchell Novak



# INTRODUCTION

Sometimes you may need to replace the back cover to prevent excess dust or other material from entering the device and potentially damaging other components. This guide will show you how to replace the back cover in case yours is damaged beyond repair.



## TOOLS:

- [Phillips #2 Screwdriver](#) (1)
  - [iFixit Opening Picks set of 6](#) (4)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Back Cover



- Remove the disk tray cover from the device.

## Step 2



- Using the Phillips #2 Screwdriver, remove the five 9mm from the bottom of the device.
- Remove the metal cover.

### Step 3



- Using the Phillips #2 Screwdriver, remove the six 9mm screws from the back of the device.

### Step 4



- Pull off the back panel and remove it from the device.

To reassemble your device, follow these instructions in reverse order.