



# Lenovo Ideapad 320-15IAP Battery Replacement

How to replace the battery of a Lenovo Ideapad 320-15IAP

Written By: Franco Criscola



## INTRODUCTION

The purpose of this guide is to demonstrate how to replace the battery of your Lenovo Ideapad 350-15IAP. This replacement guide is very simple and requires very little technical knowledge to complete. In summary, you will be using a Phillip's head screwdriver to remove the case of the laptop. The battery will be immediately exposed and can be removed by simply removing four screws.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)




### PARTS:

- [Lenovo IdeaPad 320-14, 520-15, V320-17 Replacement Battery](#) (1)
- [Lenovo IdeaPad 320-14, 520-15, V320-17 Battery - Genuine](#) (1)



## Step 1 — Battery

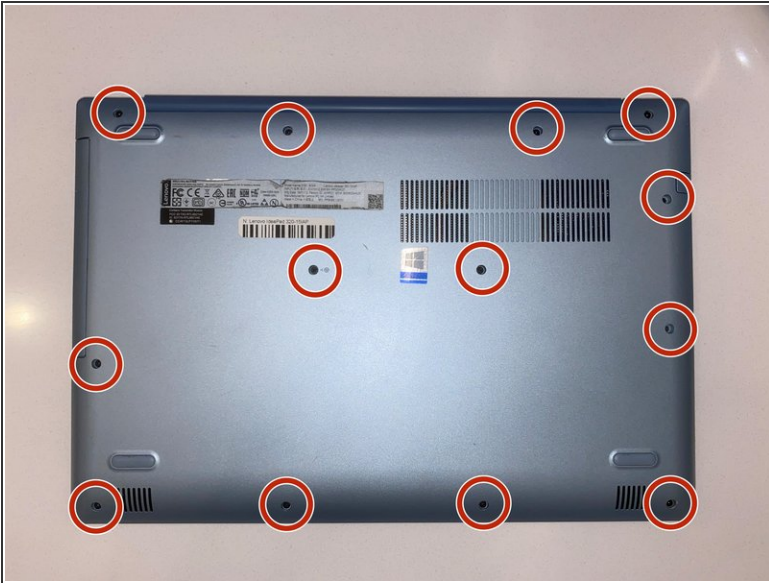

- ❗ Before you begin, be sure to turn off your laptop and unplug it from the outlet.
- Using a Phillips #0 screwdriver, unscrew all thirteen 6.5 mm screws from the back case.

## Step 2




- Pull the CD drive outwards with an opening tool until it pops out as shown. It is possible you have to apply a substantial amount of force so watch your fingers while doing so.
- Remove the CD drive.

## Step 3



- Lift up the cover using the opening tool on different spots along the side of the laptop.


## Step 4

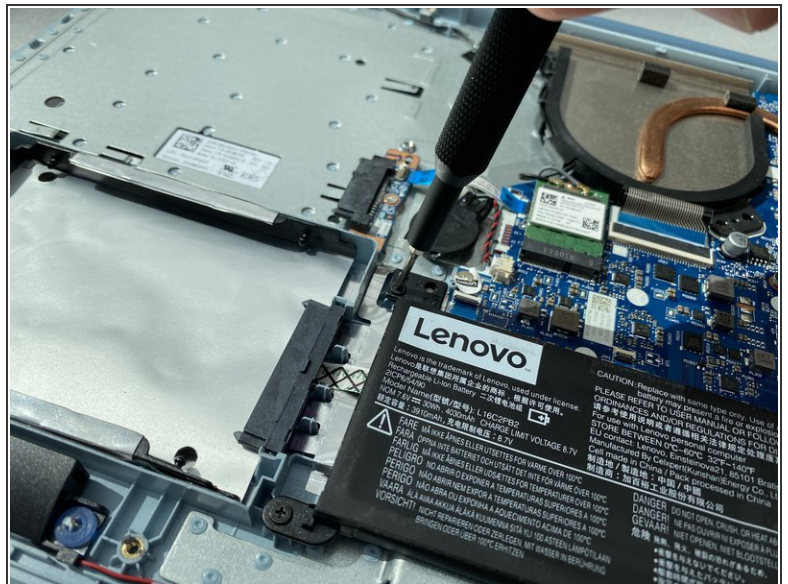

- Using a Phillips #0 screwdriver to unscrew the four 5.5 mm screws securing the battery.




## Step 5

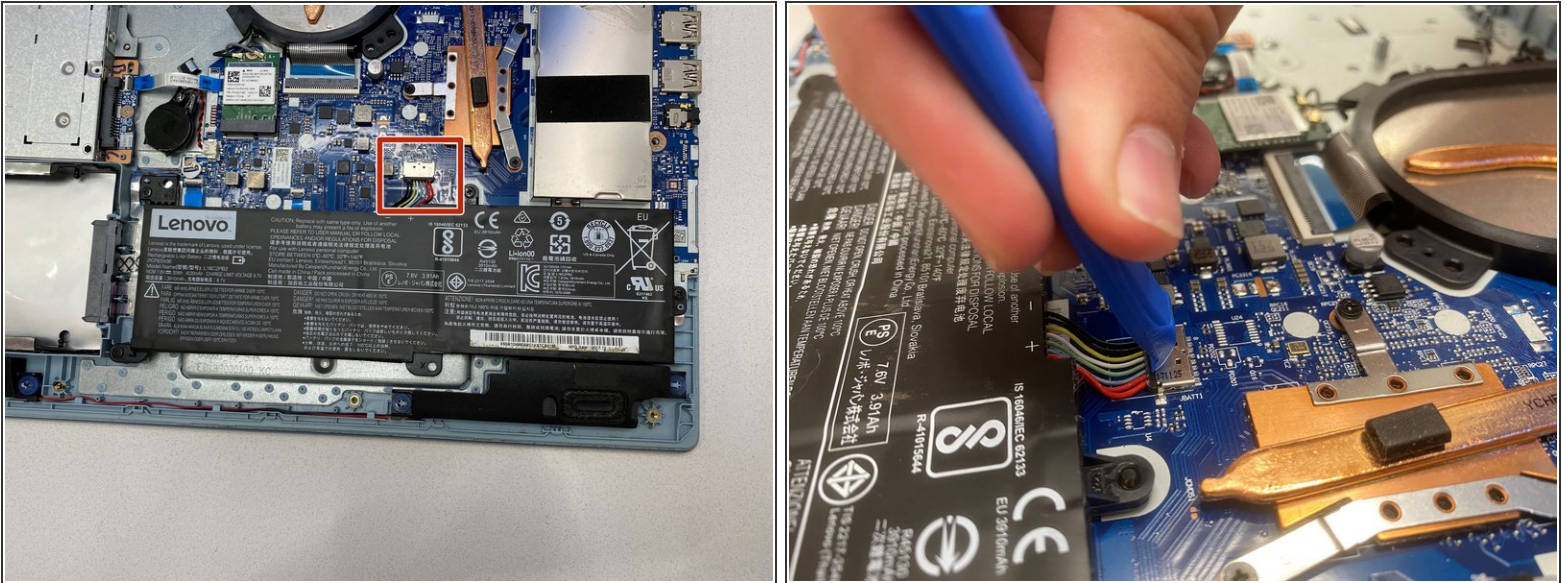

- Disconnect the battery cable from its motherboard socket by gently pulling it towards the battery.  
⚠ Pull parallel to the battery, not straight up.

## Step 6

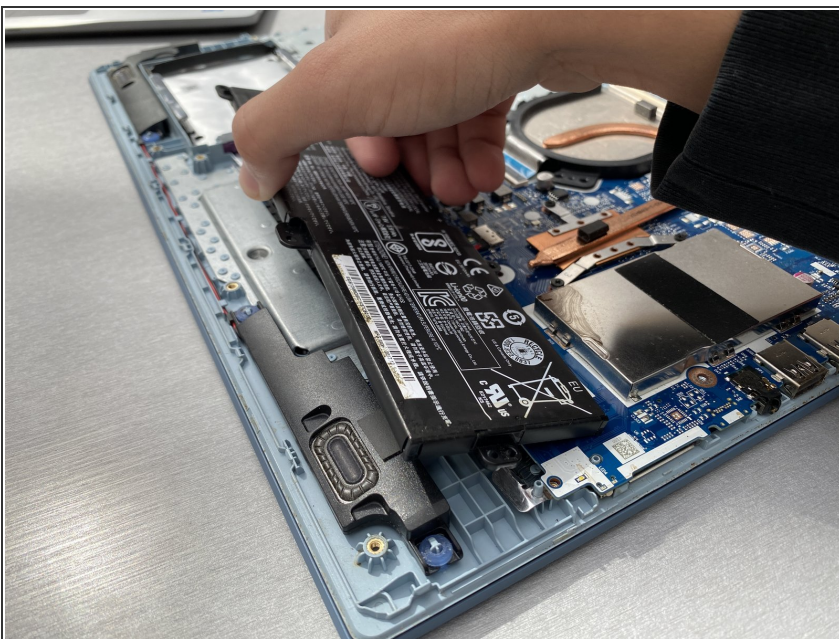

- Remove the battery.

To reassemble your device, follow these instructions in reverse order.

For optimal performance, after completing this guide, [calibrate](#) your newly installed battery.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Try some [basic troubleshooting](#), or ask our [Answers community](#) for help.