



Panasonic Lumix DMC-ZS35 Back Casing Replacement

A guide on how to remove and/or replace the back casing of the Panasonic Lumix DMC-ZS35 camera.

Written By: John Schug



INTRODUCTION

If your Lumix has a damaged back casing, or if there is an issue with your internal components (such as your flash, lens, motherboard, LCD screen, and more), it'll be necessary to either briefly remove or replace the Lumix's back casing.

Before beginning, make sure to turn off your camera completely and remove its battery.



TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Casing



- Remove the six 4mm screws located on the side and bottom of the camera casing using a Phillips #000 screwdriver.

Step 2



- Use a plastic opening tool to carefully separate the back casing from the main body of the camera. It's advised to run along the entire "seam" of the casing and the camera with the tool to ensure full separation.

Step 3



- Gently pry apart the back casing from the body of the camera. It's recommended to apply as minimal force as is necessary to prevent unintended damage to the camera or the casing.

To reassemble your device, follow these instructions in reverse order.