


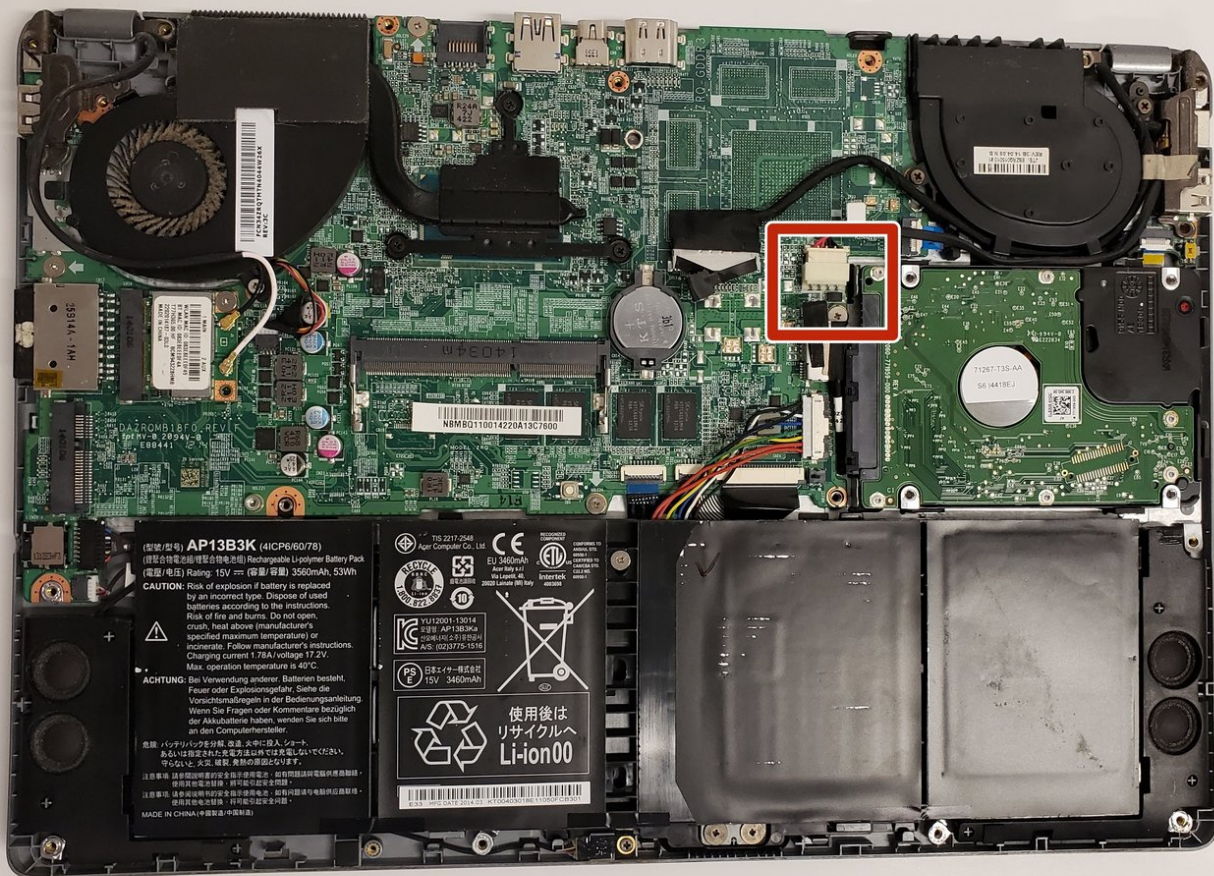

# Acer Aspire V5-473P-5602 Secondary Cooling Fan Replacement

This guide will show how to replace the cooling...

Written By: Thuy Tran



---

## INTRODUCTION

This guide will show how to replace the cooling fan on the Acer Aspire V5-473P-5602. This part helps maintain the temperature of your machine. If your machine is displaying a message similar to “Cooling System,” warmer than usual, or making noise, then you might want to consider replacing your cooling fan. This could be caused by a clog in the cooling system from dust, an accidental drop, or a spill.





### TOOLS:

- [iFixit Opening Tool](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-




## Step 1 — Back Panel

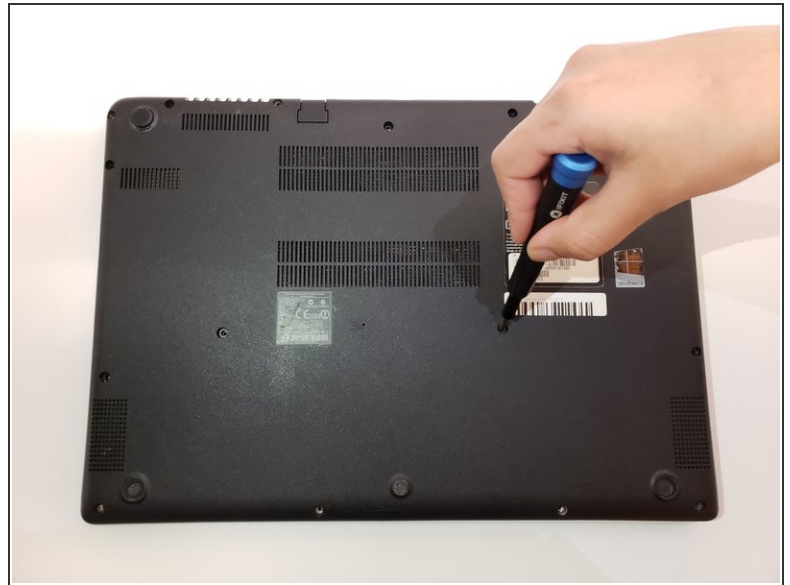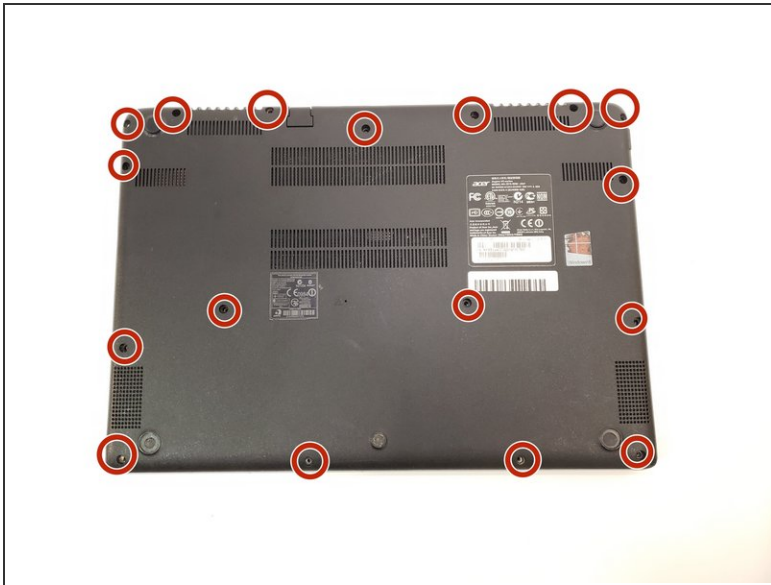


- Flip the laptop over so the back panel is facing upwards.
- Use the Phillips #0 screwdriver to remove seventeen 2.5mm screws.
- Remove the back panel from the laptop using an iFixit opening tool.

## Step 2 — Secondary Cooling Fan

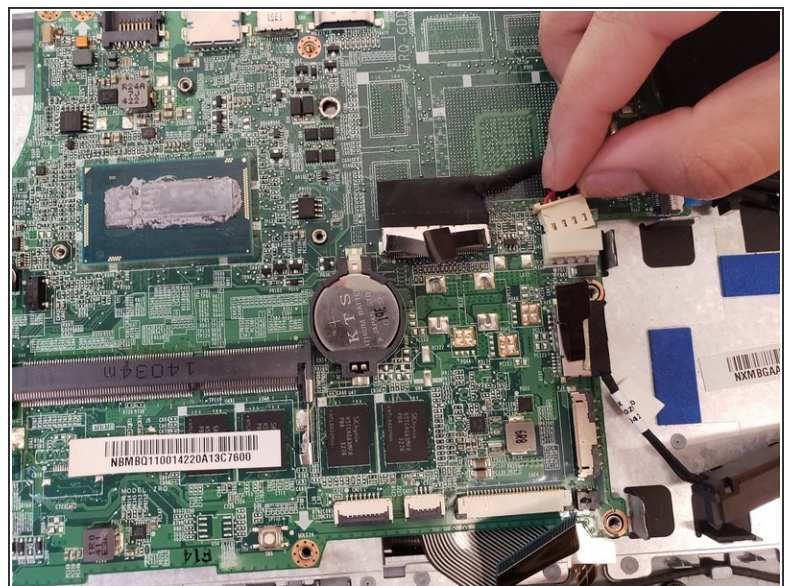

- Unplug the cable that connects to the fan to motherboard.

## Step 3

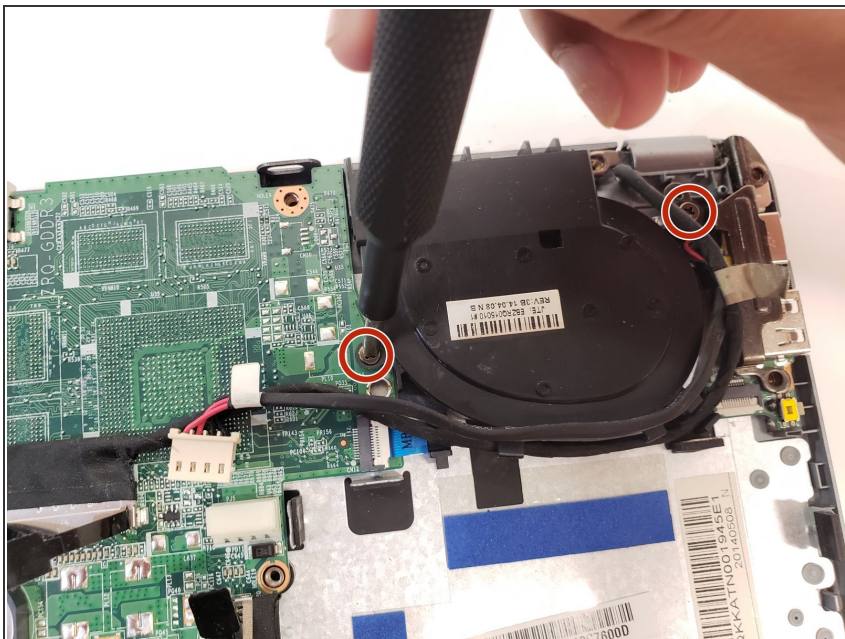

- Remove the two Phillips #0 screws that secure the fan to the base.
- Remove the fan from the laptop.

To reassemble your device, follow these instructions in reverse order.