



Acer Aspire V5-473P-5602 Hard Drive Replacement

The hard drive is a storage device with 500 GB...

Written By: Noora Al-loos



INTRODUCTION

The hard drive is a storage device with 500 GB that can store data for a long time.

By following this guide you will be able to remove the Acer Aspire V5-473P-5602 hard drive in order to replace it or access other parts.



TOOLS:

 
 
- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)



PARTS:


- [1 TB SSD](#) (1)
- [250 GB SSD](#) (1)
- [Crucial MX500 500 GB SSD](#) (1)
- [2 TB SSD](#) (1)

Step 1 — Back Panel

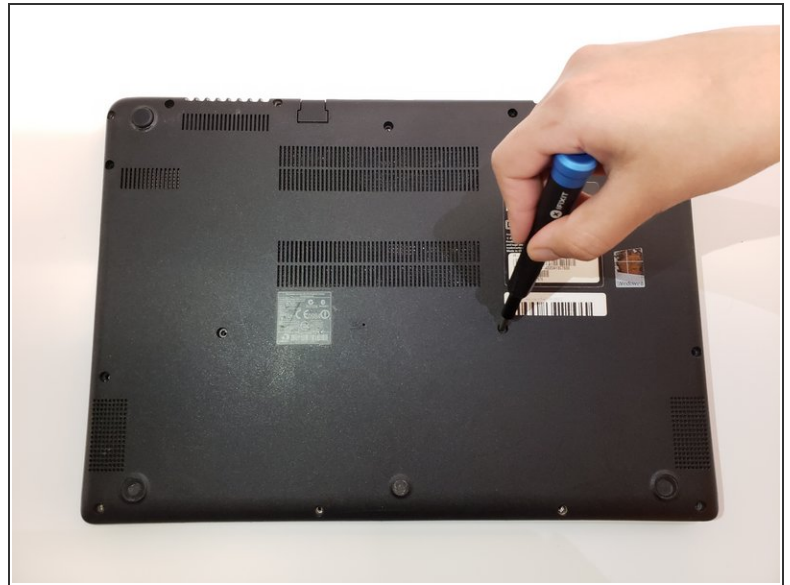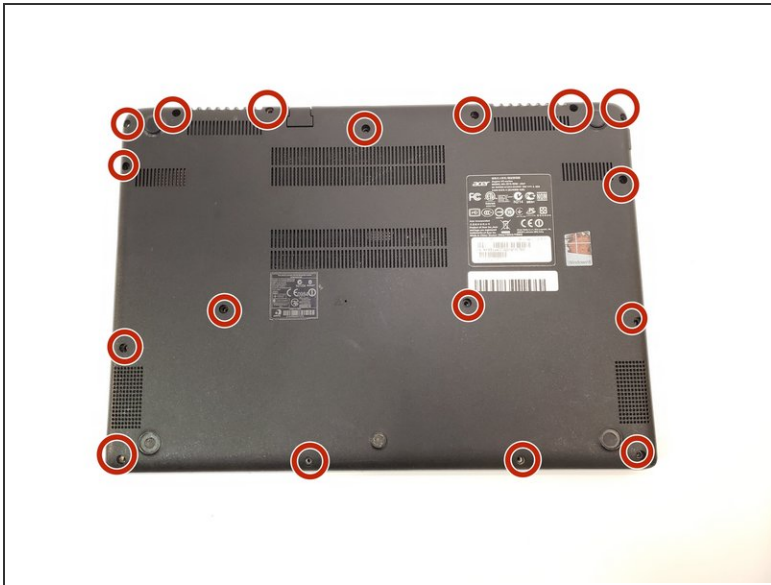


- Flip the laptop over so the back panel is facing upwards.
- Use the Phillips #0 screwdriver to remove seventeen 2.5mm screws.
- Remove the back panel from the laptop using an iFixit opening tool.

 Step 2 — Hard Drive

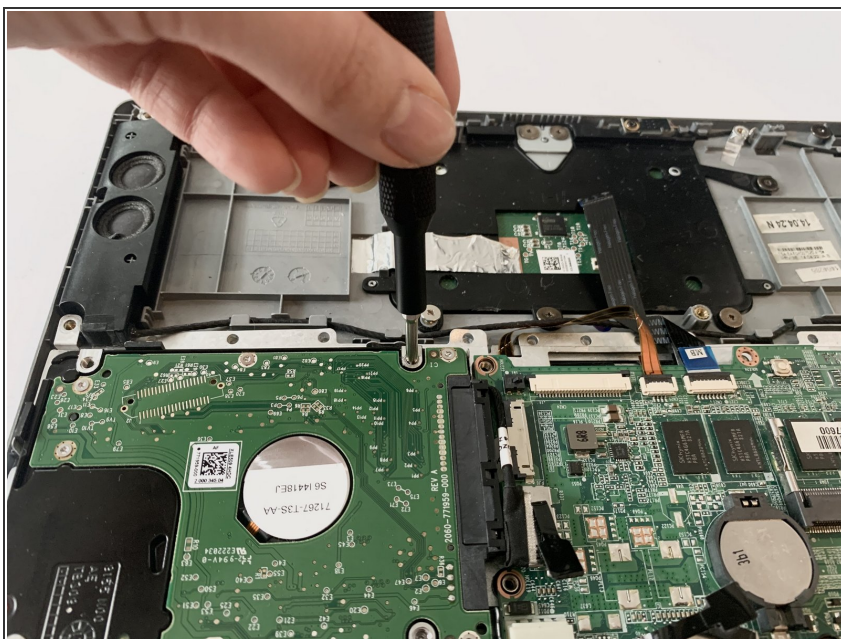

- Remove the four Phillips #0 screws from the hard drive.

 Step 3

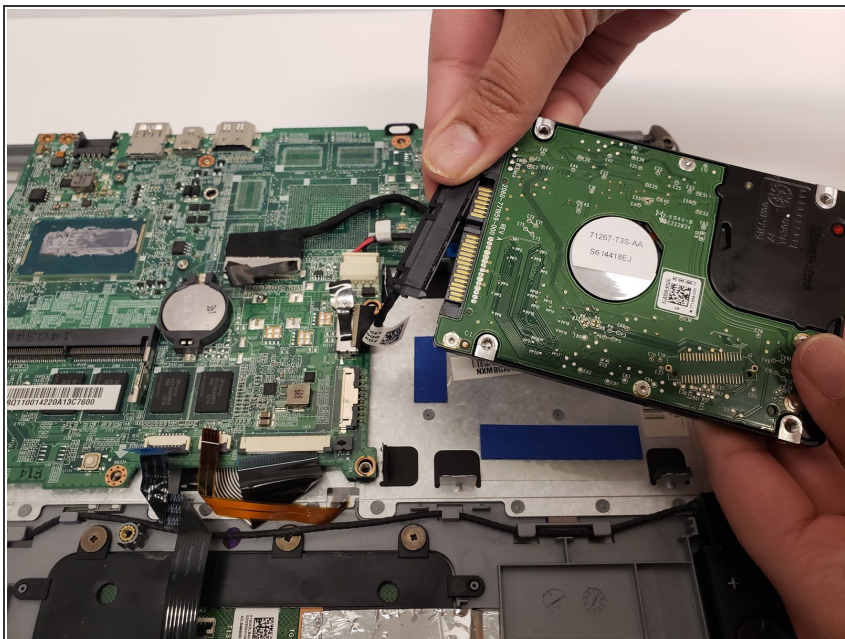

- Gently unplug the hard drive connector.

Step 4



- Remove the hard drive from the laptop.

To reassemble your device, follow these instructions in reverse order.