



# 2003-2008 Honda Pilot Battery Replacement

This guide will show you how to replace the car battery in the 2003-2008 Honda Pilot.

Written By: Mitchell Baker



## INTRODUCTION

You might have found yourself in a situation where your car dies. It happens to everyone at some point. When this happens, the first thing to do is to try and jump it off. If this doesn't work, it's likely that your battery is dead. In this case, you will need to replace the battery of your car. This guide will show you how to replace the dead battery with a new one in a 2003-2008 Honda Pilot.



### TOOLS:

- [Slip Joint Pliers](#) (1)



### PARTS:

- [12V Car Battery](#) (1)



## Step 1 — Battery



- On the inside of the driver's side door is a latch that pops open the hood of the car. Pull the latch.
- Underneath the hood is another latch to open the hood. Pull this latch and lift up on the hood of the car, revealing the engine.
- Use the arm to keep the hood of the car propped open.


## Step 2



- The car battery is placed on the right side, under the hood.



### Step 3

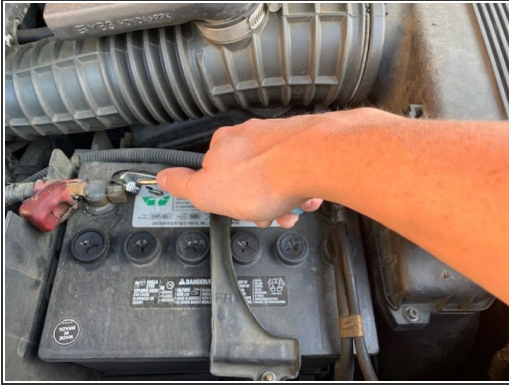

- Use the pliers to loosen the negative (-) cable from the battery. Then loosen the positive (+) cable from the battery.
- Gently remove the battery, and place it aside.

### Step 4



- Take your new battery and place it where the old one was. Secure it into place with the plate, connect the negative (-) cable to battery. Then connect the positive (+) cable to battery.

There are several places to take your old car battery to be recycled. One of the most convenient places to take your battery to be recycled is AutoZone. Simply place your dead car battery in a plastic bag and drop it off for AutoZone to recycle – free of charge