



## DualShock 4 CHU-ZCT2U Disassembly

This guide will walk you through the steps to...

Written By: Mintyboi 88



# INTRODUCTION

This guide will walk you through the steps to disassemble the PlayStation 4's DualShock 4, model CHU-ZCT2U. This might be necessary to replace anything from the internal rechargeable battery to the joysticks and anything in between.

---

## 🔧 TOOLS:

Phillips #00 Screwdriver (1)

Spudger (1)

Tweezers (1)

---

## Step 1 — First Screws



- All the screws are the same in the controller (Phillips's head).

## Step 2 — Opening the Case



- Use a plastic spudger to open the case. Try not to scratch the plastic.

## Step 3 — Separate the 2 halves



- Be careful opening the case because there is a ribbon cable holding the 3 halves together.
- ① The plastic for the lightbar will look different from mine because it's fragile and it broke.



## Step 4 — Battery



- Remove the battery and the screw underneath it.

## Step 5 — Touchpad Ribbon Cable



- The ribbon cable slots through the rectangular hole in the plastic beneath.

## Step 6 — Board



- Remove the board.

## Step 7 — You Are Done!



- You're finished with your DualShock 4 disassembly!

---

To reassemble your device, follow these instructions in reverse order. If there are any issues, please tell me as this is my first guide