



Dell Latitude E7240 Ultrabook Battery Replacement

Written By: Jordon Dozier



Step 1 — Removing the battery



- Slide the release latch to unlock the battery.
- Lift the battery from the computer.

Step 2 — Installing the Battery



- Slide the battery into its slot until it clicks into place.

To reassemble your device, follow these instructions in reverse order.