



Dell Latitude E6320 Battery Replacement

This is a guide on how to replace the battery for this DELL computer.

Written By: Hezekiah Brown



Step 1 — Slide latches to unlock battery



**⚠ Shut down your computer.
Disconnect all power sources before
opening the computer cover or
panels.**

- Slide the battery latches off to unlock the battery

Step 2 — Slide out and remove battery.



- Slide the battery out and remove it from the computer.

Step 3 — Slide battery into slot.



- Slide the battery into its slot until it clicks.

To reassemble your device, follow these instructions in reverse order.