 


 


# Dell Inspiron M511R Battery Replacement

Written By: Jordon Dozier

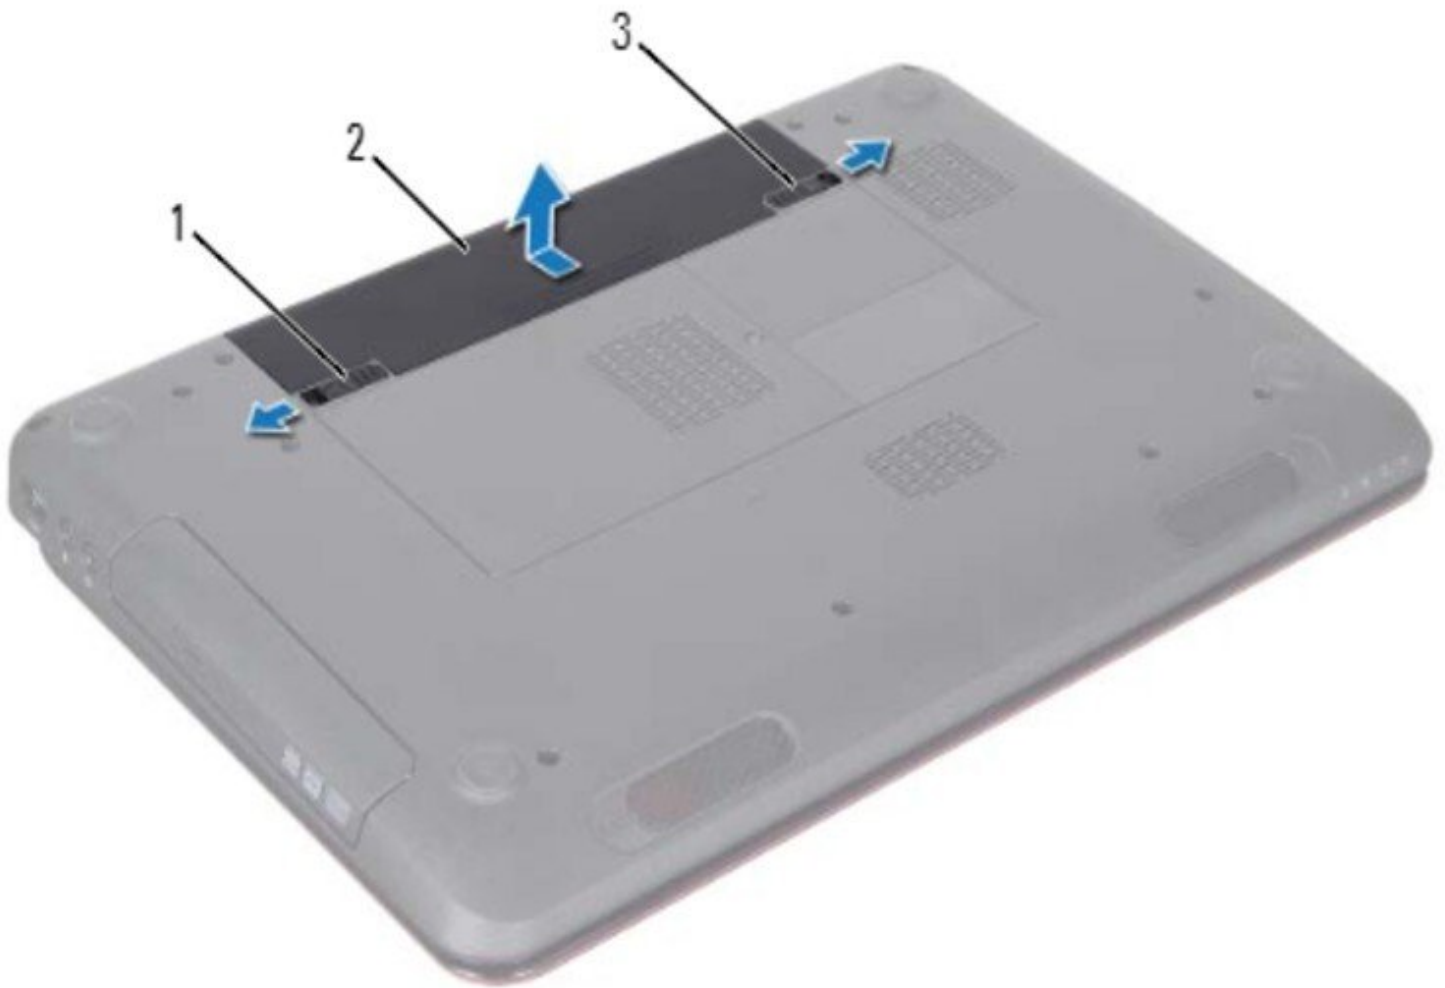

## Step 1 — REMOVE BATTERY

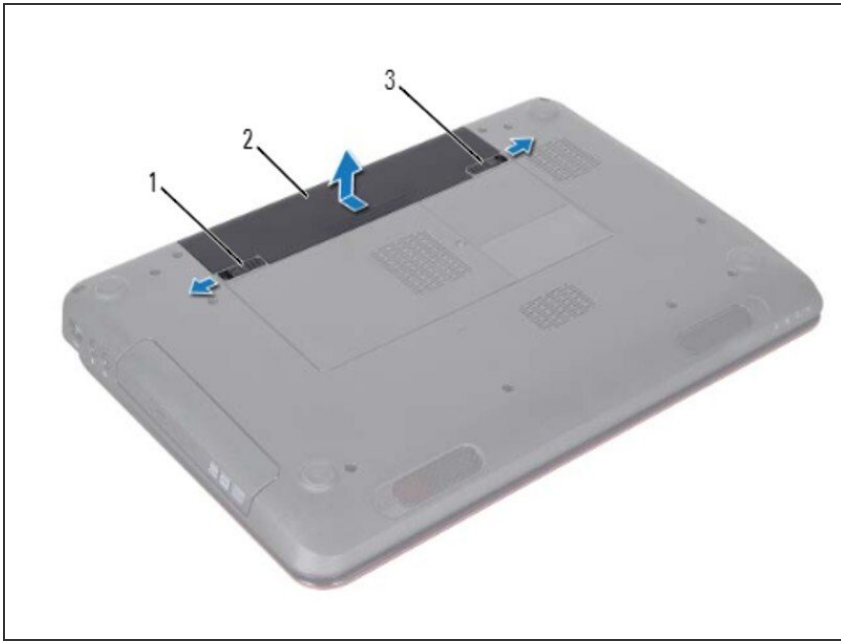

- Shut down computers and turn it over
- Slide the battery release latch and the battery lock latch to the unlock positions
- Slide and lift the battery out of the battery bay.

## Step 2 — REPLACE BATTERY



- Slide the battery into the battery bay until it clicks into place
- Slide the battery lock latch to the lock position

To reassemble your device, follow these instructions in reverse order.