



Dell Inspiron M511R Top Cover Replacement

Written By: Jordon Dozier



Step 1 — REMOVING COVER



1 top cover 2 release button

- Align the top cover to the display back cover
- Slide the top cover until it clicks into place. Ensure that there are no gaps between the top cover and display back cover.

Step 2 — REPLACE TOP COVER



- Align the top cover to the display back cover
- Slide the top cover until it clicks into place. Ensure that there are no gaps between the top cover and display back cover.

To reassemble your device, follow these instructions in reverse order.