




# Dell Inspiron M511R Module Cover Replacement

Written By: Jordon Dozier




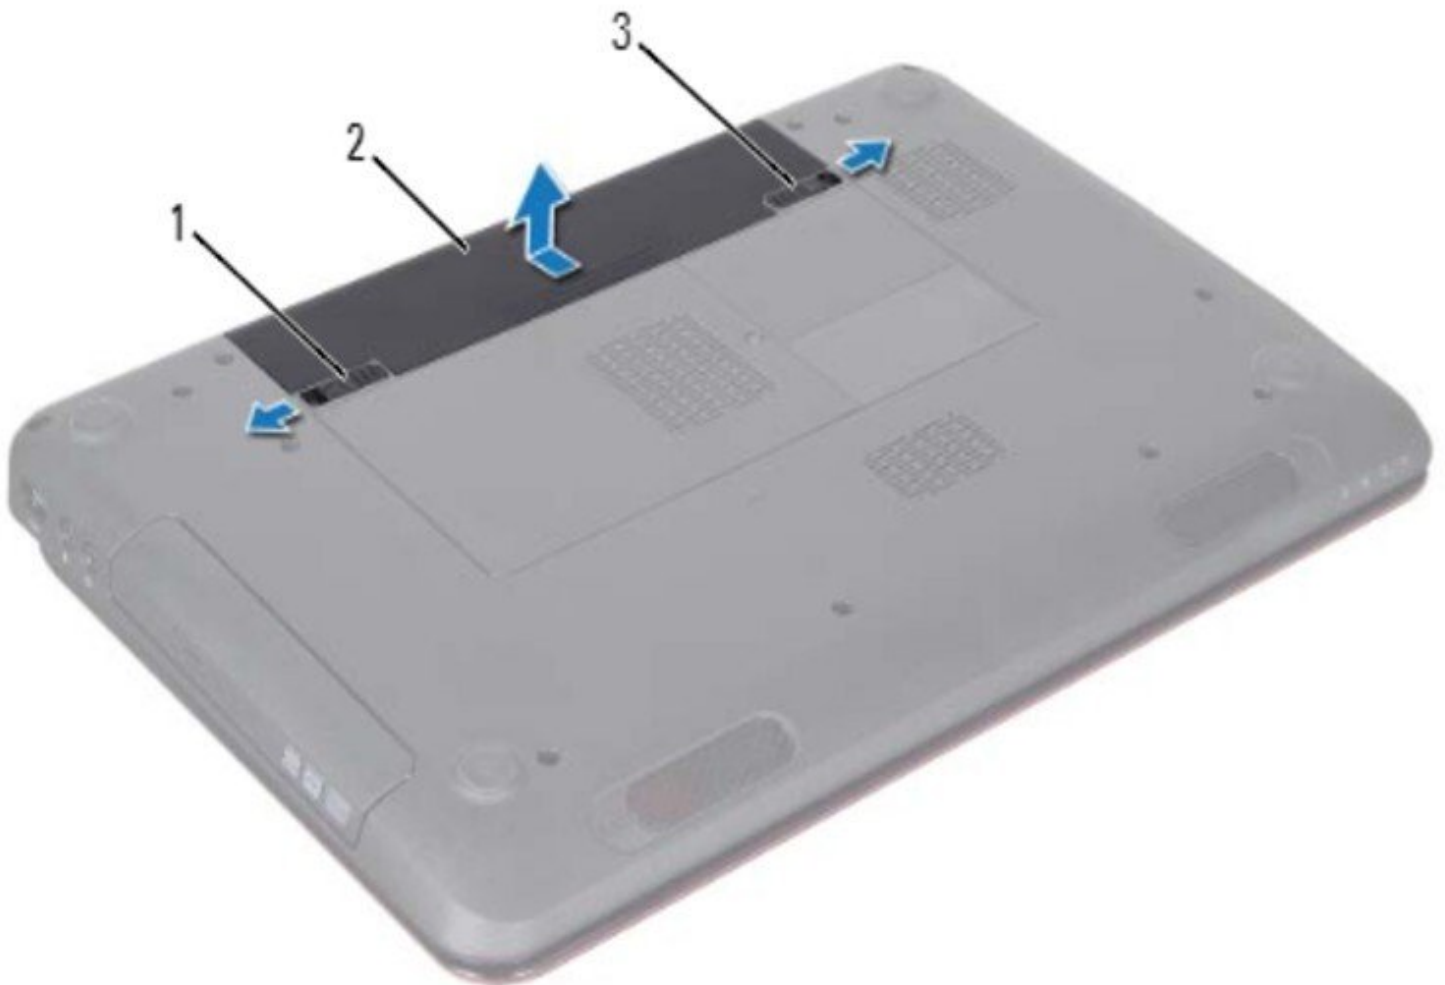

## TOOLS:


- [Phillips #0 Screwdriver](#) (1)
- [Small plastic scribe](#) (1)

## Step 1 — REMOVE BATTERY

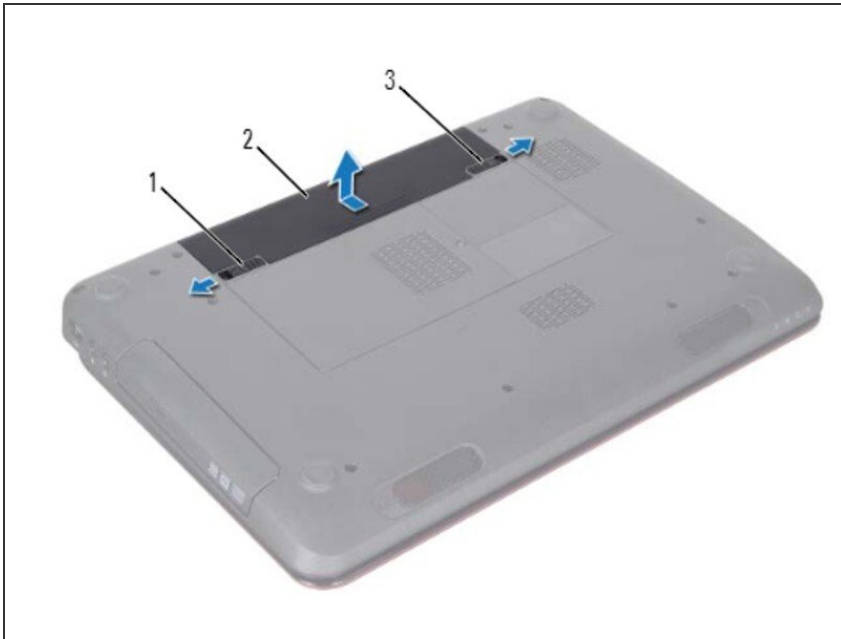


- Insert wisdom here.

## Step 2 — Removing the Module Cover

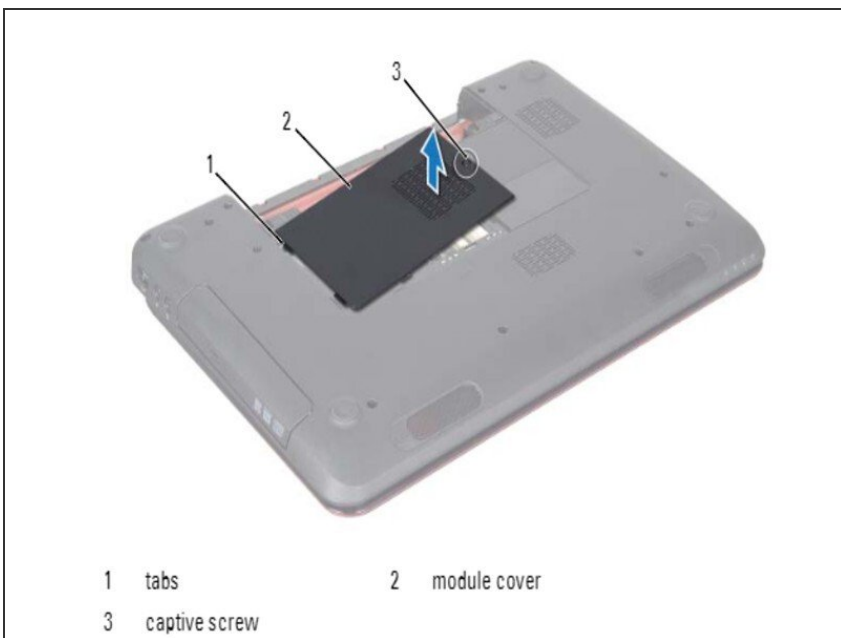

- Loosen the captive screw that secures the module cover to the base cover
- Using your fingertips, release the tabs on the module cover from the slots on the computer base
- Lift the module cover off the computer base


### Step 3 — removing memory module

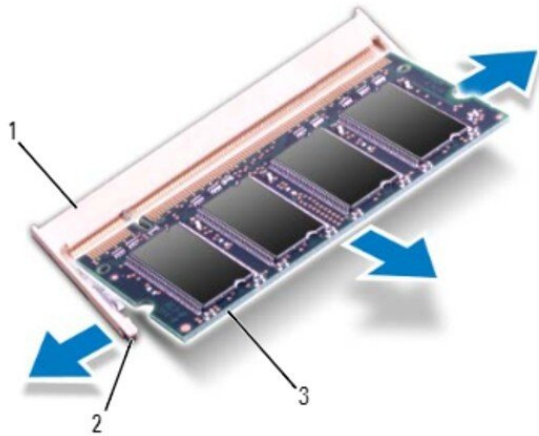

1 memory-module connector 2 securing clips (2)  
3 memory module

- Use your fingertips to carefully spread apart the securing clips on each end of the memory-module connector until the memory module pops up
- Remove the memory module from the memory-module connector.

### Step 4 — Replacing the Memory Module

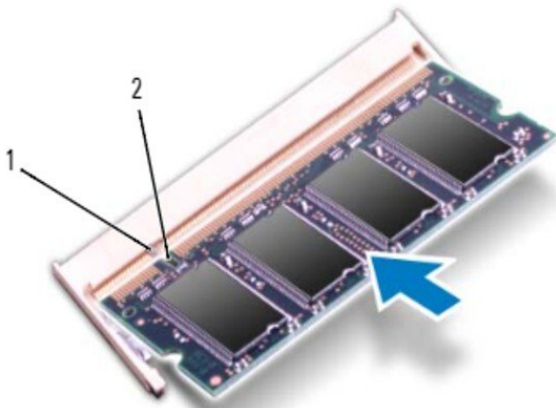

- align the notch in the memory module with the tab in the memory-module connector.
- Slide the memory module firmly into the slot at a 45-degree angle, and press the memory module down until it clicks into place. If you do not hear the click, remove the memory module and reinstall it.
- Replace the module cover
- Replace the battery

To reassemble your device, follow these instructions in reverse order.