


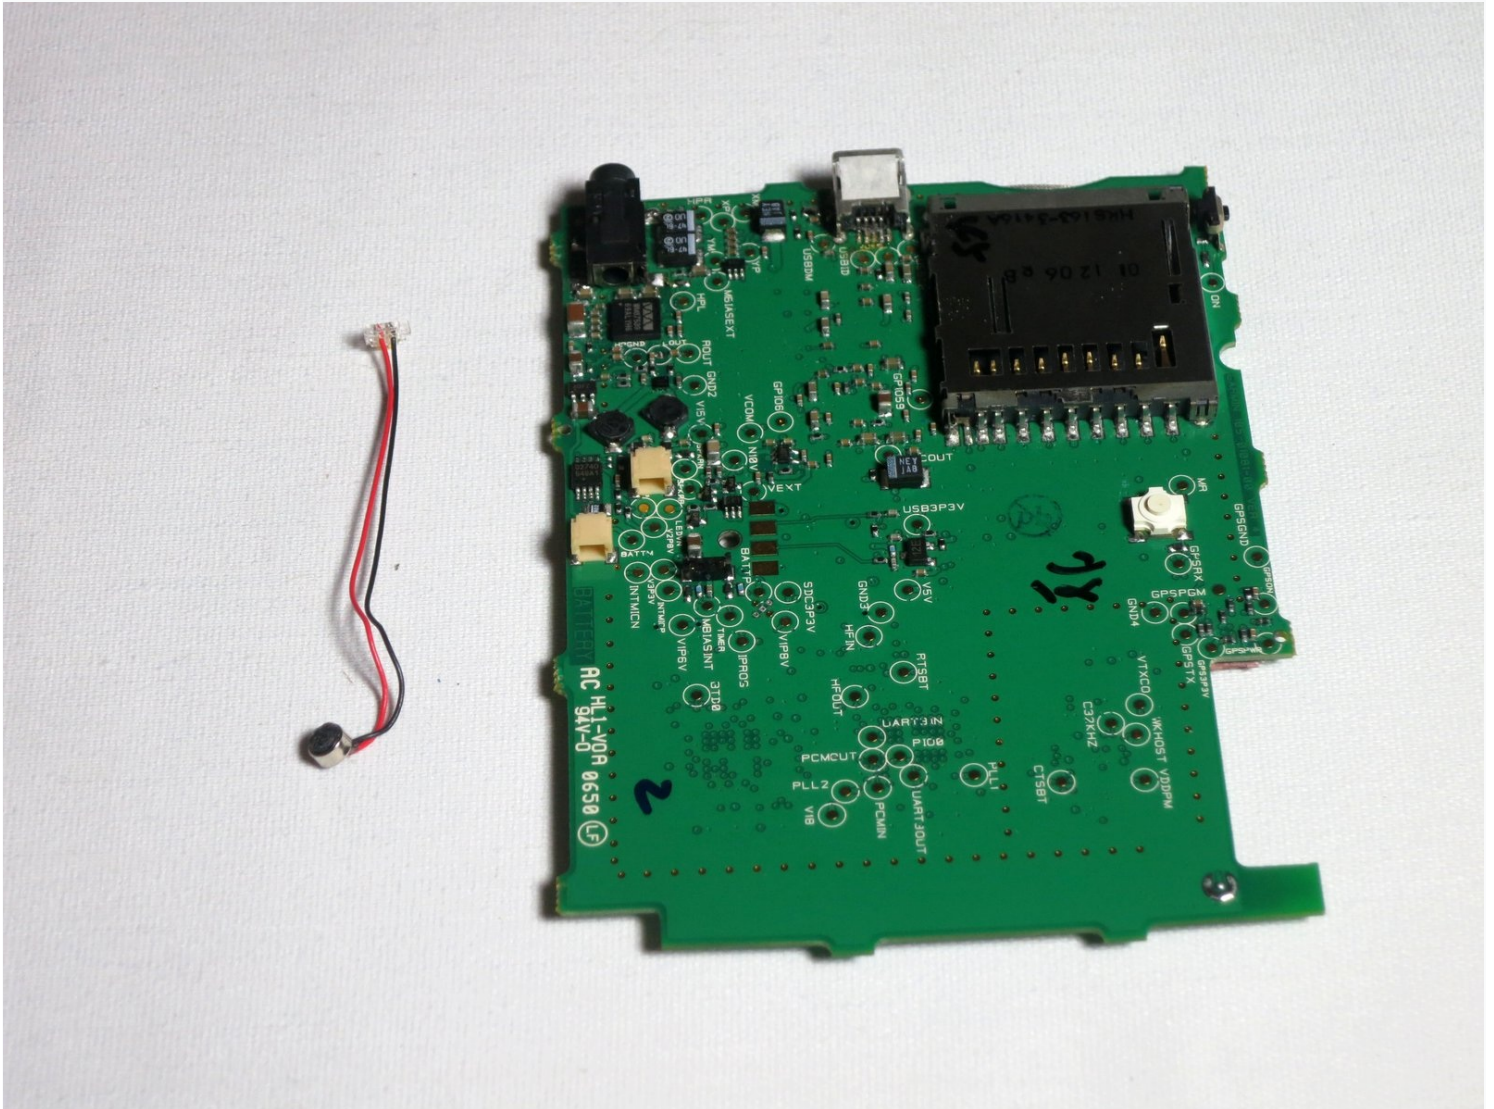

# Garmin Nuvi 370 Microphone Replacement

In this guide the repairer replaces the...

Written By: Matt West



# INTRODUCTION

In this guide the repairer replaces the microphone by disassembling the device to access the motherboard.

## Prerequisite Guide:

[Disassembling Garmin Nuvi 370 Into Core Components](#)

## Tools Used:

- Fine Point Tweezers
- Spudger

**Estimated Duration:** 10 minutes

---

### TOOLS:

[Tweezers](#) (1)

---



## Step 1 — Microphone



- After following the instructions in the [main dis-assembly guide](#), you should have the screen detached from the motherboard.



## Step 2

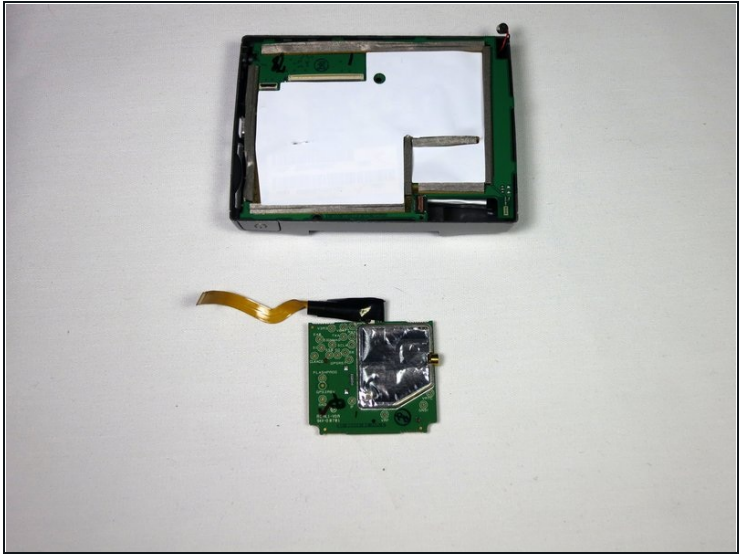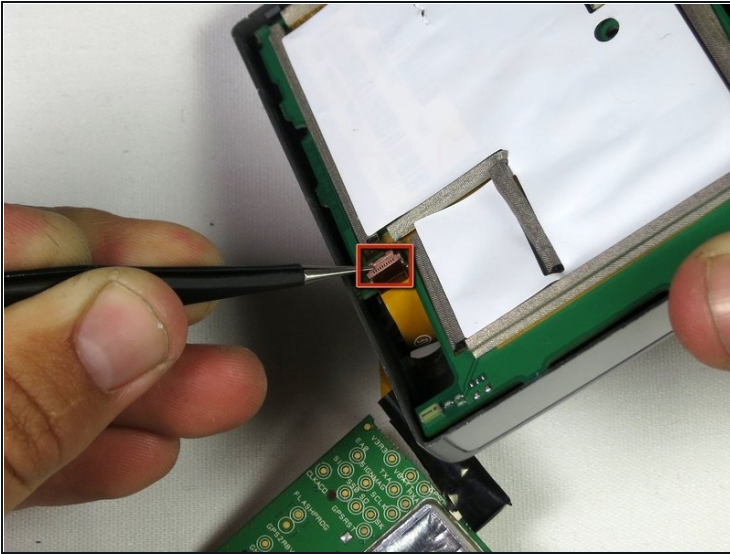

- Use the [tweezers](#) or the spudger to lift the tan latch off the ribbon cable (ZIF connector) and gently pull out the ZIF connector and cable from underneath the opened latch.

## Step 3




- The motherboard will now freely separate from the back casing; lay it flat next to the housing.

## Step 4



- Disconnect the speaker and battery from their terminals on the motherboard. This should disconnect the motherboard completely from the back panel.
- ① This step is optional but is recommended as it will create more room to work.
- ✦ It is recommended that you use tweezers or the spudger for precision.


## Step 5

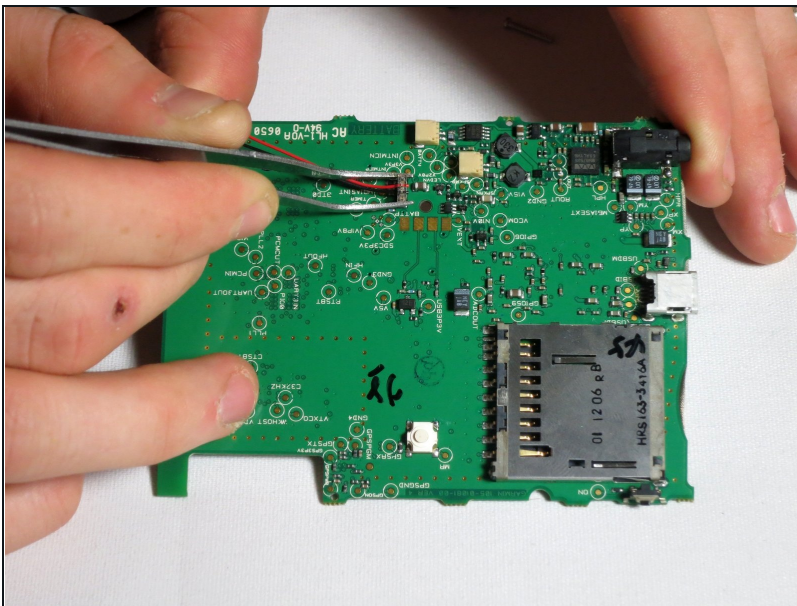

- Gently pull out the microphone wire from the terminal. Tweezers are recommended for precision.



## Step 6

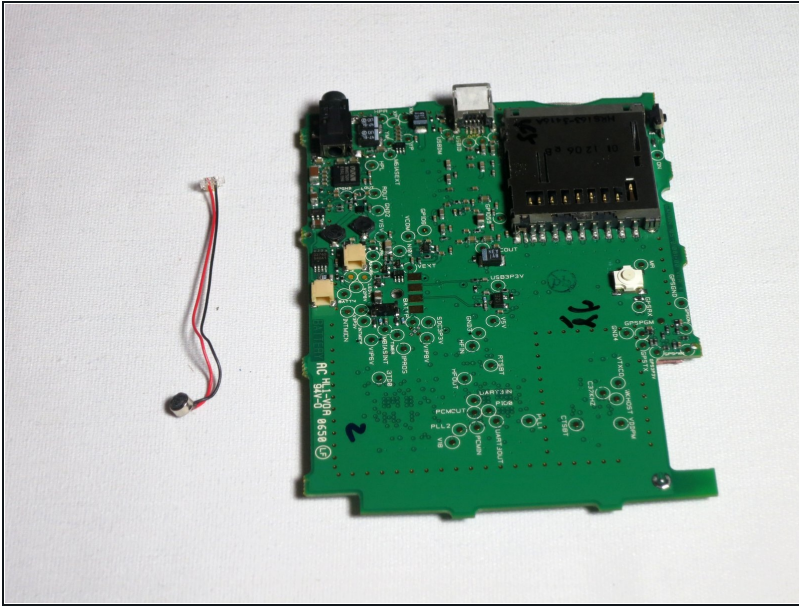

- The microphone component should now be completely separated from the motherboard.
- Plug in new, functional microphone component.