



# Nikon Coolpix S630 Battery Replacement

Written By: Edlin Garcia




## Step 1 — Battery Compartment



- The battery compartment is located on the bottom of the camera.
- Place your thumb on the battery door.
- Slide the door away from the camera in the direction the arrow points to.

## Step 2 — Battery

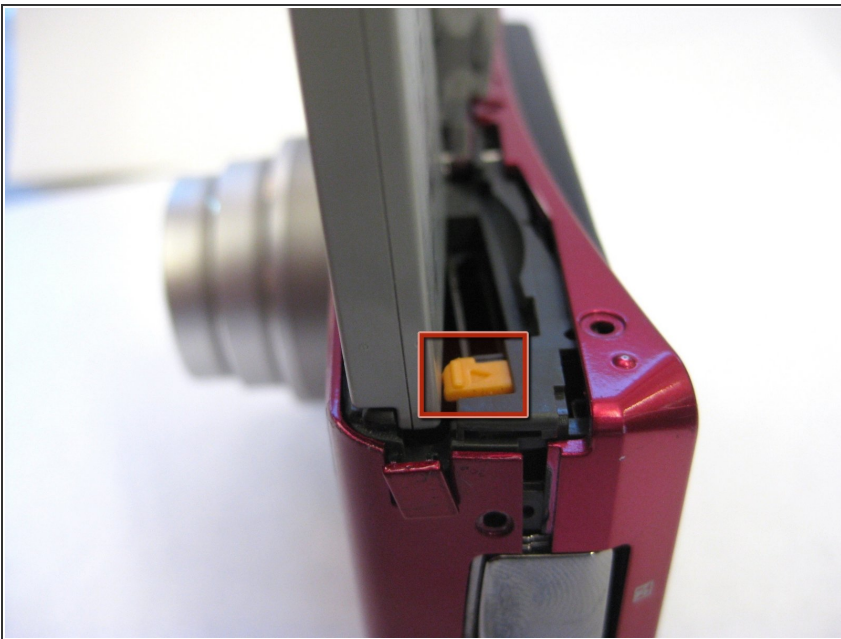

- Slide the yellow tab towards the back of the camera.
- The battery should pop out.
- Remove the battery.

To reassemble your device, follow these instructions in reverse order.