



Disassemble Proctor Silex® 2-Slice Extra Wide Slot Toaster Body

How to disassemble the entire toaster in order to reveal the internal components.

Written By: Carlos



INTRODUCTION

Disassembly

1. Flip toaster over.
2. Locate four phillips screws on the bottom of the toaster.
3. Loosen and remove.
4. Sides will pop out once screws are removed.



TOOLS:


- [Pro Tech Toolkit](#) (1)
-

Step 1 — Disassemble Proctor Silex® 2-Slice Extra Wide Slot Toaster Body



- 1. Flip toaster over.

Step 2

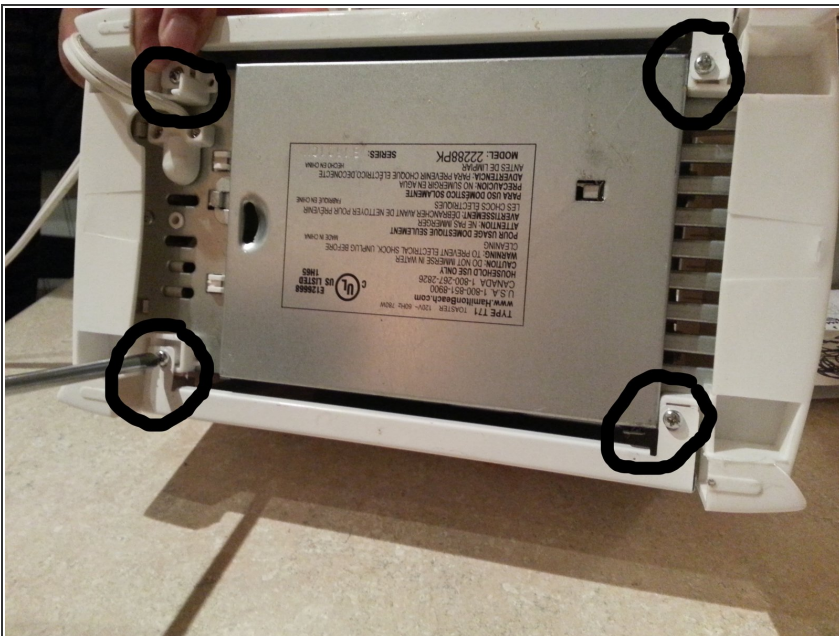

- 2. Locate four phillips screws on the bottom of the toaster.

Step 3



- **3. Loosen and remove using a Phillips head screwdriver**

Step 4



- **4.** Sides will pop out once screws are removed.

To reassemble your device, follow these instructions in reverse order.