



# Afridev Tank Replacement

If it is necessary to remove the casing to do repairs, the tank must first be removed.

Written By: Jake Devincenzi



# INTRODUCTION

Follow this guide to replace the casing of the Afridev pump, or to remove it for further repairs.

---

## TOOLS:

- [Socket Wrench](#) (1)
  - [24mm Wrench](#) (1)
  - [19 mm crescent wrench](#) (1)
  - [T-Handle](#) (1)
-



## Step 1 — Head



- Assemble the required tools, including the Afridev tool and crescent wrenches.

## Step 2



- Perform a water test on the pump, by raising and lowering the handle a full 40 strokes. A properly performing pump will yield greater than 10 liters.



## Step 3



- Loosen the bolt on front of the face plate with the Afridev tool.
- Remove the plate from the pump by lifting it straight up.

## Step 4 — Axle and Handle



- Insert the T-handle into the top cylinder of the exposed pump rod.



## Step 5



- Loosen the 2 bolts on either side of handle.

**i** It is not necessary to remove the bolt at this time; however, take caution to not let the bolt fall out of the handle.

## Step 6



- Loosen the 2 bolts on either side of the head to remove the handle from the pump rod.

**i** It is not necessary to remove the bolt at this time; however, take caution to not let the bolt fall out of the handle.



## Step 7



- Lift the handle to a horizontal position.

## Step 8



- While one person lifts up on the T-handle, remove the bolt and connection pieces.



## Step 9



- Remove the bolt and connection pieces from the handle.
- ⓘ Set the bolt pieces in a sanitary place, such as a bucket, to prevent contamination.

## Step 10



- Remove the handle from the pump.
- ⓘ Be sure to set the handle in a sanitary place to prevent contamination.



## Step 11 — Pump Rod



- Grab firmly on the T-handle and lift the pump rod straight up.
- Expose the first connection of the pump rod, and support the portion below the connection.

## Step 12



- While holding the pump rod below the first connection tightly, lower the first portion of the rod to a horizontal position.



## Step 13



- Unhook the first connection by pushing it out and down, then pulling it away from the rest of the rod.

## Step 14



- Repeat steps 11-13 for the remaining sections of pump rod.
- ⓘ Be sure to set the pump rod segments above the ground to avoid contamination.



## Step 15 — Tank



- Place one wrench on the top side of the top base of the tank spout.
- Place another wrench on the underside of the bolt in order to get more leverage.
- Pull the top wrench to the right, and the bottom wrench to the left.


## Step 16



- Remove the loosened bolt from the pump.
- Repeat this procedure for the 3 remaining bolts.



## Step 17

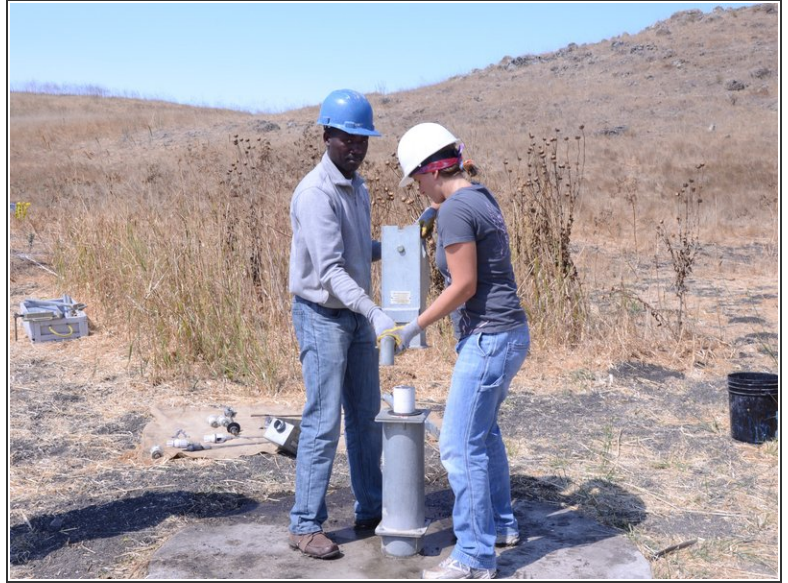

- Lift the tank straight up to remove it from the pump.
- ⓘ Be sure to place the tank in a sanitary place to prevent contamination.

To reassemble your device, follow these instructions in reverse order.