


# Samsung Galaxy Note Rear Facing Camera Replacement

Replace the rear-facing camera on your Samsung Galaxy Note.

Written By: Sam Goldheart

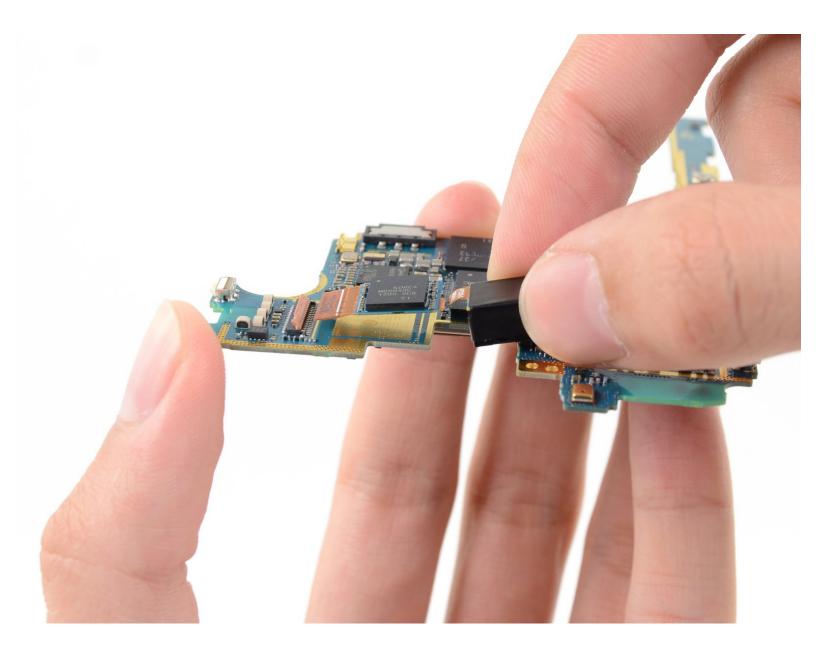

This document was generated on 2020-11-16 03:39:23 PM (MST).

# **INTRODUCTION**


Use this guide to install a new rear facing camera.



# **TOOLS:**


- iFixit Opening Tools (1)
- Spudger (1)
- Phillips #00 Screwdriver (1)

## Step 1 — Stylus

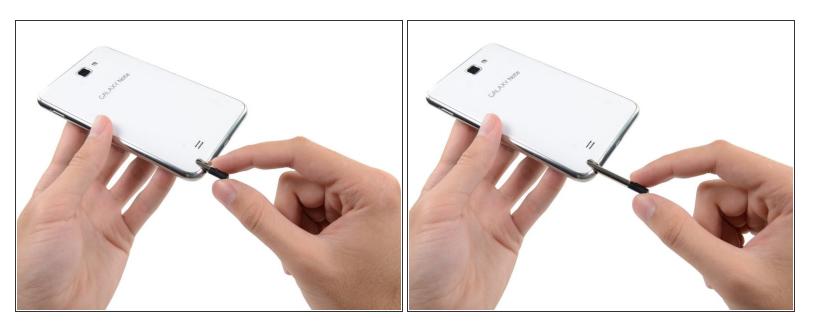

Grasp the cap of the stylus and remove it from its slot in the midframe.

#### Step 2 — Rear Case

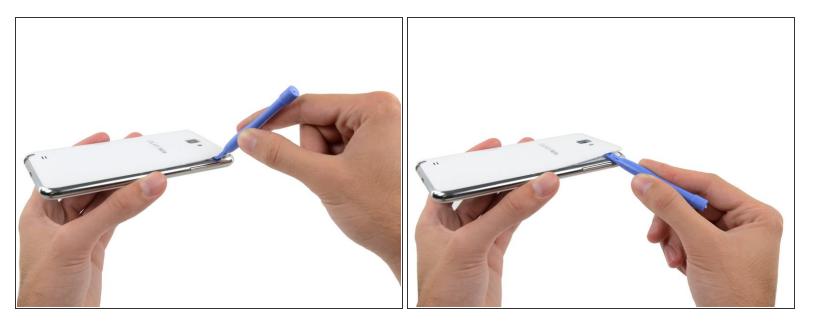

 Pry with a plastic opening tool, or your fingernail, in the divot to the right of the rear-facing camera, near the volume rocker.





Lift and remove the rear case from the phone.

## Step 4 — Battery





- Insert your finger in the notch of the battery compartment.
- Press the battery toward the rear facing camera while pulling outward.

#### Step 5 — MicroSD Card








- Use the flat end of a spudger, or your fingernail, to press the microSD card slightly deeper into its slot until you hear a click.
- After the click, release the card and it will pop out of its slot.
- For reassembly, push the microSD card into the slot until it clicks in place.

#### Step 6



 Remove the microSD card from its slot in the midframe.

#### Step 7 — SIM Card

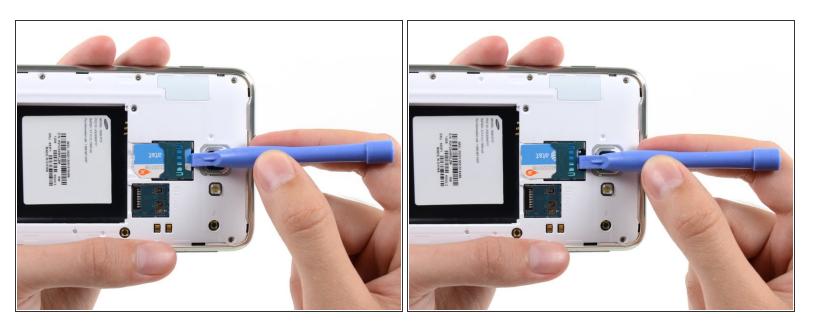

• Use a plastic opening tool, or your fingernail, to push the SIM card out of its compartment.

## Step 8




• Slide the SIM card out the rest of the way with your thumb and remove it from the device.

#### Step 9 — Midframe



 Remove the nine 3.4 mm Phillips #00 screws securing the midframe to the display assembly.

## Step 10

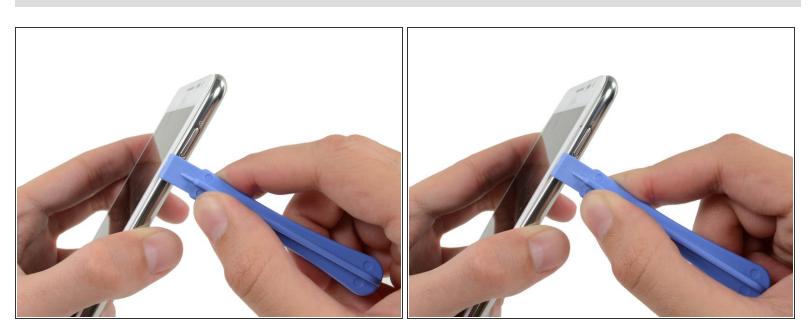

• Insert your plastic opening tool to the left of the power button between the midframe and the front panel assembly and pry.








Slide the plastic opening tool down the seam.

# Step 12

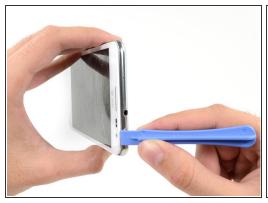






- Insert your plastic opening tool to the left of the headphone jack between the midframe and the display assembly.
- Slide the opening tool along the top edge of the phone.
- Continue to run the plastic opening tool around the perimeter of the phone until the midframe is separated.



Remove the midframe from the display assembly.

## **Step 14** — **Motherboard Assembly**

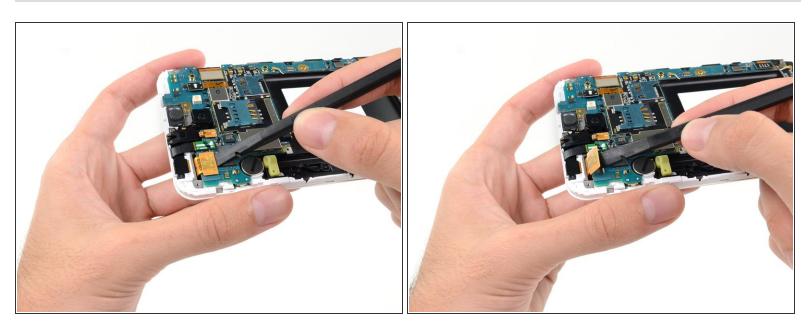

Use the flat end of a spudger to carefully disconnect the display cable connector.







- Use a spudger to disconnect the front-facing camera assembly cable connector.
- Disconnect the headphone jack/earpiece speaker assembly cable connector.
- Disconnect the digitizer cable connector.

## Step 16








- Disconnect the soft button cable connector with the flat end of a spudger.
- Use a spudger to disconnect the USB board cable connector.
- Disconnect the antenna cable connector.



 Remove the two 3.4 mm Phillips #00 screws securing the motherboard to the display assembly.


# Step 18

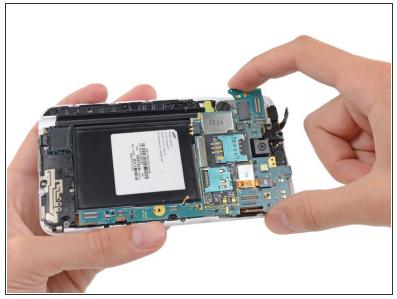




Remove the motherboard assembly from the display assembly.

### Step 19 — Rear Facing Camera

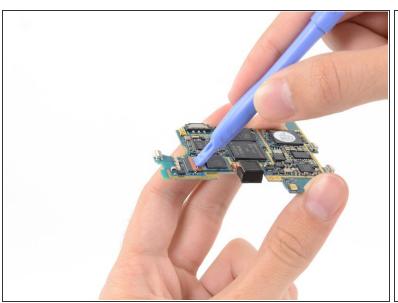


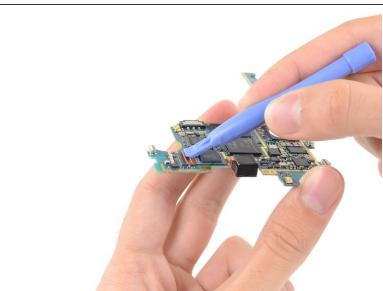

Use a plastic opening tool to flip the release tab on the rear-facing camera cable ZIF connector.


Only pry on the tab, not the connector itself.

## Step 20

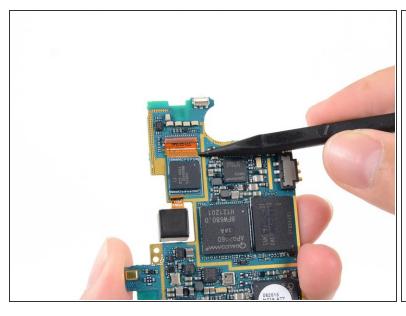



 Slide the tip of a spudger under the rear-facing camera cable to slide it out of the ZIF connector and free it from the light adhesive.

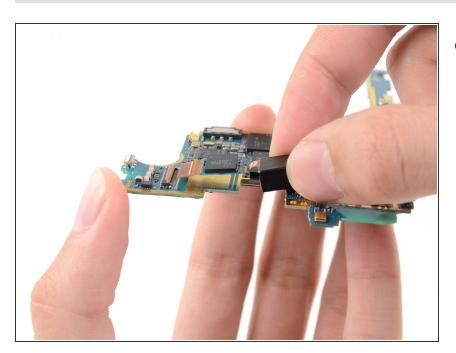

Remove the rear-facing camera.

To reassemble your device, follow these instructions in reverse order.