




Replacing Tungsten E screen. PAL5037

Written By: Kevin Hom

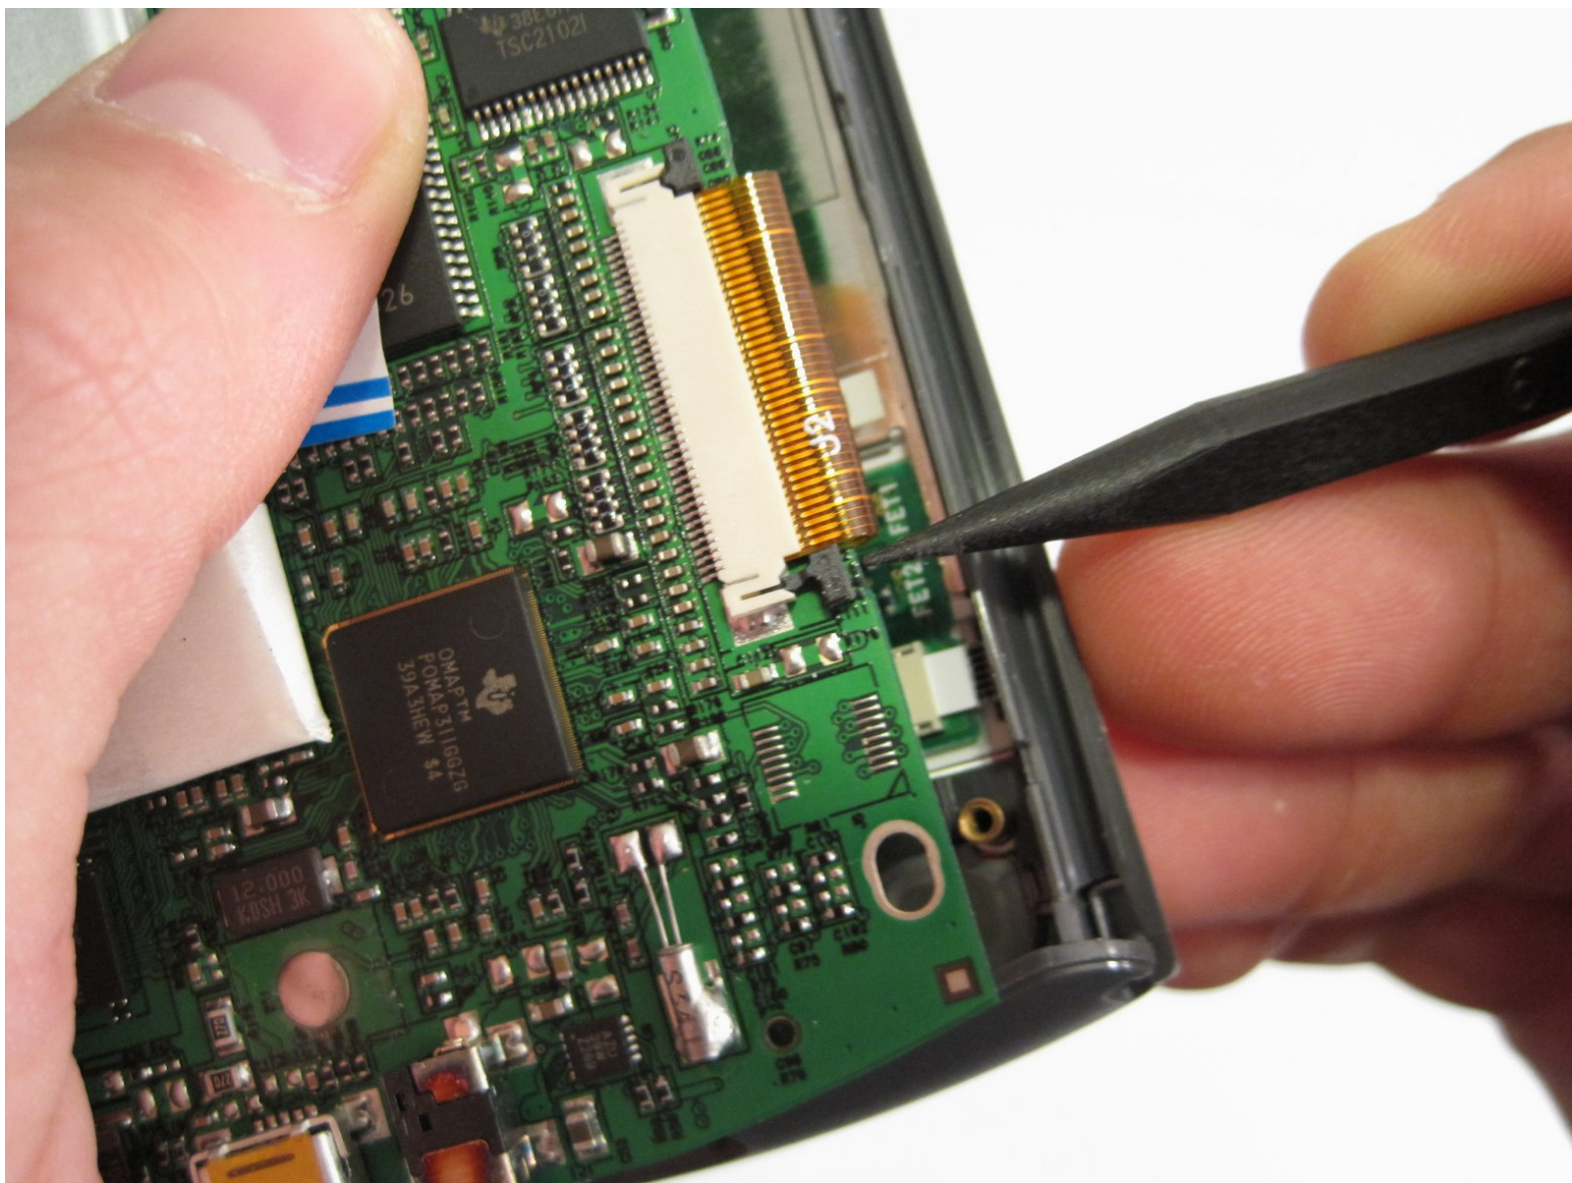

INTRODUCTION

This is a guide on how to replace the touch screen on a Palm Tungsten E.



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-

Step 1 — Tungsten E Disassembly





- Remove the stylus and SD card.
- Using a T5 torx screwdriver, remove all 4 back panel screws.
- ⓘ The screws are small and can be lost easily. Be sure to place them in a secure area.

Step 2

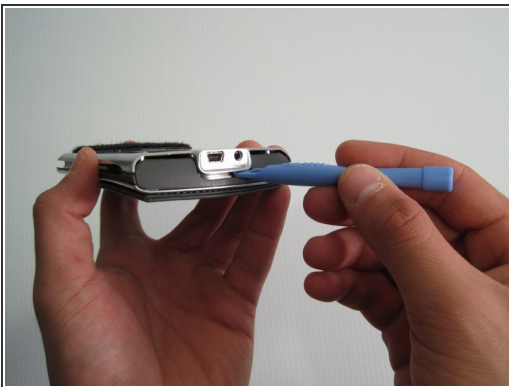

- Insert a plastic opening tool under the USB and power input slots.
- Slide the plastic opener along the seam and gently pry the cover from the PDA body to remove the cover completely.


Step 3

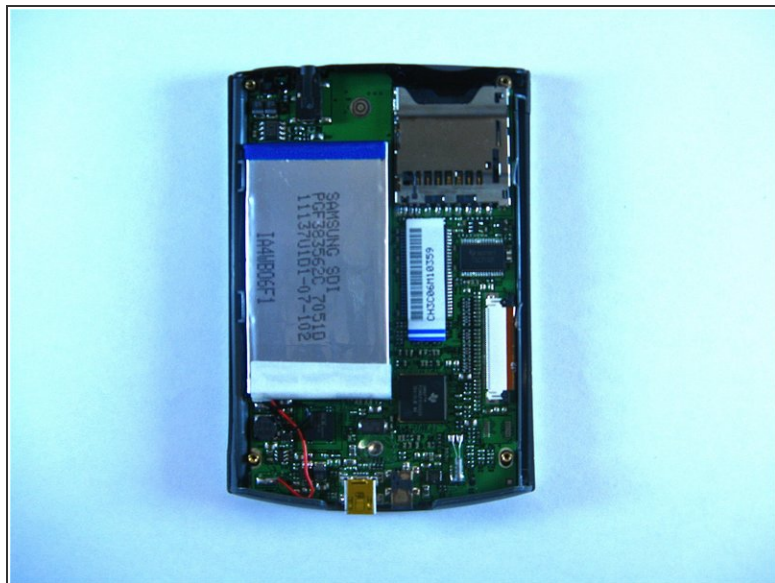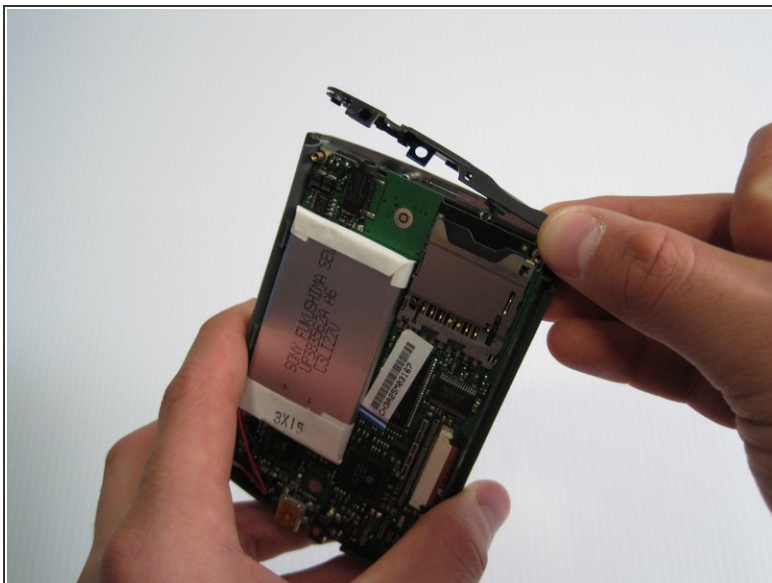


 Your device may not have a screen protector. If not, you can move on to step four.


- Remove the screen protector by lifting the hinge out of the plastic housing.
- Remove the top cover by gently pulling it away from the device with a plastic opening tool or your fingers.

Step 4

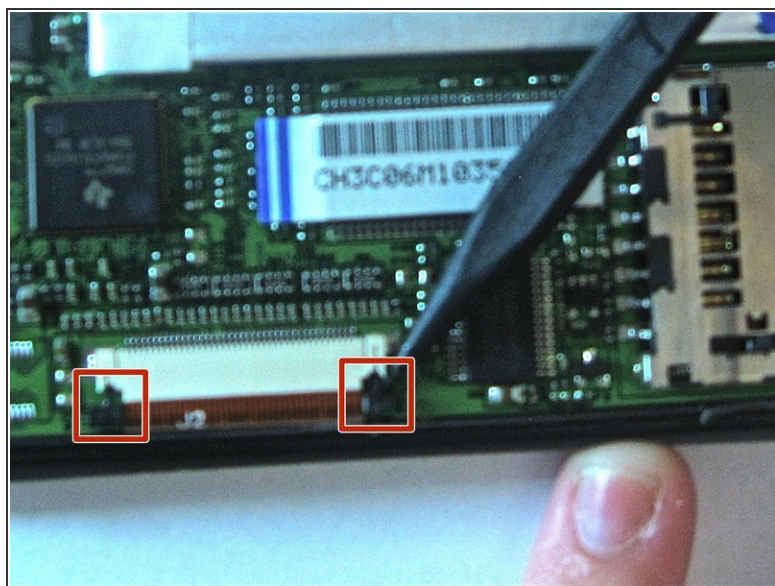

- Carefully remove motherboard from the standoffs without damaging the LCD flex connector.
 - Using a spudger, unlock both sides of the flex connector block by pushing down.
 - Remove motherboard completely.
-  Metal washers may pop out of the device during this step

Step 5

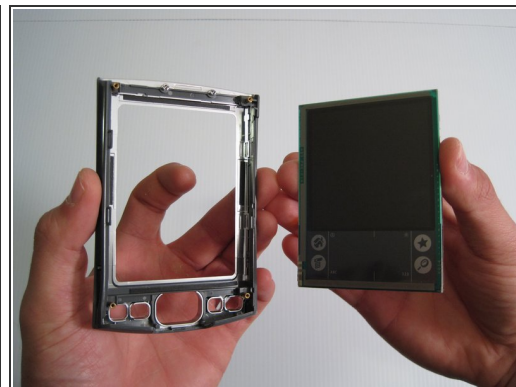


- Remove buttons using fingers.
- Gently flex frame to release screen from plastic frame.
- Lift out screen.

Step 6



- Congratulations! You have successfully taken apart a Palm Tungsten E.

Step 7 — Replacing Touch screen

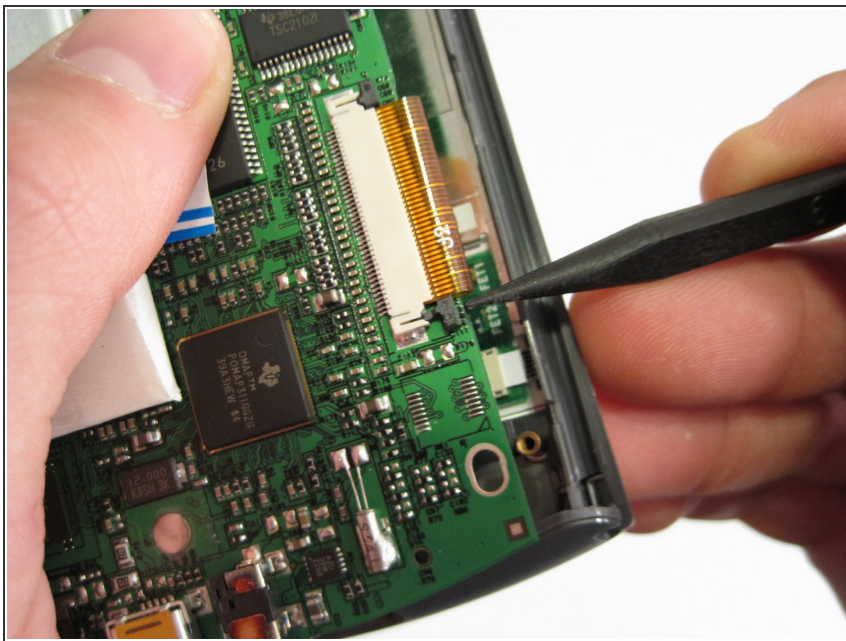

- Reassemble the device in the reverse order of the tear down using the new screen in place of the old screen.
 - To reconnect the flex connector press up on the blocks with the spudger to ensure they click into place.
- ⚠ Be careful not to damage the flex connector.

To reassemble your device, follow these instructions in reverse order.